

BAJAJ
pulsar DTS-i
220
UG, BS IV



BAJAJ
pulsar DTS-i
220
UG, BS IV

Bajaj Auto Limited
Akurdi, Pune - 411 035, India.
Tel : +91 20 27472851
Fax : +91 20 27407385
Toll Free : 1800 233 2453
Website : www.bajajauto.com
CIN L65993PN2007PLC130076

Spare Parts Catalogue



All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO. : 71112584

REV. 08, AUG 17

Copy rights : All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, Or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Bajaj Auto LTD.

Foreword



We have pleasure in presenting the Spare Parts Catalogue for 'Pulsar 220 UG + BS IV' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited
Service Department
Akurdi, Pune 411 035 India

Instructions



- 1. How to Read the Catalogue :** Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

- 2. How to Order Spare Parts :** The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

- 3. Part Number System :** We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

- 4. Abbreviations :** The following abbreviations are used in this catalogue.

Assembly	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	Accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
O/s	Over size	Fr.	Front
Rr.	Rear	Std.	Standard
L	Length	A/t.	Alternate
R.H.	Right hand	L.H.	Left hand
Hex.	Hexagonal	AR	As required

BAJAJ
pulsar *DTS-i* 220 UG, BS IV

[illegible]

BAJAJ
***Pulsar* DTS-i 220 UG, BS IV**

[illegible]

Index

Plate No.	Description	Page No.
1	Cover Cylinder Head	2
2	SAI System	4
3	Cylinder Head	6
4	Valve	8
5	Camshaft & Tensioner	10
6	Cylinder & Piston	12
7	Crankshaft	14
8	Transmission	16
9	Balancer & Balancer Idler Gear	18
10	Change Drum & Shaft Fork	20
11	Gear Change Mechanism	22
12	Engine Assembly & Crankcase RH	24
13	Crankcase LH	26
14	Cover RH	28
15	Cover Magneto	30
16	Clutch Assembly	32
17	Oil Pump	34
18	Oil Cooler Assembly	36
19	Carburetor Assembly	38
20	Silencer Assembly	40
21	Air Cleaner Comp.	42
22	EVAP Mechanism	44
23	Magneto, CDI & H. T. Coil	46
24	Starter Assembly	48
25	Frame & Frame fittings	50
26	Engine Mountings	52
27	Swing Arm / Rear Shock Absorber	54
28	Rider & Pillion Foot rest	56
29	Mudguard Front & Rear	58
30	Center & Side Stand Assembly	60
31	Tyre / Tube / Rim	62

Index

Plate No.	Description	Page No.
32	Front Wheel Assembly	64
33	Front Master Cylinder Assembly	66
34	Front Disc Brake	68
35	Rear Wheel Assembly	70
36	Rear Disc Brake	72
37	Rear Disc Brake - Master Cylinder & Caliper	74
38	Rear Brake Pedal	76
39	Handle Bar Assembly	78
40	Front Fork Assembly	80
41	Fittings Petrol Tank Spoiler, Side Cover & Cover Seat	82
42	Cap Tank & Gauge Fuel	84
43	Seat Assembly & Seat Lock	86
44	Speedometer Assembly	88
45	Cables	90
46	Chain Case	92
47	Head Lamp Assembly	94
48	Indicator Light Assembly	96
49	Fairing & Mounting	98
50	Tail Lamp Assembly & Front / Rear Number Plate	100
51	Electrical Equipments	102
52	Leg Guards, Saree Guard & Grab Handle	104
53	Tool Kit	106
54	Painted Parts & Decals	108 - 110
55	Consumable Parts	113 - 116
	Kits List	117 - 120
	Amendment Sheet (Parts Added)	121
	Amendment Sheet (Parts Deleted)	122
	Part Index	123 - 134

Pictorial Index

PLATE NO. : 1 COVER CYLINDER HEAD	PAGE NO. 1
--------------------------------------	---------------

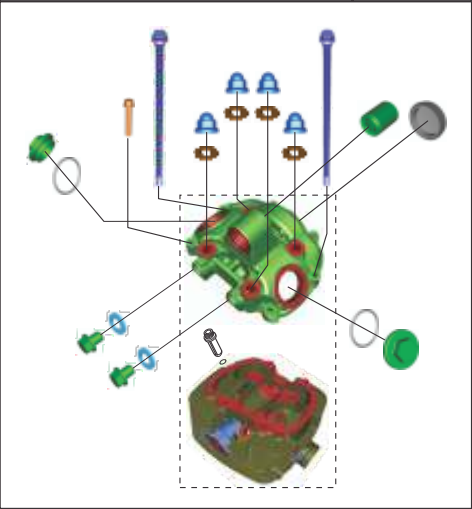


PLATE NO. : 2 SAI SYSTEM	PAGE NO. 3
-----------------------------	---------------

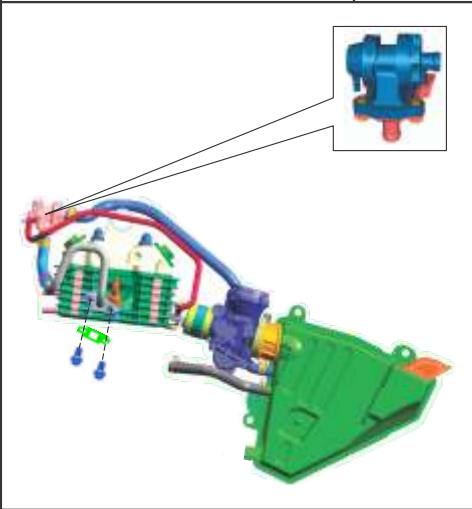


PLATE NO. : 3 CYLINDER HEAD	PAGE NO. 5
--------------------------------	---------------


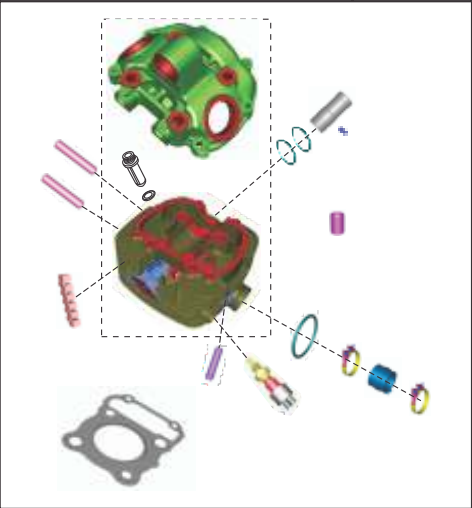


PLATE NO. : 4 VALVE	PAGE NO. 7
------------------------	---------------

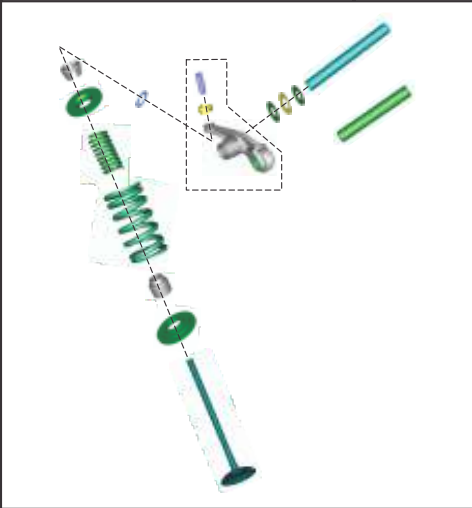

Pictorial Index

PLATE NO. : 5 CAMSHAFT TENSIONER	PAGE NO. 9
-------------------------------------	---------------

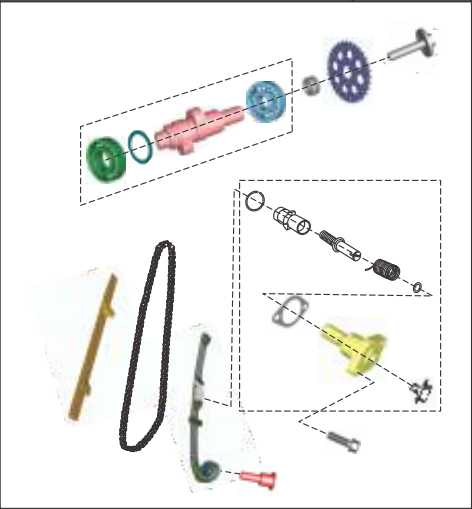


PLATE NO. : 6 CYLINDER & PISTON	PAGE NO. 11
------------------------------------	----------------

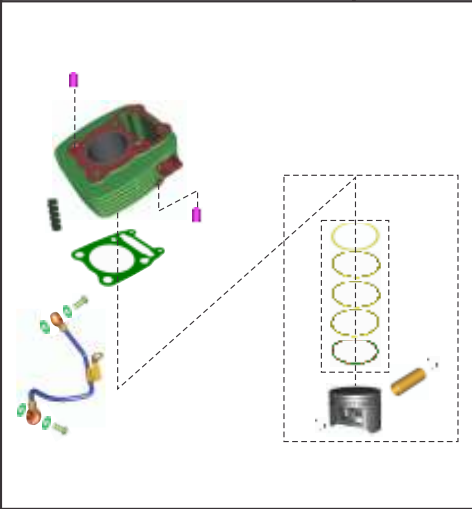


PLATE NO. : 7 CRANKSHAFT	PAGE NO. 13
-----------------------------	----------------


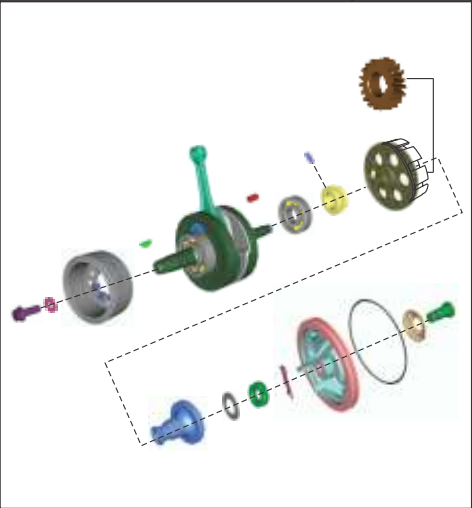


PLATE NO. : 8 TRANSMISSION	PAGE NO. 15
-------------------------------	----------------

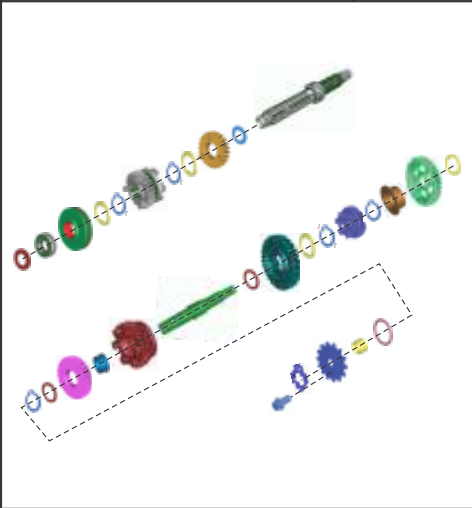

Pictorial Index

PLATE NO. : 9 BALANCER & BALANCER IDLER GEAR	PAGE NO. 17
---	----------------

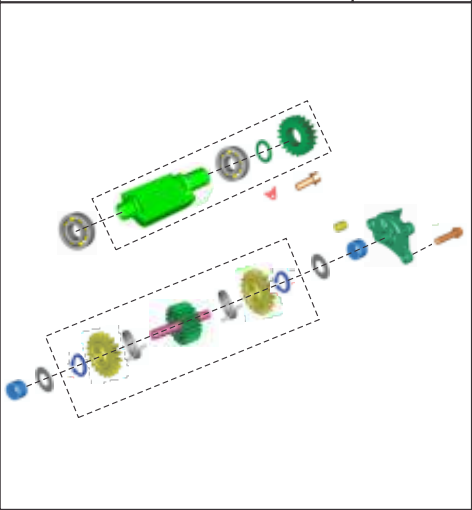


PLATE NO. : 10 CHANGE DRUM & SHAFT FORK	PAGE NO. 19
--	----------------


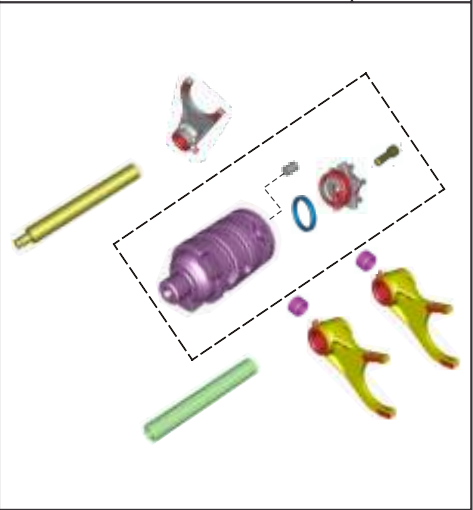


PLATE NO. : 11 GEAR CHANGE MECANISM	PAGE NO. 21
--	----------------

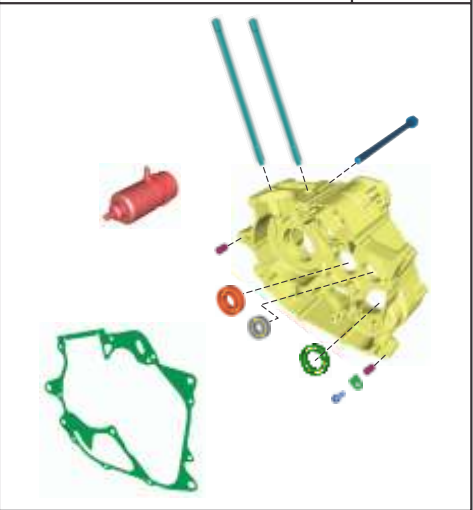

PLATE NO. : 12 ENGINE ASSEMBLY & CRANKCASE RH	PAGE NO. 23
--	----------------



Pictorial Index

PLATE NO. : 13 CRANKCASE LH	PAGE NO. 25
--------------------------------	----------------

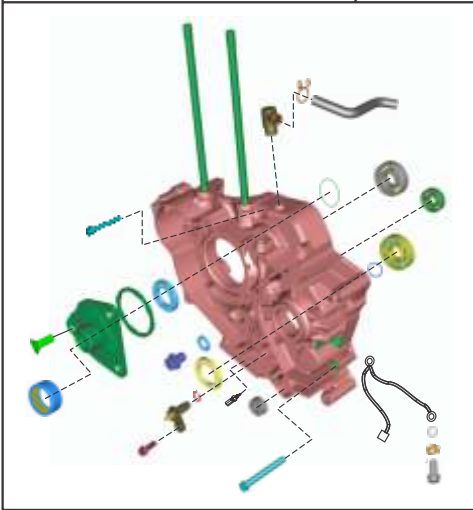


PLATE NO. : 14 COVER RH	PAGE NO. 27
----------------------------	----------------

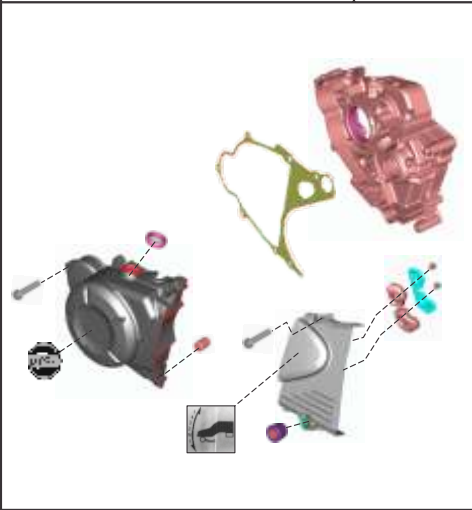


PLATE NO. : 15 COVER MAGNETO	PAGE NO. 29
---------------------------------	----------------


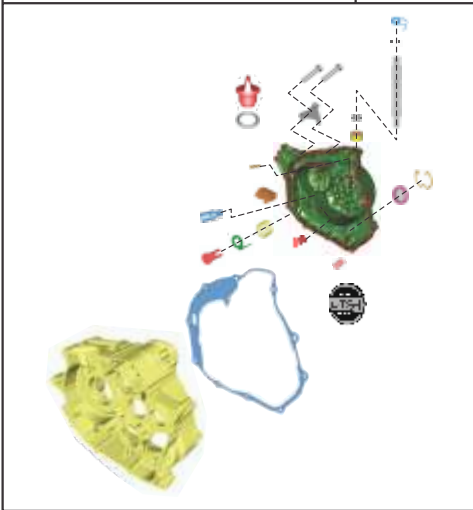


PLATE NO. : 16 CLUTCH ASSEMBLY	PAGE NO. 31
-----------------------------------	----------------

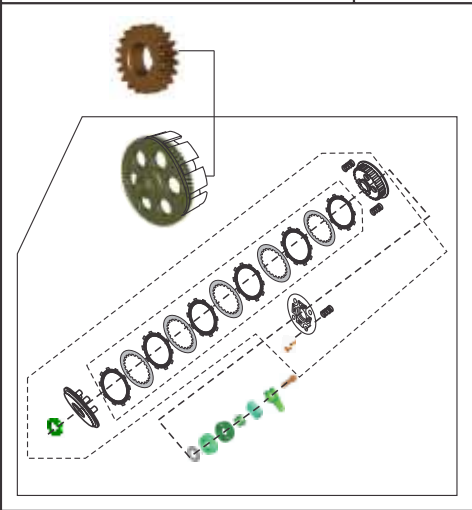

Pictorial Index

PLATE NO. : 17 OIL PUMP ASSEMBLY	PAGE NO. 33
-------------------------------------	----------------



PLATE NO. : 18 OIL COOLER ASSEMBLY	PAGE NO. 35
---------------------------------------	----------------

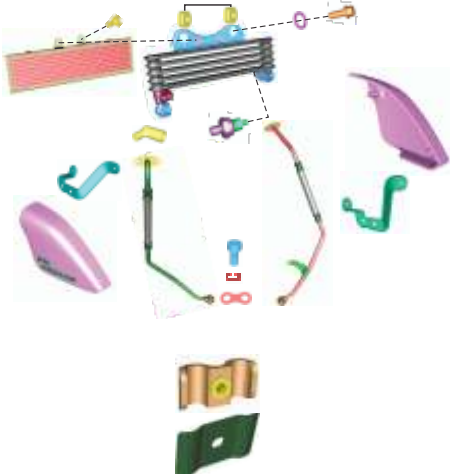


PLATE NO. : 19 CARBURETOR ASSEMBLY	PAGE NO. 37
---------------------------------------	----------------


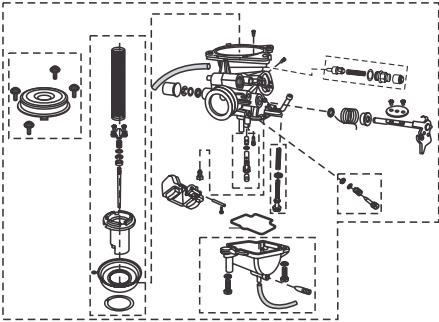


PLATE NO. : 20 SILENCER ASSEMBLY	PAGE NO. 39
-------------------------------------	----------------

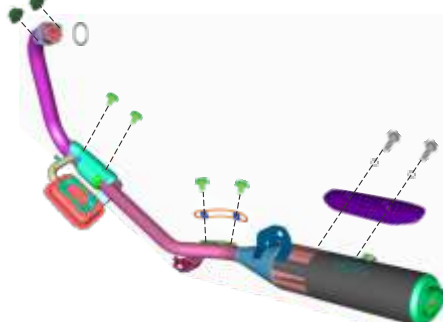

Pictorial Index

PLATE NO. : 21 AIR CLEANER COMPLETE	PAGE NO. 41
--	----------------

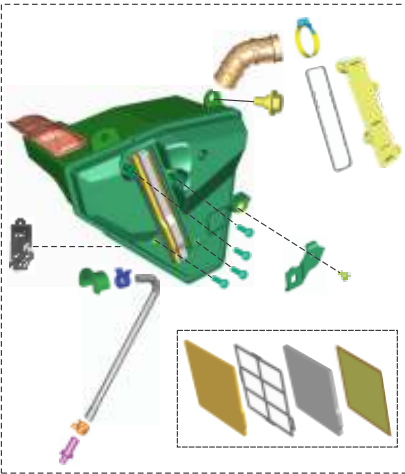


PLATE NO. : 22 EVAP MECHANISM	PAGE NO. 43
----------------------------------	----------------


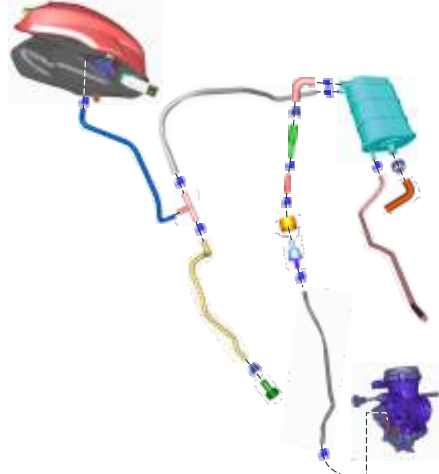


PLATE NO. : 23 MAGNETO, CDI & H. T. COIL	PAGE NO. 45
---	----------------

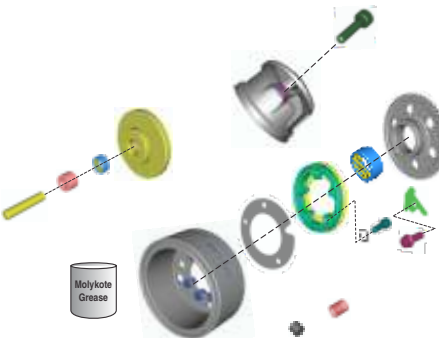

PLATE NO. : 24 STARTER ASSEMBLY	PAGE NO. 47
------------------------------------	----------------



Pictorial Index

PLATE NO. : 25
FRAME & FRAME FITTINGS

PAGE NO.
49

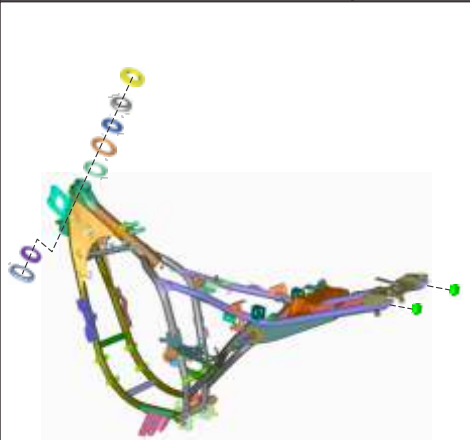


PLATE NO. : 26
ENGINE MOUNTINGS

PAGE NO.
51

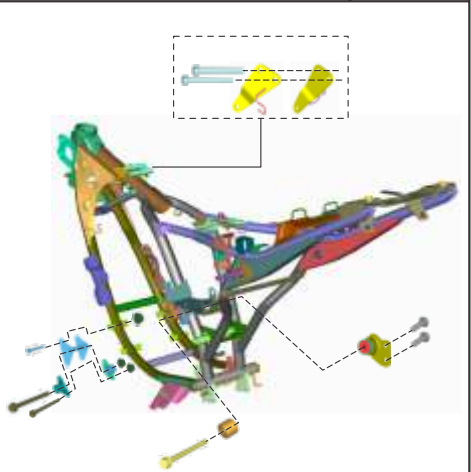


PLATE NO. : 27
SWING ARM / REAR SHOCK ABSORBER

PAGE NO.
53


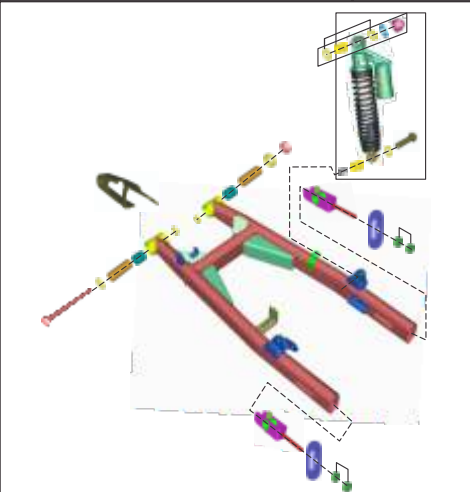


PLATE NO. : 28
RIDER & PILLION FOOT REST

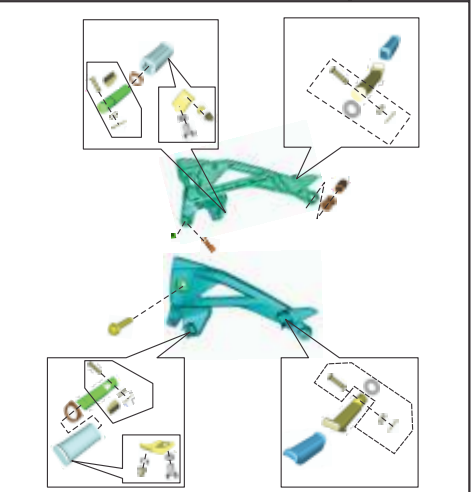PAGE NO.
55



Pictorial Index

PLATE NO. : 29
MUDGUARD FRONT & REAR

PAGE NO.
57

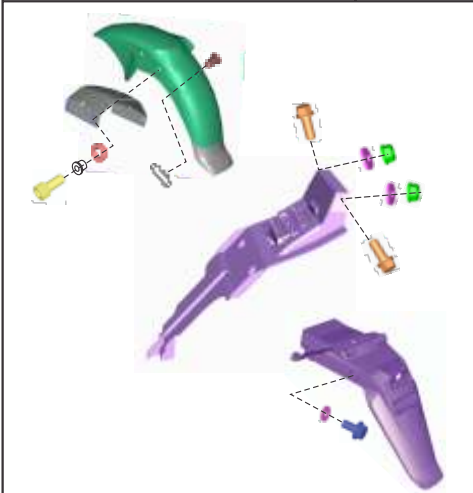


PLATE NO. : 30
CENTER & SIDE STAND ASSEMBLY

PAGE NO.
59




PLATE NO. : 31
TYRE / TUBE / RIM

PAGE NO.
61



PLATE NO. : 32
FRONT WHEEL ASSEMBLY

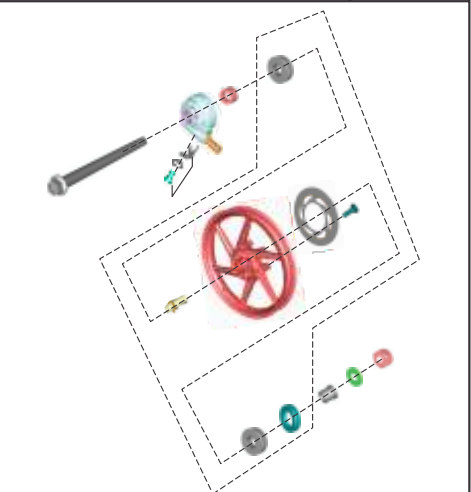PAGE NO.
63



Pictorial Index

PLATE NO. : 33 FRONT MASTER CYLINDER ASSEMBLY	PAGE NO. 65
--	----------------


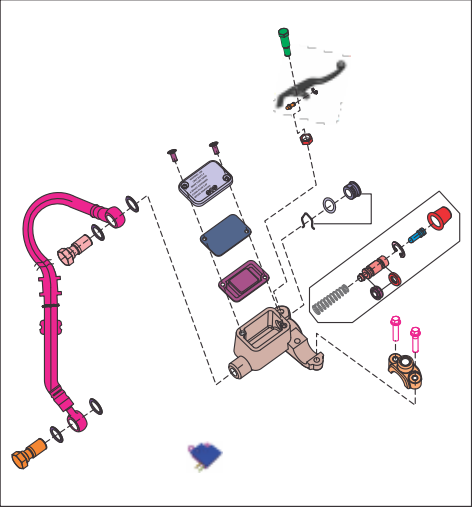


PLATE NO. : 34 FRONT DISC BRAKE	PAGE NO. 67
------------------------------------	----------------

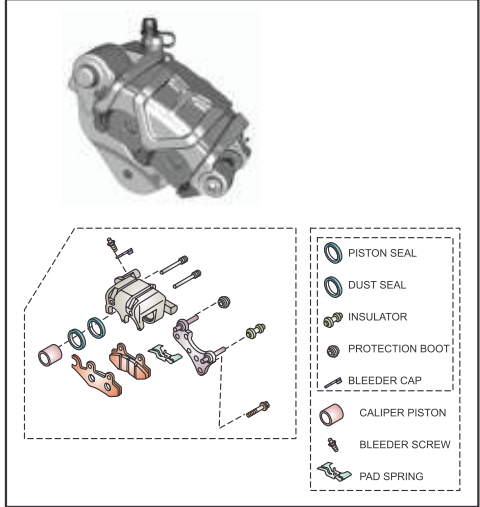

- PISTON SEAL
- DUST SEAL
- INSULATOR
- PROTECTION BOOT
- BLEEDER CAP
- CALIPER PISTON
- BLEEDER SCREW
- PAD SPRING

PLATE NO. : 35 REAR WHEEL ASSEMBLY	PAGE NO. 69
---------------------------------------	----------------


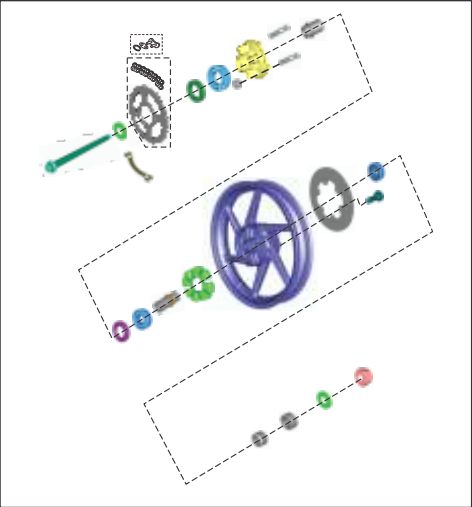


PLATE NO. : 36 REAR DISC BRAKE	PAGE NO. 71
-----------------------------------	----------------

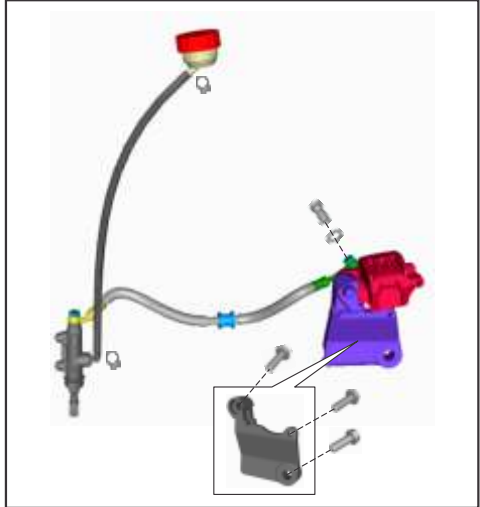

Pictorial Index

PLATE NO. : 37 REAR DISC BRAKE - MASTER CYLINDER & CALIPER	PAGE NO. 73
--	----------------

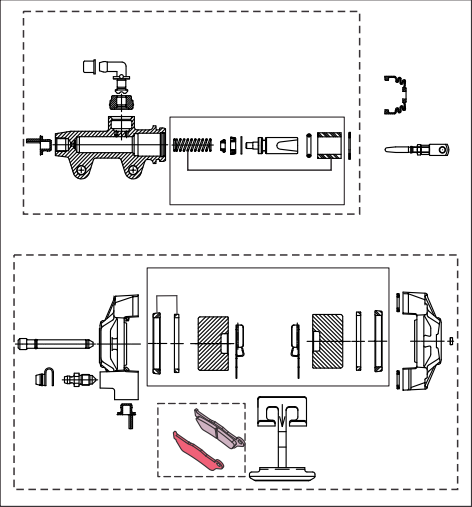


PLATE NO. : 38 REAR BRAKE PEDAL	PAGE NO. 75
------------------------------------	----------------

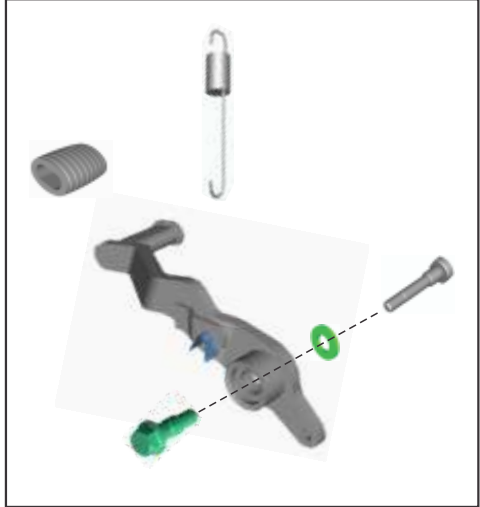


PLATE NO. : 39 HANDLE BAR ASSEMBLY	PAGE NO. 77
---------------------------------------	----------------


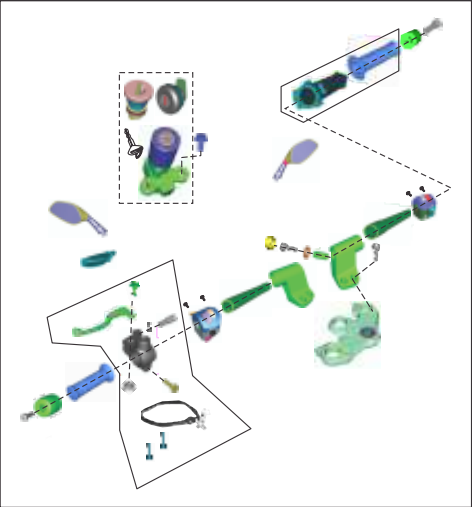


PLATE NO. : 40 FRONT FORK ASSEMBLY	PAGE NO. 79
---------------------------------------	----------------

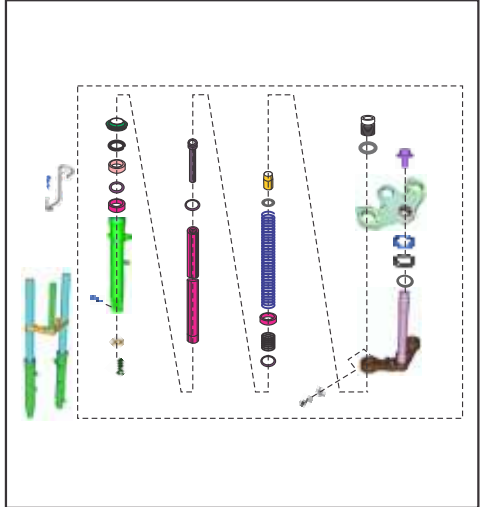

Pictorial Index

PLATE NO. : 41 FITTINGS PETROL TANK SPOILER, SIDE COVER & COVER SEAT	PAGE NO. 81
--	----------------

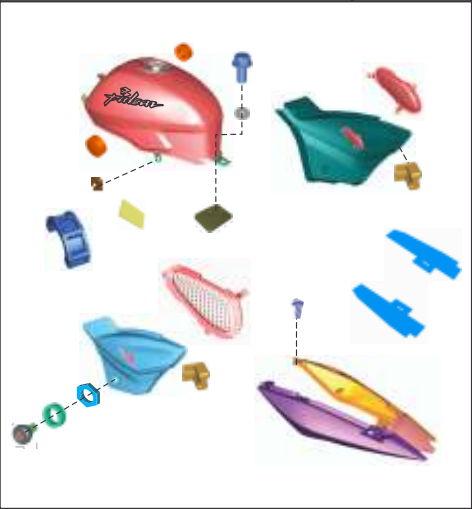


PLATE NO. : 42 CAP TANK & GAUGE FUEL	PAGE NO. 83
---	----------------

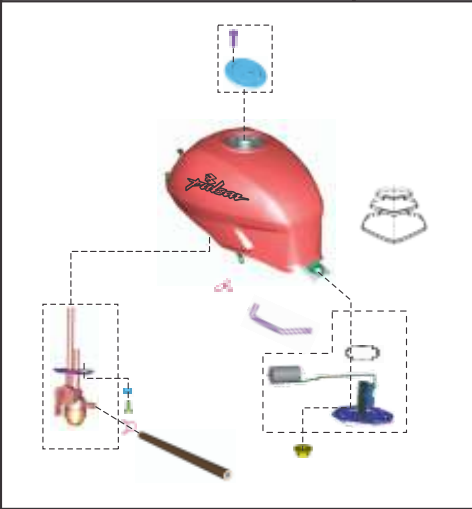


PLATE NO. : 43 SEAT ASSEMBLY & SEAT LOCK	PAGE NO. 85
---	----------------


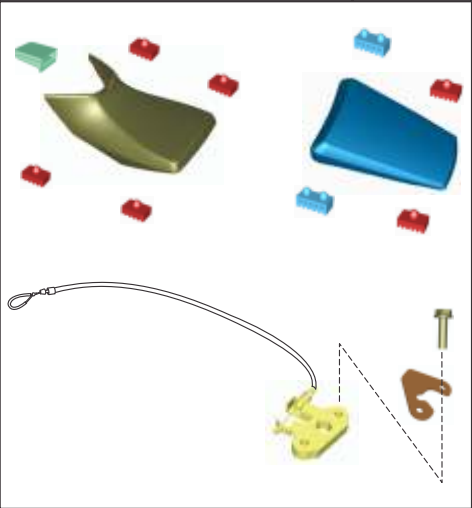


PLATE NO. : 44 SPEEDOMETER ASSEMBLY	PAGE NO. 87
--	----------------

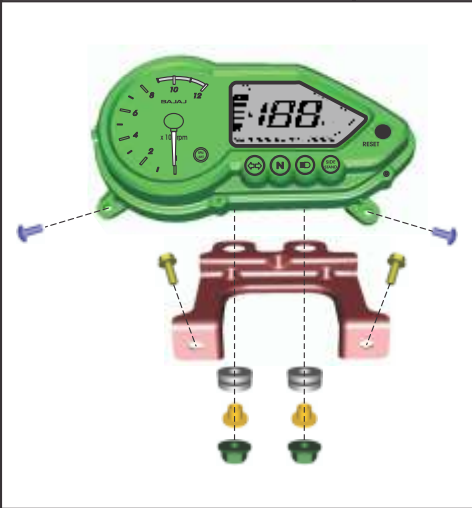

Pictorial Index

PLATE NO. : 45 CABLES	PAGE NO. 89
--------------------------	----------------



PLATE NO. : 46 CHAIN CASE	PAGE NO. 91
------------------------------	----------------

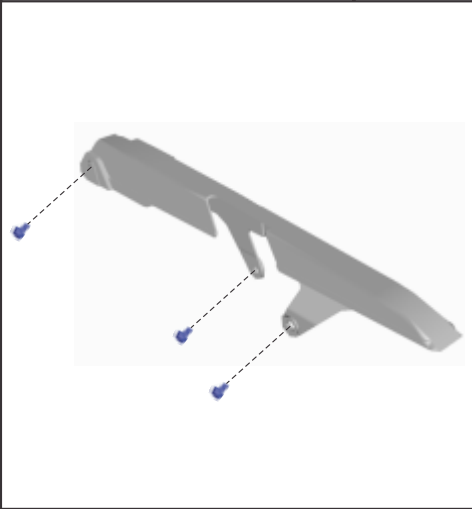


PLATE NO. : 47 HEAD LAMP ASSEMBLY	PAGE NO. 93
--------------------------------------	----------------


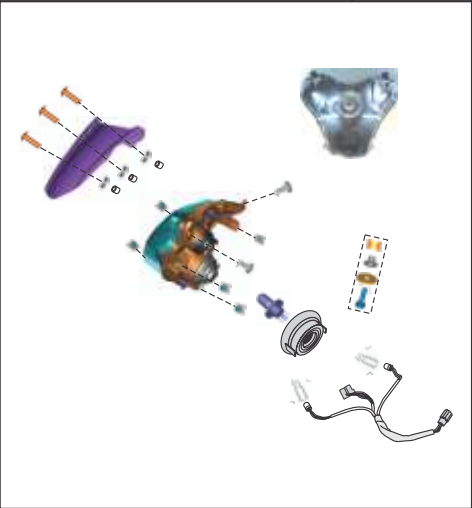


PLATE NO. : 48 INDICATOR LIGHT ASSEMBLY	PAGE NO. 95
--	----------------

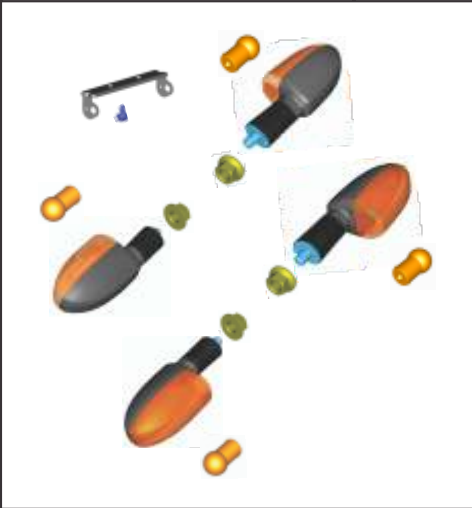

Pictorial Index

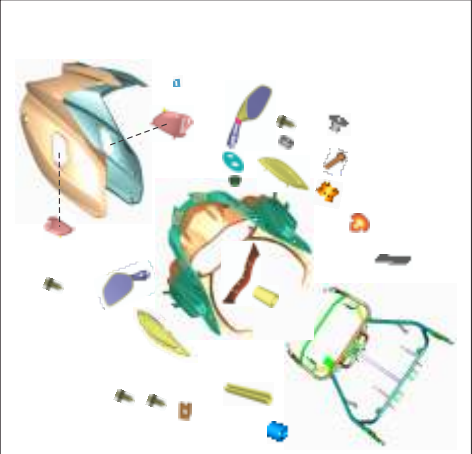
PLATE NO. : 49 FAIRING & MOUNTING	PAGE NO. 97
	

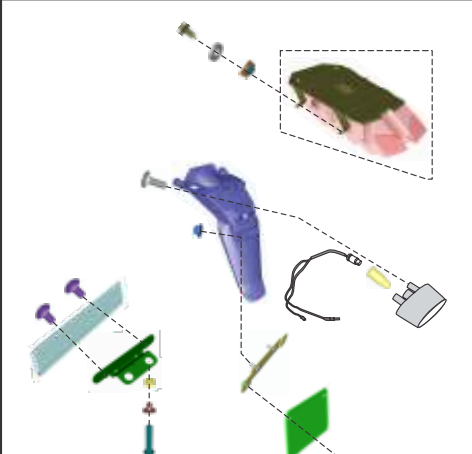
PLATE NO. : 50 TAIL LAMP ASSEMBLY & FRONT / REAR NUMBER PLATE	PAGE NO. 99
	

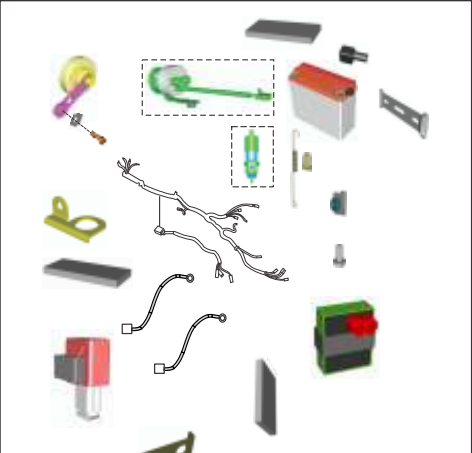
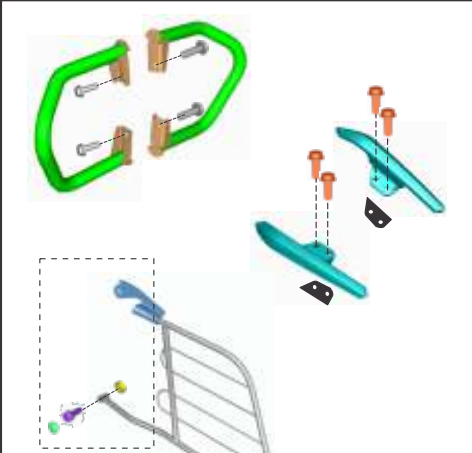
PLATE NO. : 51 ELECTRICAL EQUIPMENTS	PAGE NO. 101
	


PLATE NO. : 52 LEG GUARDS, SAREE GUARD & GRAB HANDLE	PAGE NO. 103
	

Pictorial Index


PLATE NO. : 53 TOOL KIT	PAGE NO. 105
	

PLATE NO. : 54 PAINTED PARTS & DECALS	PAGE NO. 107 - 111
	


PLATE NO. : 55 CONSUMABLE PARTS	PAGE NO. 113
	

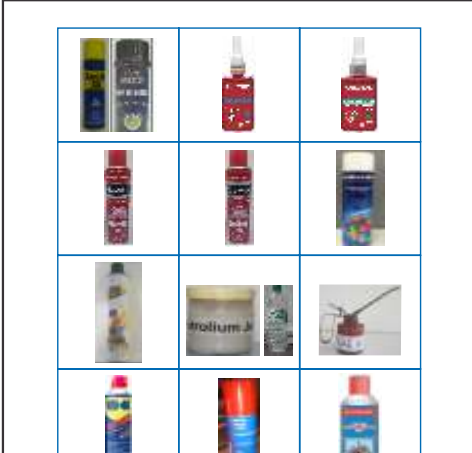PLATE NO. : 55 CONSUMABLE PARTS	PAGE NO. 115
	

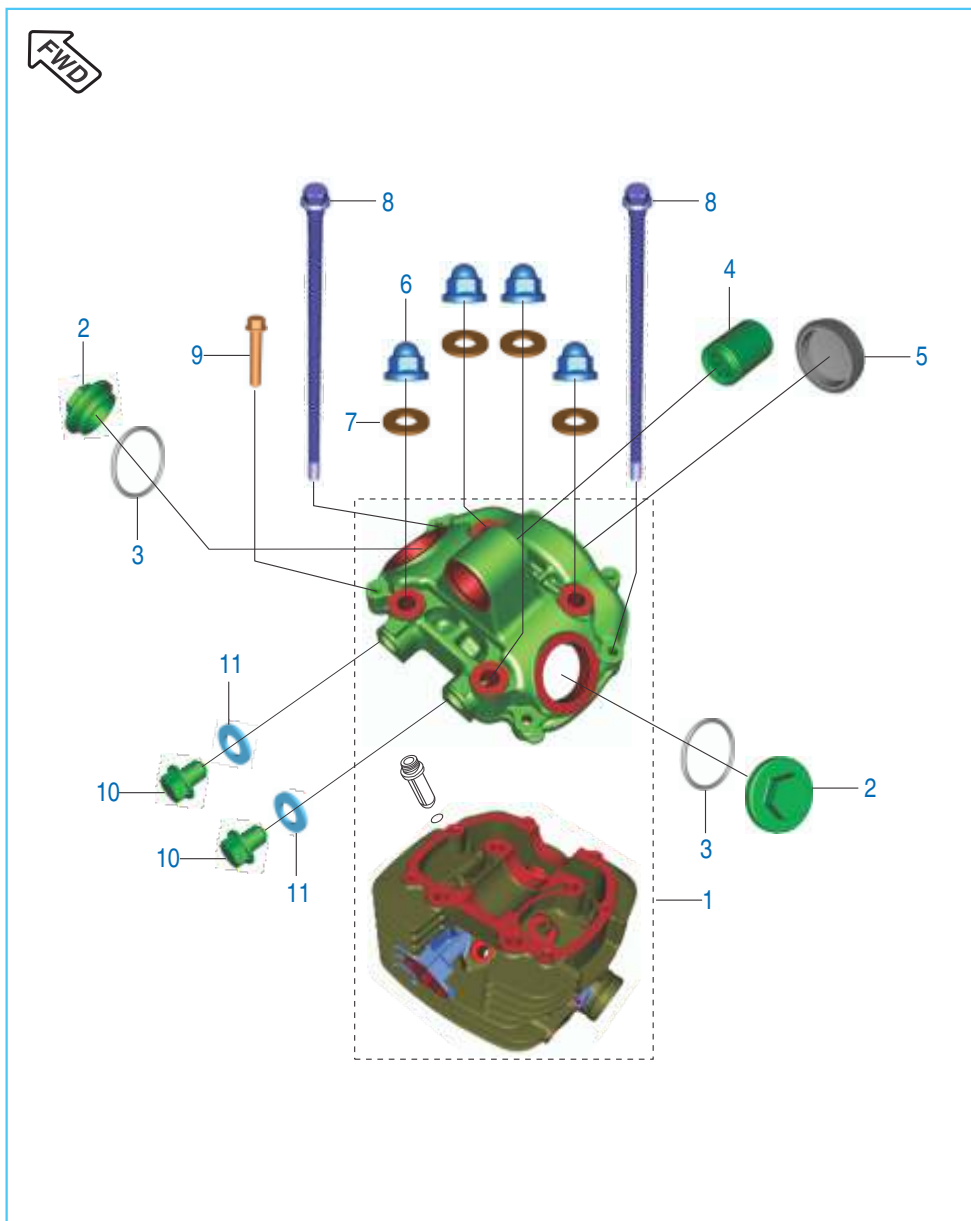Cover Cylinder Head




No.	Part No.	Description	Qty.	Remarks
1	36 DK01 19	Kit Assembly Cylinder Head with Cover	1	Refer Kit Details
2	DJ 1012 17	Cover Tappet	2	
3	39 2391 21	'O' Ring	1	
4	DS 1011 66	Silent Bush (V)	1	
5	DH 1022 01	Camshaft Cap	1	
6	39 2647 15	Domed Cap Nut	4	
7	DS 1010 84	Copper gasket	4	
8	59 0400 23	Hex. Bolt with Flange	2	
9	39 1075 04	Hex. Bolt with Flange	4	
10	DH 1012 72	Plug	2	
11	DG 1014 98	Gasket	2	

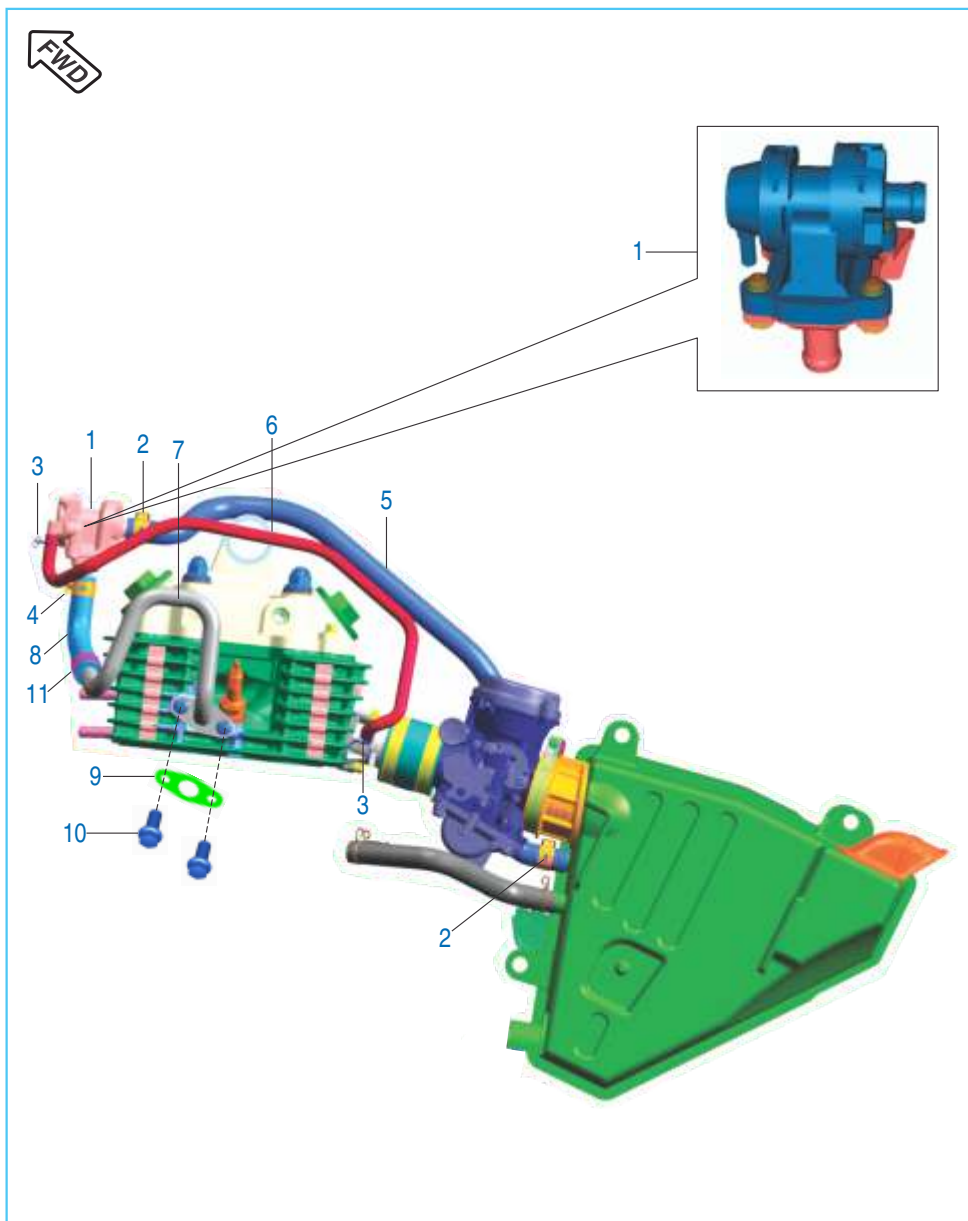


SAI System

No.	Part No.	Description	Qty.	Remarks
1	DK 1018 38	SAI Unit	1	
2	JL 5810 66	Clamp SAI Pipe	2	
3	33 1410 08	Clamp	2	
4	JL 5810 65	Clamp Hose SAI	1	
5	DJ 1210 89	Tube SAI Air Filter	1	
6	DK 1210 91	Hose SAI Unit To Manifold	1	
7	DH 1021 74	Metal Pipe With Flange SAI	1	
8	DJ 1017 10	Hose SAI Unit To Metal Pipe	1	
9	DH 1021 80	Gasket Metal Pipe With Flange SAI	1	
10	KA EG06 14	Flanged Bolt	2	
11	JE 5810 39	Band Clip SAI Hose Outlet Tube	1	

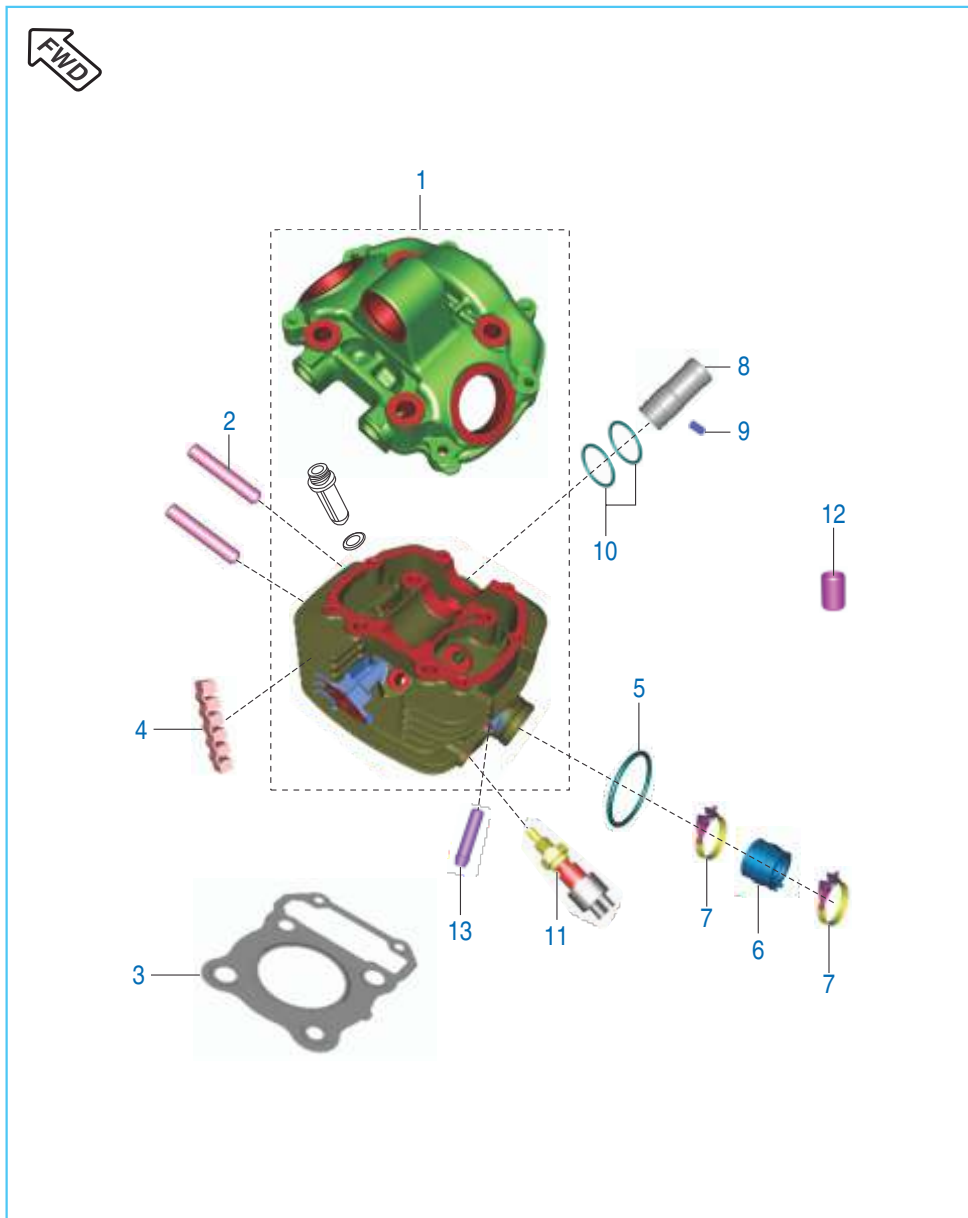Cylinder Head




No.	Part No.	Description	Qty.	Remarks
1	36 DK01 19	Kit Assembly Cylinder Head with Cover	1	Refer Kit Details
2	39 1660 05	Stud - M8 (Exhaust)	2	
3	DK 1010 03	Gasket Cylinder Head	1	
4	DH 1015 08	Damper Cylinder Head	5	
5	39 1283 21	'O' Ring (Intake Pipe)	1	
6	JC 1200 23	Rubber Insulator	1	
7	AA 1210 45	Clamp for Insulator	2	
8	DH 1110 12	Collar - Spark Plug	1	
9	39 2608 01	Grub Screw	1	For Sleeve Spark Plug
10	36 DS10 01	Cyl. Head 'O' Ring Kit	1	Refer Kit Details
11	DK 1015 03	Engine temperature sensor	1	
12	39 2181 06	Dowel	2	
13	JE 5814 16	Nipple Connector Manifold SAI	1	

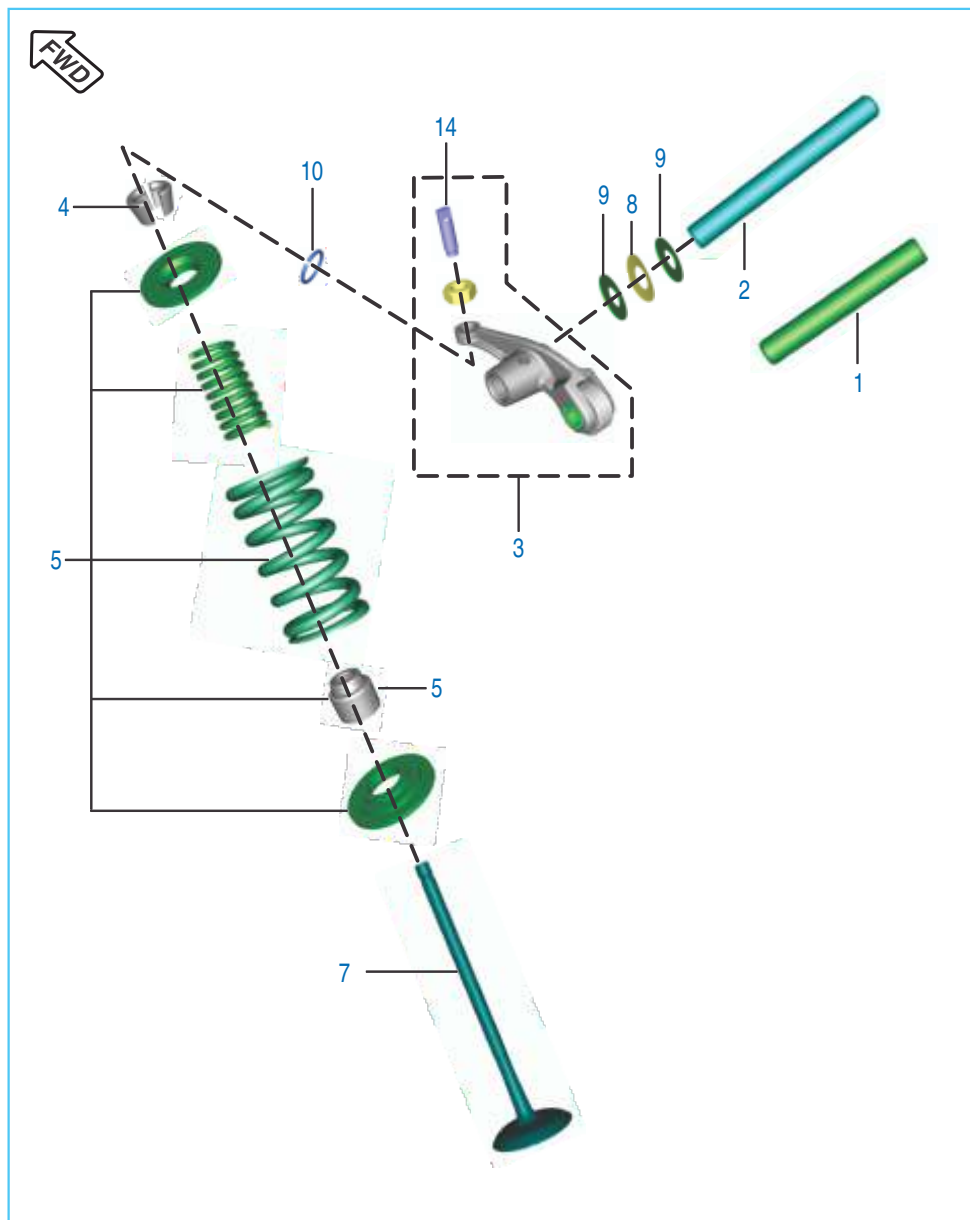


No.	Part No.	Description	Qty.	Remarks
1	DK 1017 48	Shaft Rocker Arm Intake	1	Refer Kit Details
2	DK 1017 51	Shaft Rocker Arm Exhaust	1	
3	DK 1017 55	Rocker Arm Assembly	2	
4	DG 1010 29	Cotter Valve	4	
5	39 2017 19	Seal Valve Stem	2	
6	DK 1013 26	Valve Repair Kit	2	
7	DK 1013 27	Valve Kit (Inlet + Exhaust)	1	
8	DH 1012 95	Wave washer	2	
9	39 2440 11	Plain washer	4	
10	DH 1011 74	Clip Valve Guide	2	

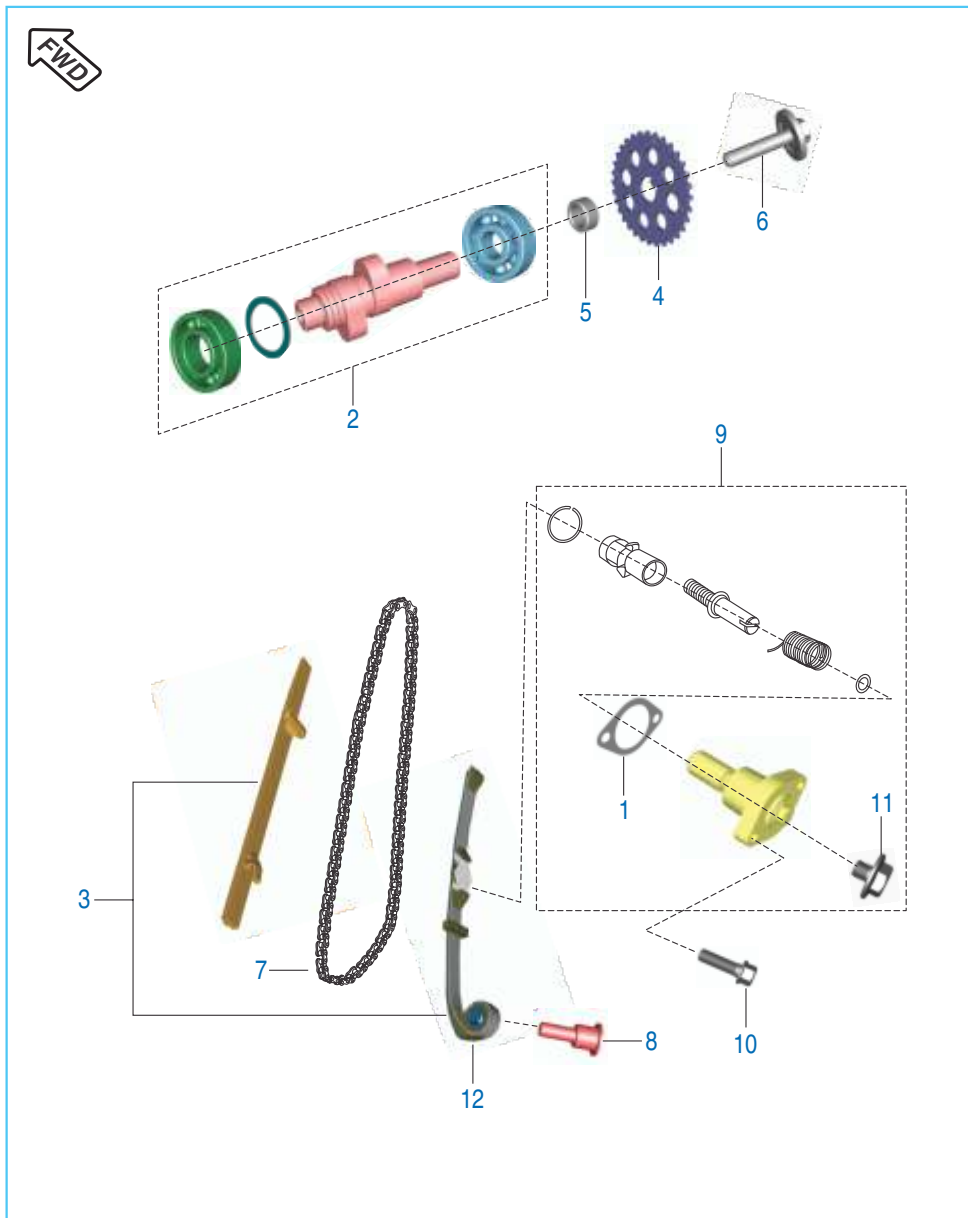Camshaft & Tensioner




No.	Part No.	Description	Qty.	Remarks
1	CS 1011 28	Gasket Tensioner Assembly	1	Refer Kit Details
2	DK 1016 14	Camshaft Assembly With Bearings	1	
3	DK 1013 30	Guide Chain Kit	1	
4	PD 5112 29	Sprocket Cam Drive (32 T)	1	
5	DH 1014 12	Collar Cam Sprocket	1	
6	DH 1021 25	Bolt Special Camshaft	1	
7	DK 1010 64	Cam Chain (100 link)	1	
8	DH 1013 92	Cam Chain Tensioner Pivot Bolt	1	
9	JC 1010 34	Tensioner Assembly	1	
10	39 1673 04	Hex Bolt / Flange	2	
11	DD 1010 62	Bolt Flange	1	
12	DK 1010 59	Guide Chain (Slack)	1	

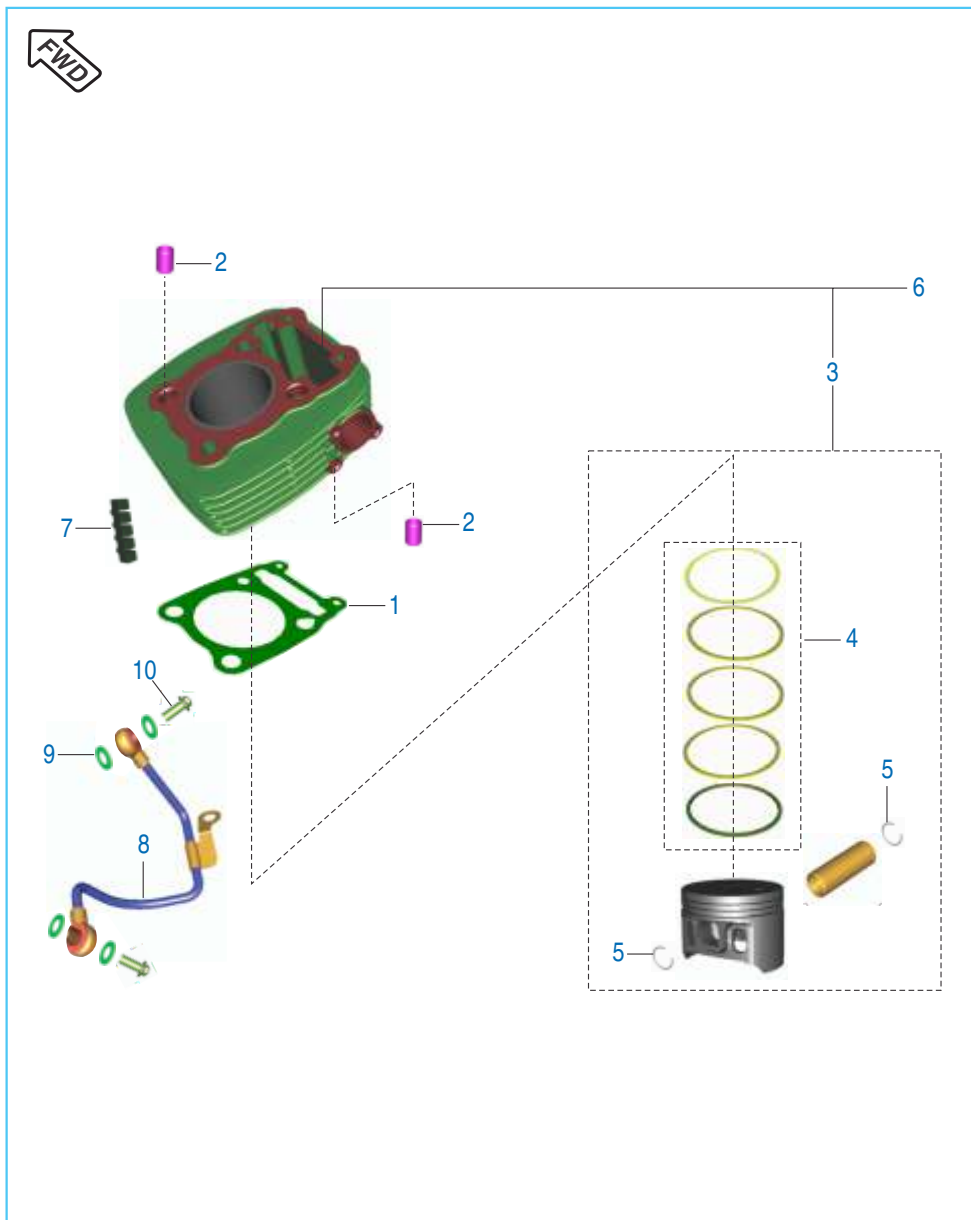

Cylinder and Piston


No.	Part No.	Description	Qty.	Remarks
1	DK 1010 63	Gasket Cylinder Block	1	
2	39 2181 06	Pin Dowel	2	
3	DK 1010 92	Assembly Piston	1	
4	DK 1013 28	Ring Set Piston	1	
5	39 2132 17	Ring Snap	2	
6	DK 1016 25	Cylinder Block & Piston Assembly	1	
7	DH 1014 14	Damper Cylinder Block	4	
8	DK 1015 92	Assembly Oil Pipe	1	
9	31 1210 06	Gasket	4	
10	DD 1210 07	Bolt - Banjo	2	

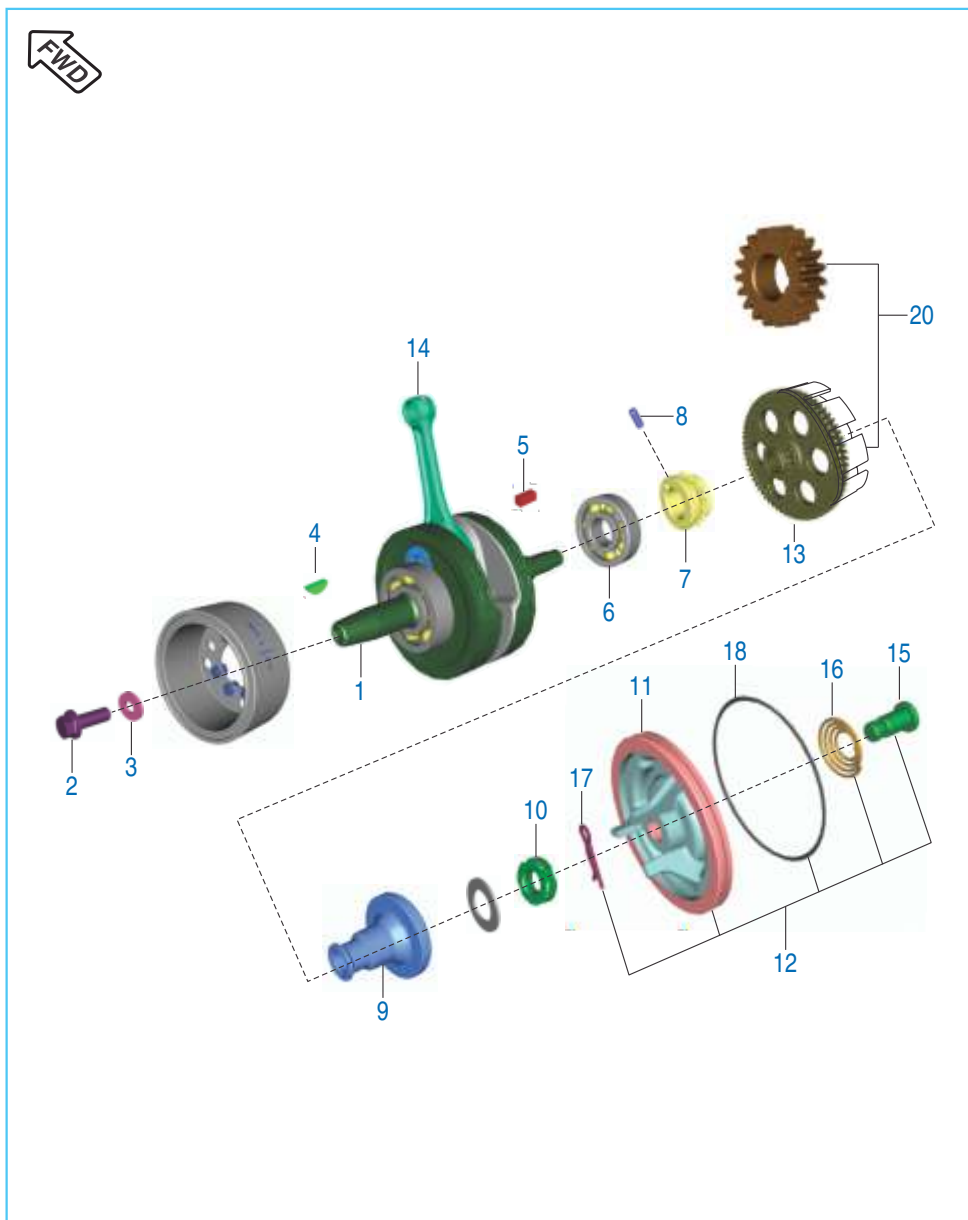Crankshaft




No.	Part No.	Description	Qty.	Remarks
1	DK 1010 65	Crankshaft Assembly	1	
2	39 2183 04	Bolt primer drive lock	1	
3	39 2165 11	Plain Washer	1	
4	31 1011 73	Key Woodruff	1	
5	DS 1011 54	Square Key	1	
6	39 1931 20	Bearing Ball	1	
7	DK 1012 48	Sprocket Cam Drive (16 T)	1	
8	39 2203 07	Parallel Pin	1	
9	DH 1021 51	Body Centrifugal Oil Filter	1	
10	DH 1011 95	Nut	1	
11	DH 1021 53	Cover Centrifugal Oil Filter	1	
12	DH 1013 55	Cover Complete Centrifugal Oil Filter	1	
13	36 Dk00 38	Kit Primary Drive & CI Housing	1	Refer Kit Details
14	DK 1010 67	Rod Connecting	1	
15	DH 1010 66	Joint Oil Delivery B	1	
16	DH 1010 67	Spring Oil Delivery B	1	
17	39 2199 08	Pin Snap	1	
18	LJ B000 01	O Ring	1	

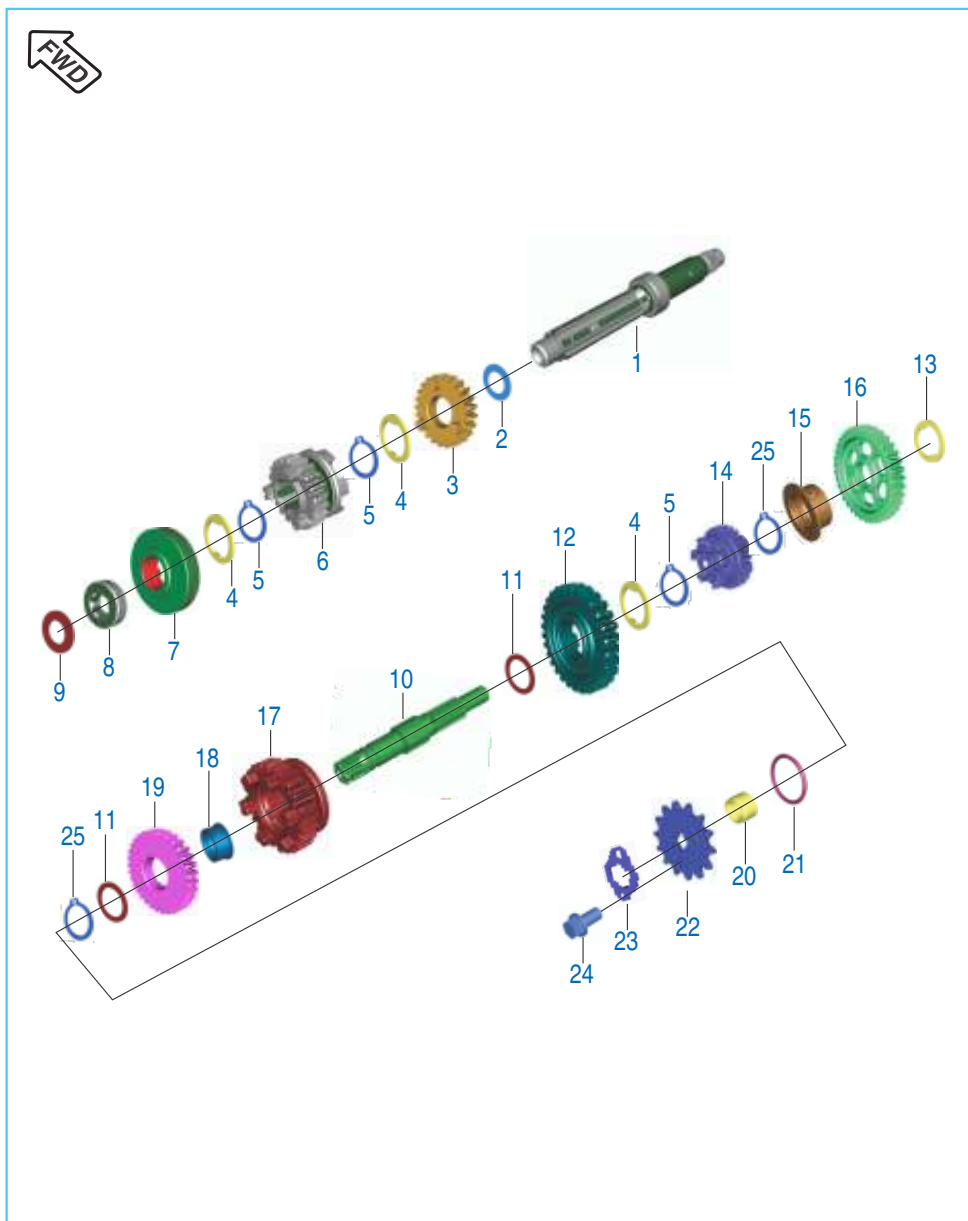Transmission



No.	Part No.	Description	Qty.	Remarks
1	DK 1014 71	Shaft Input Transmission	1	
2	39 2158 11	Plain Washer	1	
3	DK 1011 03	Gear 4th Drive	1	
4	DH 1010 79	Washer Spline	3	
5	DH 1012 35	External Circlip	4	
6	DK 1011 02	Gear 3rd Drive	1	
7	DK 1016 32	Gear 5th drive	1	
8	DH 1010 84	Gear 2nd Drive	1	
9	39 2159 11	Plain Washer	1	
10	DK 1011 44	Shaft Output Transmission	1	
11	39 2166 11	Washer Plain	2	
12	DK 1011 05	Gear 3rd Driven	1	
13	DH 1010 79	Washer Spline	1	
14	DK 1017 18	Gear 4th Driven	1	
15	DH 1011 11	Bush 1st Driven	1	
16	DK 1017 17	Gear 1st driven	1	
17	DK 1017 20	Gear 5th Driven	1	
18	DH 1013 19	Bush 2nd Driven	1	
19	DK 1017 19	Gear 2nd Driven	1	
20	DK 1012 45	Collar Sprocket	1	
21	DK 1013 52	'O' Ring Sprocket Coller	1	
22	DV 1010 48	Sprocket Output (14 T)	1	
23	DJ 1010 63	Plate Drive Sprocket	1	
24	AA 1014 37	Screw Pre - Coated	2	
25	DH 1012 35	Circlip	1	

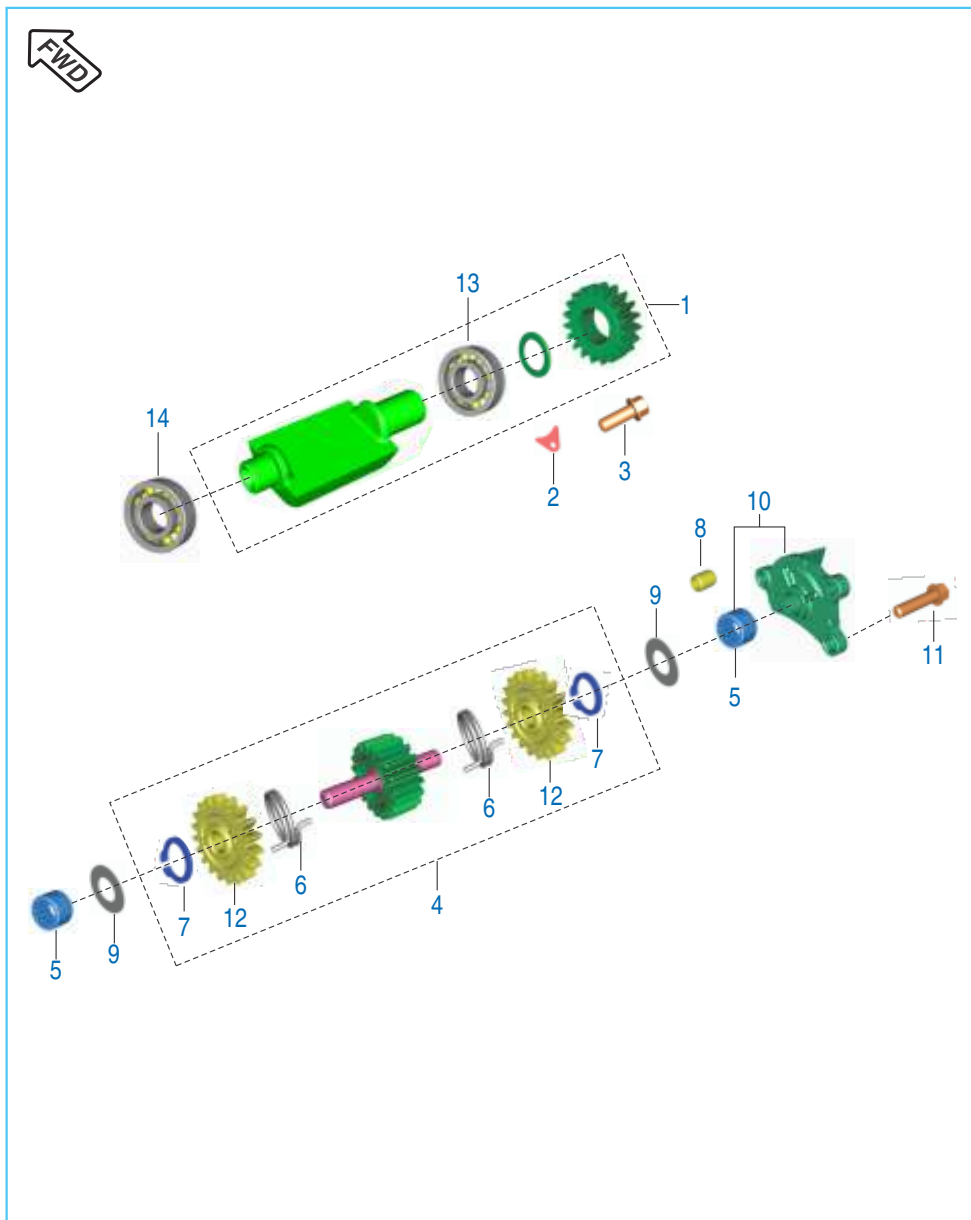


Balancer & Balancer Idler Gear

No.	Part No.	Description	Qty.	Remarks
1	DK 1014 16	Body Balancer Assembly	1	
2	DH 1010 72	Bearing Stopper	1	
3	39 1672 04	Bolt	1	
4	DJ 1011 34	Gear Complete Balancer Idler	1	
5	39 2152 20	Needle Roller Bearing	2	
6	DH 1014 24	Spring Torsion Balancer	2	
7	39 2557 17	Circlip External	2	
8	39 1686 06	Hollow Dowel Pin	1	
9	39 1620 11	Plain Washer	2	
10	52 DH01 77	Balancer Idler Holder	1	
11	39 1674 04	Hex bolt with flange	3	
12	DH 1013 73	Scissor balancer idler	2	
13	59 2000 28	Bearing Ball Balancer RH	1	
14	59 2000 29	Bearing Ball Balancer LH	1	




No.	Part No.	Description	Qty.	Remarks
1	DK 1011 59	Fork Gear Shift Input	1	
2	DK 1011 60	Fork Gear Shift output	2	
3	DH 1011 46	Shaft Gear Shift Fork Input	1	
4	DH 1014 93	Shaft Gear Shift Fork Output	1	
5	DK 1017 32	Drum Complete Gear Shift	1	
6	39 2639 04	Bolt Socket	1	
7	39 2606 07	Parallel Pin	1	
8	DH 1021 89	Guide Gear Shifter	1	
9	DH 1014 96	Spacer Guide Gear Shift	1	
10	DK 1011 35	Bush Fork Gear Shift	3	

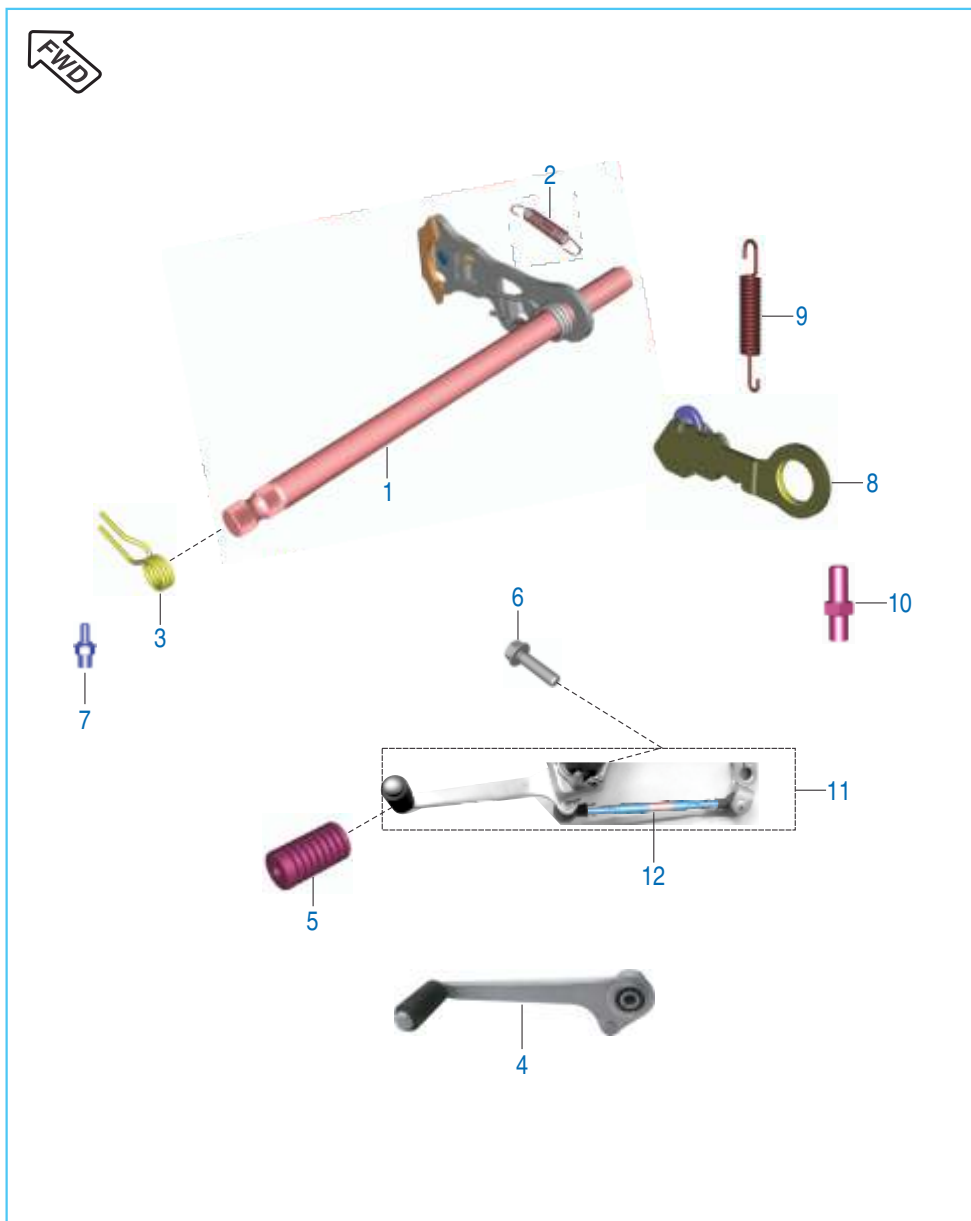

Gear Change Mechanism


No.	Part No.	Description	Qty.	Remarks
1	DH 1017 05	Lever Complete Gear Shifter	1	
2	DH 1017 14	Spring Gear Shift	1	
3	DH 1011 44	Spring Gear Shift Return	1	
4	DK 1011 83	Lever Complete Change	1	
5	DH 1015 09	Damper	1	
6	39 2453 04	Flanged Bolt M6	1	
7	DH 1013 93	Bolt Gear Shift Drum Stopper	1	
8	DK 1017 25	Stopper Drum	1	
9	DK 1012 53	Spring Gear Shift Stopper Detent	1	
10	DH 1013 94	Bolt Shift Change	1	
11	DK 1011 77	Assembly Lever Change Arm	1	
12	DK 1011 80	Assembly Tie rod	1	

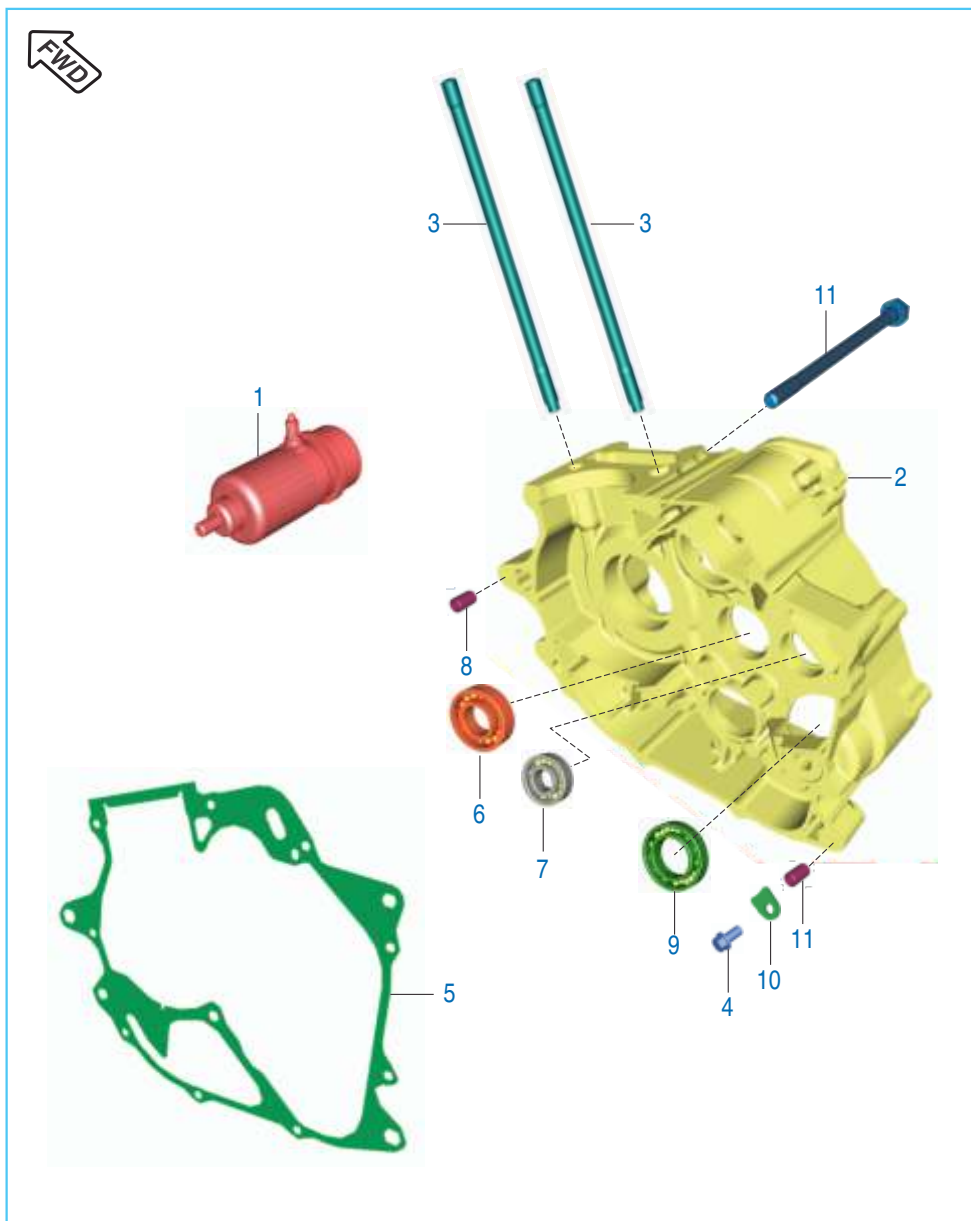

Engine Assembly & Crankcase RH


No.	Part No.	Description	Qty.	Remarks
1	DK 1018 15	Engine Assembly with starter motor	1	Refer Kit Details
2	36 PD00 22	Kit Assly Crankcase RH	1	
3	59 0500 02	Stud Bolt (M 10)	2	
4	AA 1014 37	Screw Pre - Coated	1	
5	DH 1018 96	Gasket Crankcase	1	
6	39 2583 20	Bearing Ball (For Input Shaft)	1	
7	59 2000 27	Bearing Ball (For Output shaft)	1	
8	39 2180 06	Dowel Pin	2	
9	39 2601 20	Bearing Ball For Drive Complete Gear Shift	1	
10	DH 1014 87	Plate Stopper	1	
11	39 2180 06	Dowel Pin	2	

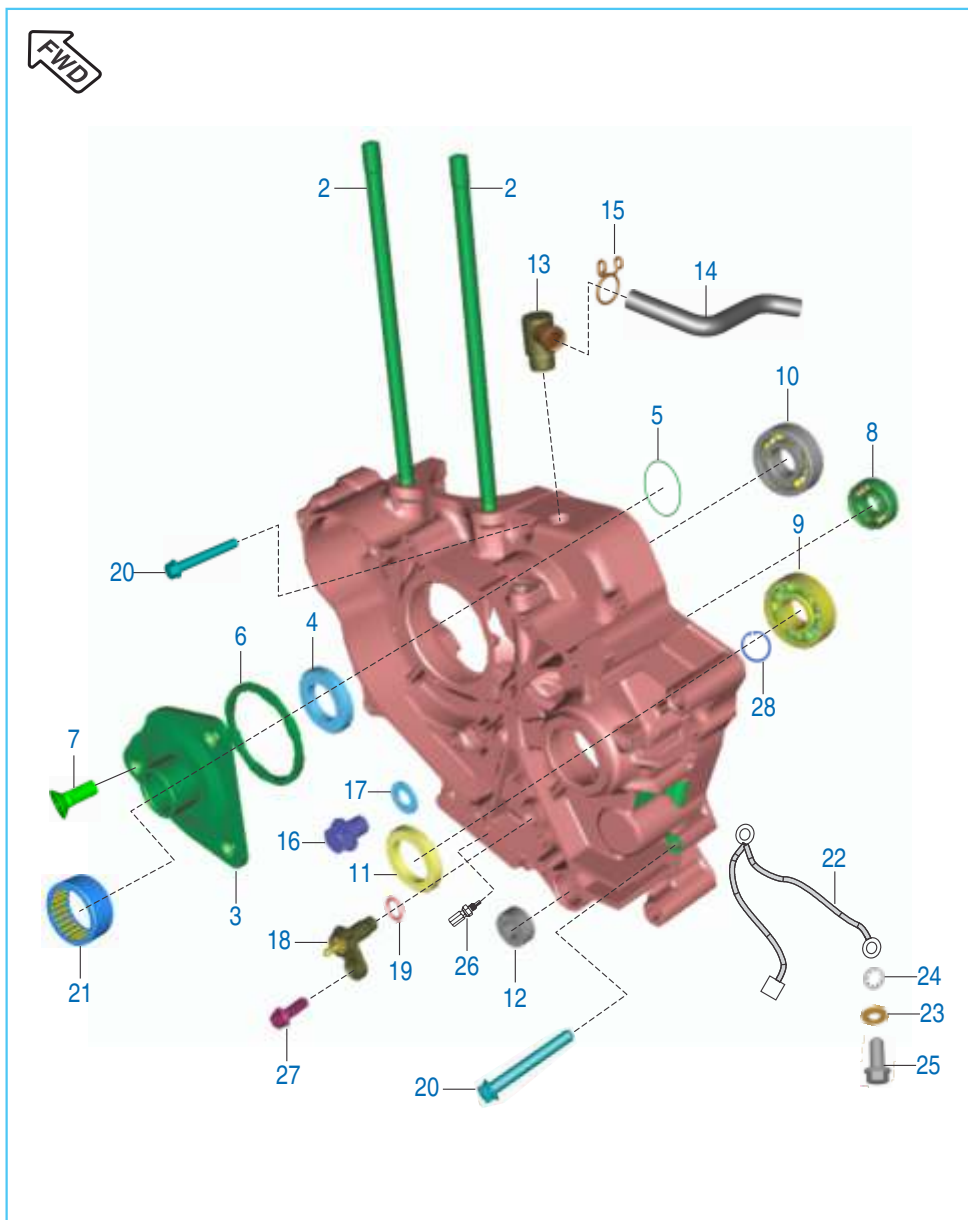Crankcase LH




No.	Part No.	Description	Qty.	Remarks
1	36 PD00 13	Kit Assly Crankcase LH	1	Refer Kit Details
2	59 0500 02	Stud	2	
3	DK 1010 94	Guide Starter Assembly	1	
4	39 2188 19	Oil Seal	1	
5	59 2100 06	O' Ring	1	
6	DK 1010 97	Damper Axial (Rubber)	1	
7	39 0752 01	Screw CSK Cross	3	
8	39 2603 20	Bearing Ball (for Input Shaft)	1	
9	59 2000 06	Bearing Ball (for Output Shaft)	1	
10	59 2000 28	Bearing Ball Balancer RH	1	
11	30 1010 14	Oil Seal (For Output Shaft)	1	
12	39 2190 19	Oil Seal (For Shift Lever)	1	
13	DH 1012 03	Breather Pipe	1	
14	DH 1017 19	Rubber Tube	1	
15	DS 1012 34	Spring Clip	1	
16	DH 1016 61	Plug Drain Magnetic	1	
17	31 1011 06	Gasket For Plug Drain Magnetic	1	
18	DK 1013 80	Neutral Switch Complete	1	
19	KJ AB10 19	O Ring	1	
20	39 1677 04	Bolt	8	
21	59 2000 07	Needle Roller Bearing (30*37*16)	1	
22	DK 2010 28	Cable Assembly (Battery To Earth)	1	
23	39 2448 11	Plain Washer	1	
24	39 0849 14	Toothed Washer	1	
25	DH 1016 39	Lock Screw Earthing	1	
26	DK 1015 77	Thermal Sensor With Aluminum Gasket	1	
27	DH 1013 85	Flange Bolt	1	

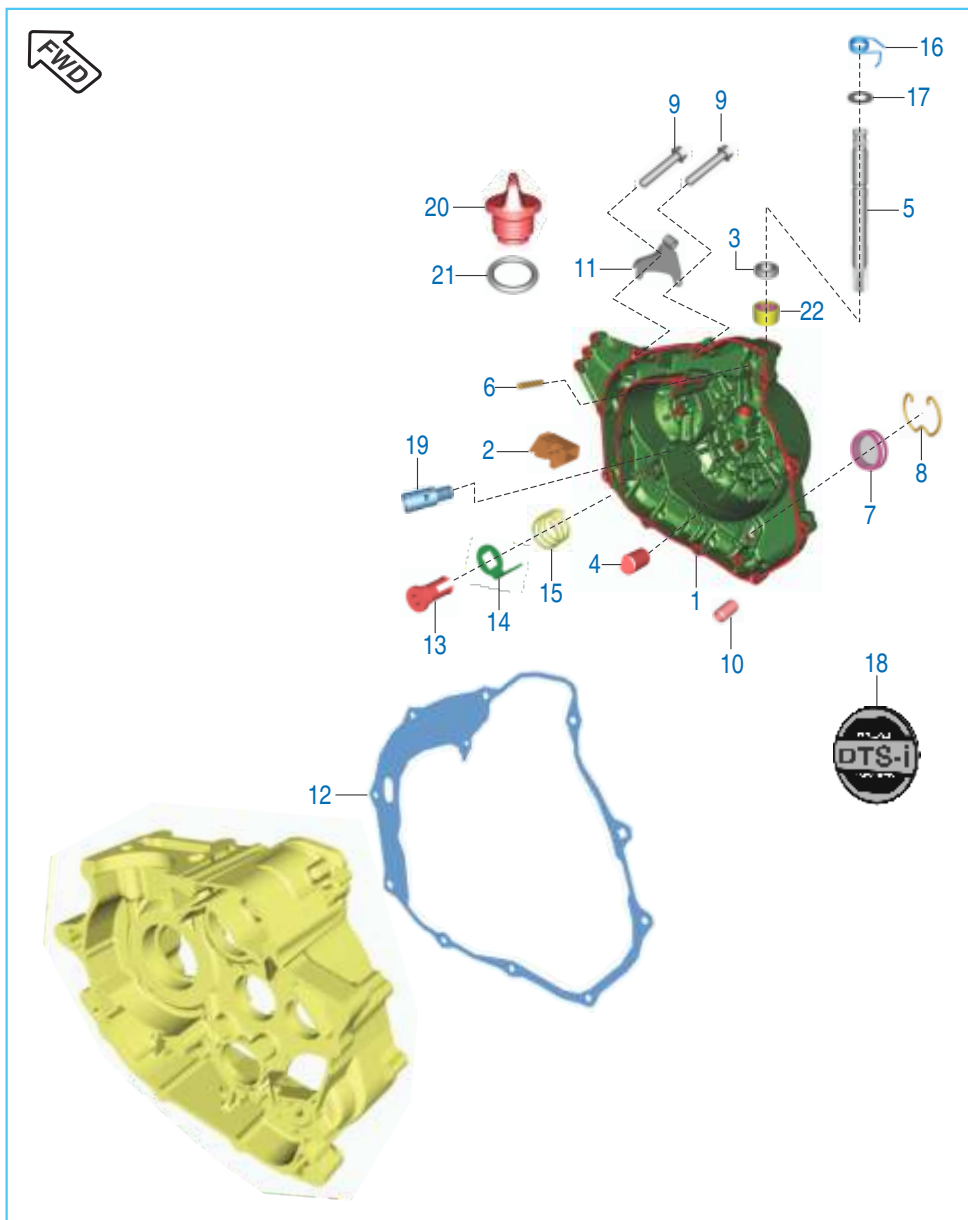Cover RH




No.	Part No.	Description	Qty.	Remarks
1	52 DK06 88	Cover Complete RH Slate Gray	1	
2	DH 1011 97	Grommet Breather	1	
3	39 1041 19	Seal Oil	1	
4	DH 1011 41	Rack Clutch Push	1	
5	DH 1011 42	Shaft Clutch Release	1	
6	DK 1012 51	Parallel Pin	1	
7	DG 1014 18	Gauge	1	
8	DS 1012 15	Clip Wire	1	
9	DS 1013 53	Bolt	10	
10	39 0999 06	Pin Dowel	2	
11	DK 1012 52	Bracket Clutch Cable	1	
12	DH 1011 54	Gasket Cover RH	1	
13	DK 1014 80	Plunger Oil Pump	1	
14	DH 1210 11	Plate Plunger Oil	1	
15	DH 1210 12	Spring Joint 'A'	1	
16	DH 1015 44	Spring Torsion Clutch Lever	1	
17	39 2443 11	Washer (Spring Steel)	1	
18	DK 1017 38	Decal Clutch Cover	1	
19	AA 1018 83	Pressure Relief Valve Assembly	1	
20	DS 1010 71	Cap Oil Filler	8	
21	DH 1011 52	'O' Ring Oil Level Gauge	1	
22	39 1990 20	Needle Roller Bearing	2	

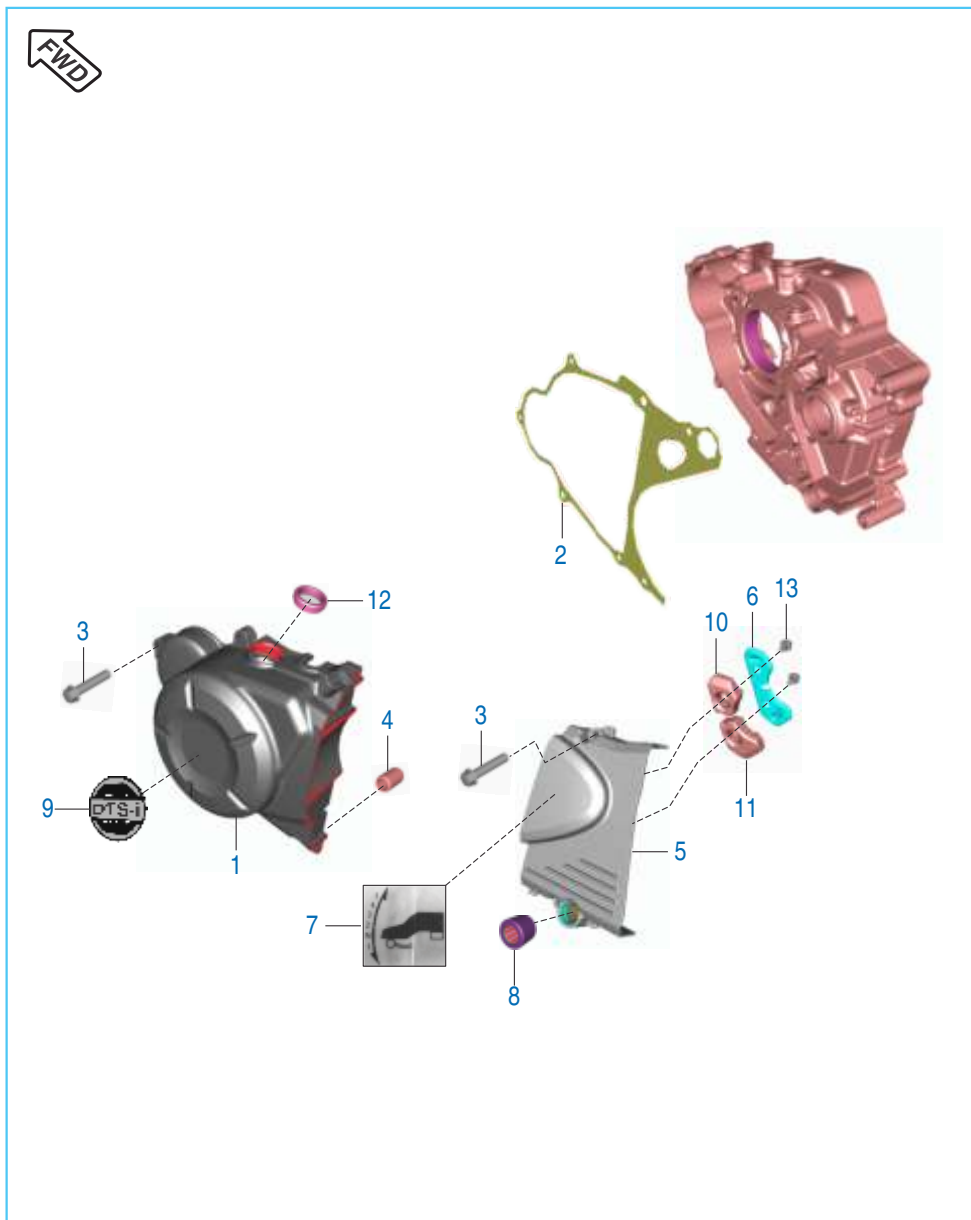

Cover Magneto


No.	Part No.	Description	Qty.	Remarks
1	52 DK06 91	Assembly Cover Magneto	1	
2	DV 1010 42	Gasket Magneto Cover	1	
3	DS 1013 53	Bolt	7	
4	39 0999 06	Pin Dowel	2	
5	56 DJ3Z 1Y	Cover LH RR	1	
6	DH 1012 93	Plate Damper Cover LH Rear	1	
7	DJ 1612 28	Gear Shift Label	1	
8	AP 1010 43	Bearing Needle Bendix	1	
9	JE 5412 12	Decal DTS-I Magneto	1	
10	DH 1012 92	Damper A Cover LH RR	1	
11	DH 1012 94	Damper B Cover LH RR	1	
12	DG 1014 18	Gauge	1	
13	DH 1013 88	Bolt (M5 x 10)	2	

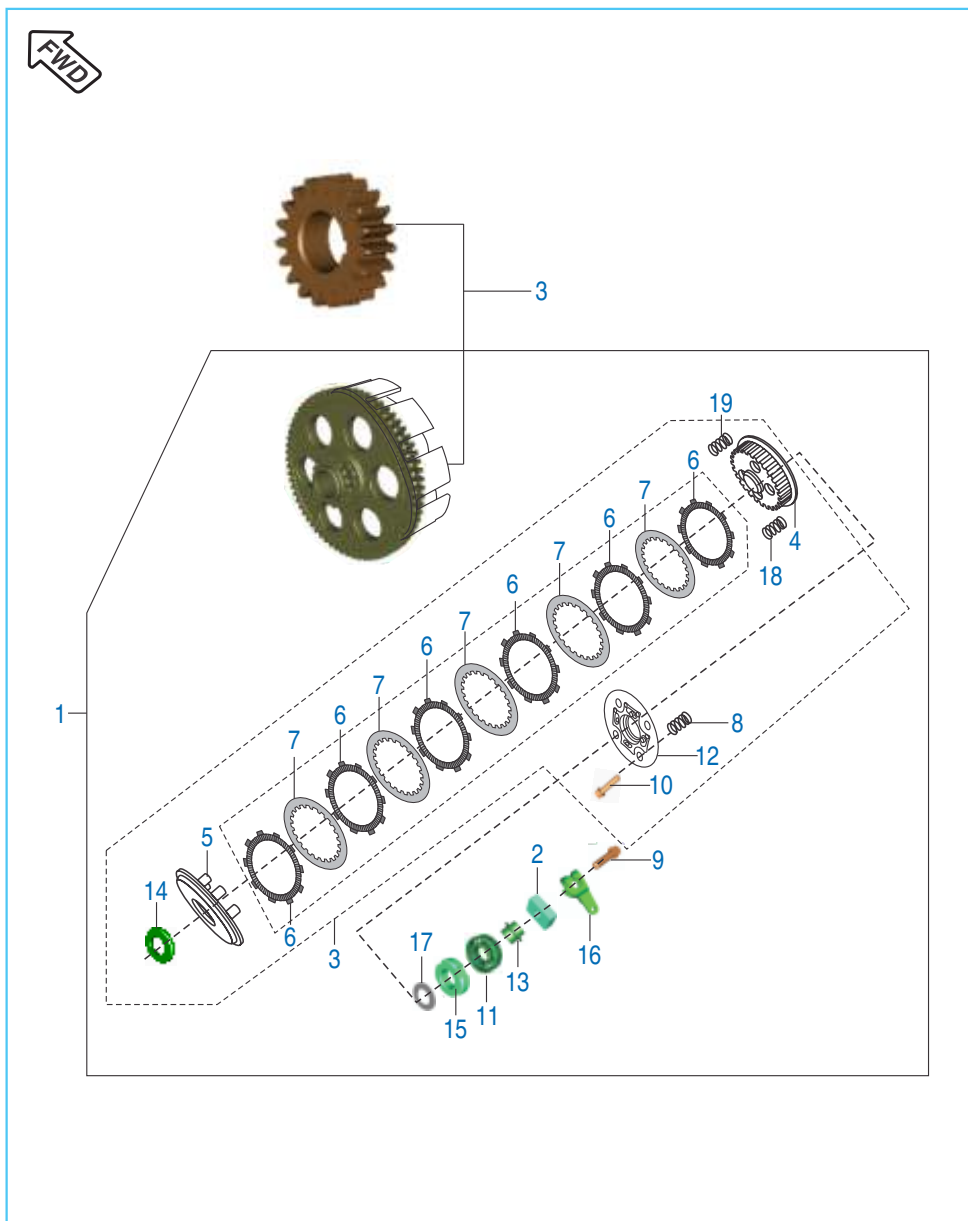


Clutch Assembly

No.	Part No.	Description	Qty.	Remarks
1	PD 5514 18	Clutch assembly comp.	1	Refer Kit Details
2	DH 1012 75	Nut	1	
3	36 Dk00 38	Kit Primary Drive & CI Housing	1	
4	PD 5514 21	Clutch Center	1	
5	DK 1015 69	Plate Clutch Pressure	1	
6	36 PD00 30	Kit Friction Plate	1	Refer Kit Details
7	DK 1015 65	Plate Clutch	5	
8	PD 5514 20	Spring Clutch Capacity	5	
9	39 1674 04	Bolt	1	
10	DK 1015 74	Bolt	5	
11	39 2617 20	Bearing Clutch lifter thrust	1	
12	DK 1015 73	Plate Clutch Lifter	1	
13	DK 1010 72	Rod Clutch Lifter	1	
14	DK 1011 26	Spacer Clutch	1	
15	DH 1016 48	Nut Clutch Center	1	
16	DK 1016 36	Lever Assembly Clutch	1	
17	39 2200 11	Washer Primary Drive Gear	1	
18	DK 1015 70	Seat Judder Spring	1	
19	DK 1015 71	Spring Judder	1	

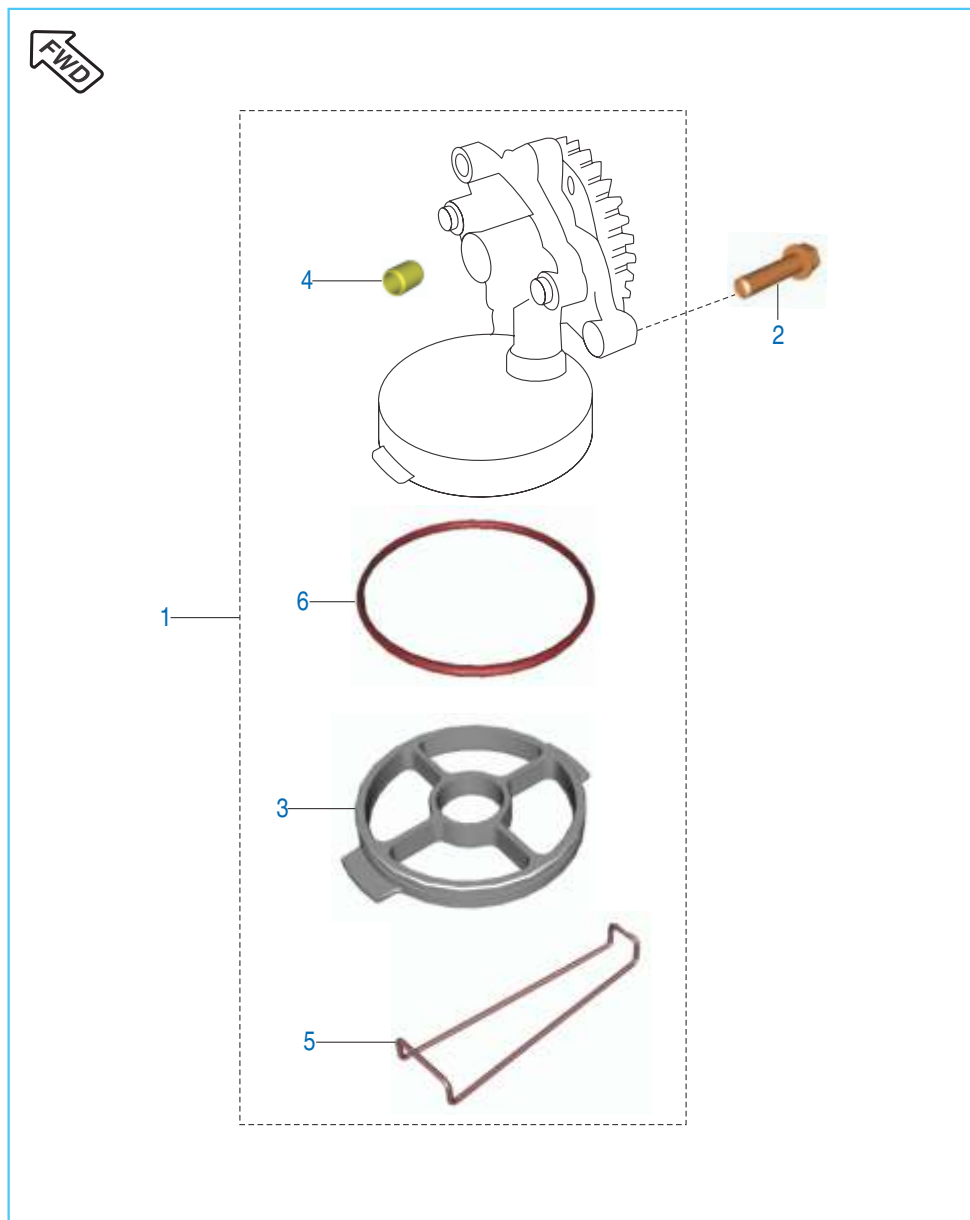Oil Pump Assembly




No.	Part No.	Description	Qty.	Remarks
1	52 DH01 69	Oil Pump Assembly	1	
2	39 1674 04	Flange Bolt	3	
3	DH 1210 10	Mesh Filter Oil Pump	1	
4	39 1686 06	Hollow Dowel Pin	1	
5	DH 1210 35	Clip Mesh Oil Filter	1	
6	39 2194 21	'O' Ring	1	

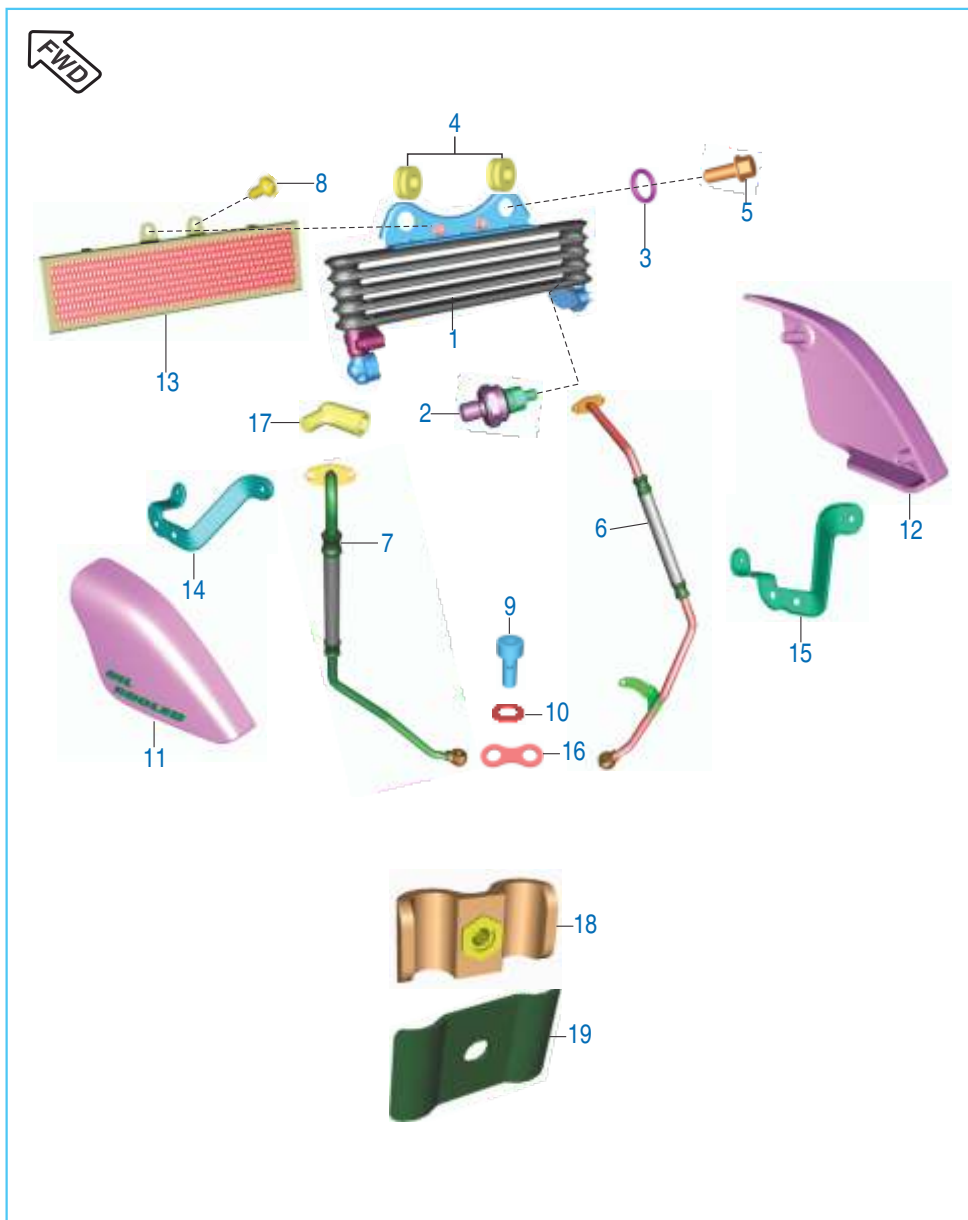

Oil Cooler Assembly


No.	Part No.	Description	Qty.	Remarks
1	DK 1016 34	Oil cooler assembly	1	
2	DK 1012 25	Switch Oil Pressure	1	
3	DK 1013 40	'O' ring (Oil Cooler Pipe)	1	
4	DK 1610 81	Rubber Grommet Fairing Lower Mtg.	2	
5	39 1672 04	Flange Bolt	4	
6	DK 1016 30	Pipe Inlet Oil Cooler	1	
7	DK 1016 31	Pipe outlet oil cooler	1	
8	39 2697 04	Hexagon head screw	2	
9	DK 1013 66	Bolt Special Banjo	2	
10	DK 1012 37	Copper Washer (oil cooler)	2	
11	DK 1611 88	Cap Oil Cooler LH	1	
12	DK 1611 89	Cap Oil Cooler RH	1	
13	DK 1016 35	Cover Oil Cooler	1	
14	DK 1611 86	Oil Cooler Cap Bracket LH	1	
15	DK 1611 87	Oil Cooler Cap Bracket RH	1	
16	DK 1012 79	Washer Cooler Pipe	1	
17	JB 4022 02	Grommet oil Pressure Switch	1	
18	DK 1012 77	Bracket Upper (Oil Cooler Pipe)	1	
20	DK 1012 78	Bracket Lower (Oil Cooler Pipe)	1	

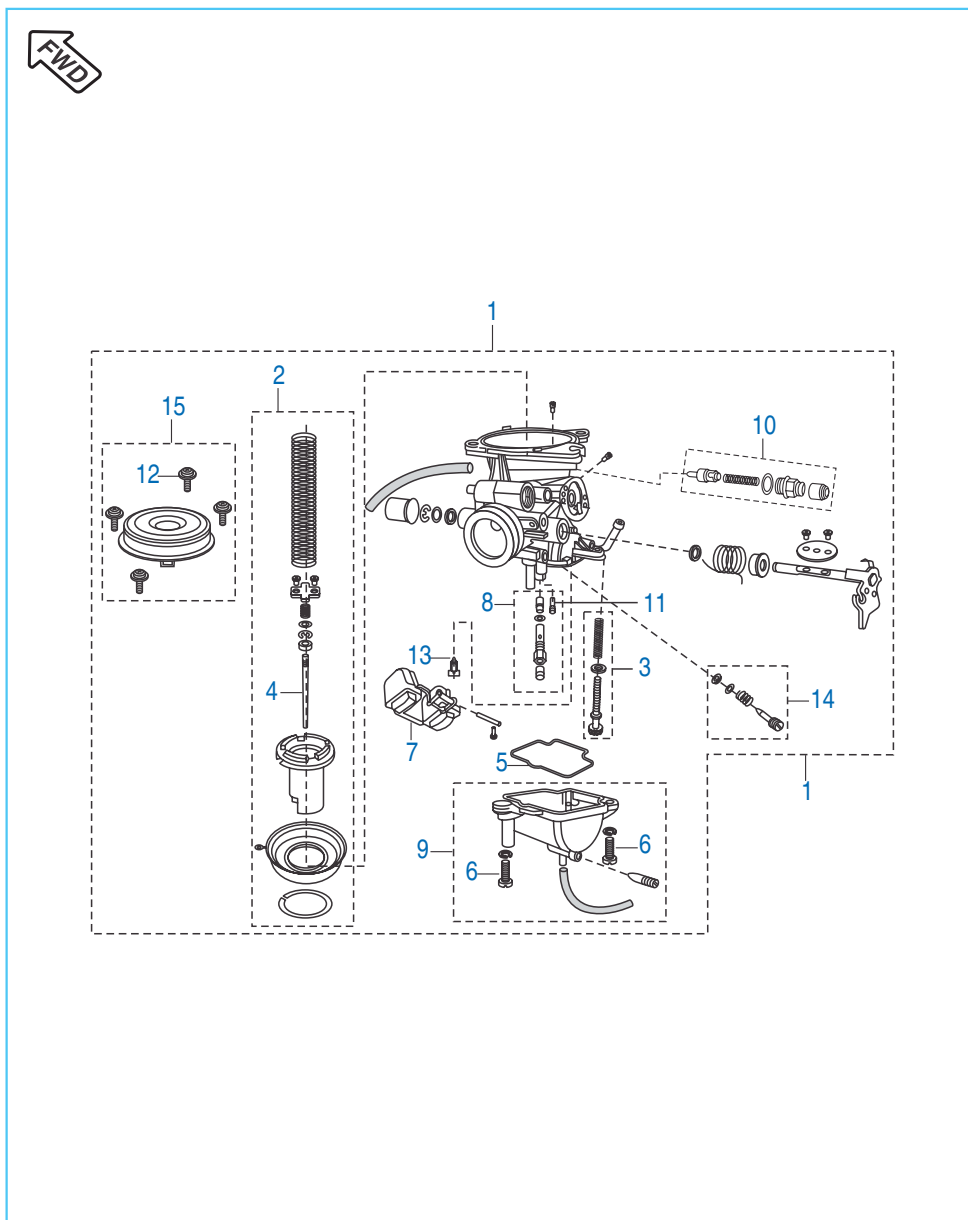Carburettor Assembly




No.	Part No.	Description	Qty.	Remarks
1	DK 1210 92	Carburettor Assembly.	1	
2	DK 1210 69	Piston valve Assembly Kit	1	
3	DK 1210 41	Vacuum Adjuster kit	1	
4	DK 1210 56	Jet needle (JN)	1	
5	36 JE00 22	Kit 'O' Ring & Gasket	1	
6	DK 1210 44	Screw	2	
7	DK 1210 45	Float Assembly.	1	
8	DK 1210 70	Jet Kit	1	
9	36 DK00 60	Float Chamber body Kit	1	
10	DJ 1210 59	Set Plunger Assembly	1	
11	DK 1210 63	Pilot Jet	1	
12	DH 1210 63	Screw Cover	4	
13	DK 1210 47	Needle Assembly.	1	
14	DK 1210 48	Pilot Screw Kit	1	
15	36 DK00 61	Top Cap Assembly. Kit	1	

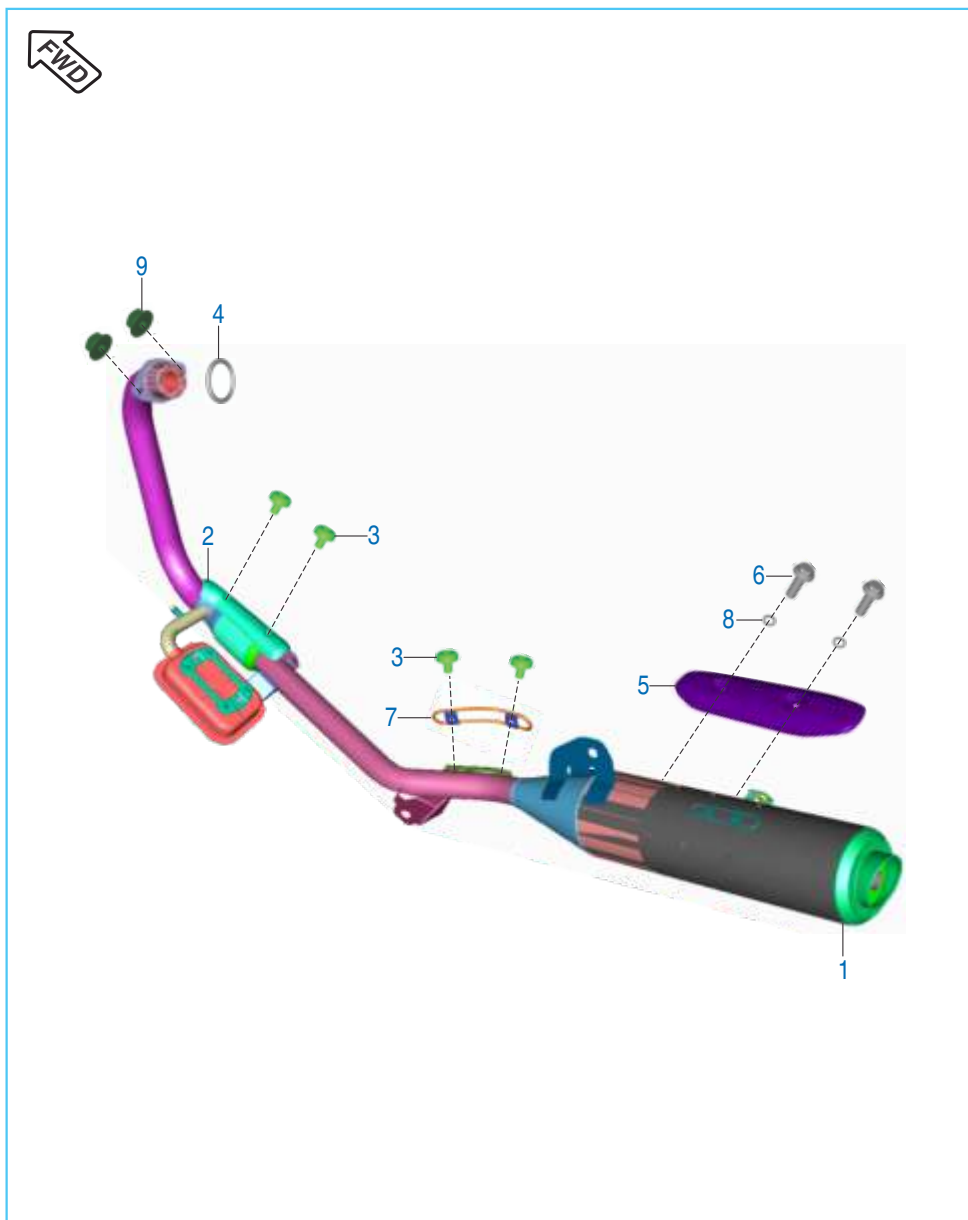Silencer Assembly




No.	Part No.	Description	Qty.	Remarks
1	YD K060 02	Silencer Assembly. W/o shield	1	
2	DK 1018 53	Shield Exhaust Tube	1	
3	DH 1016 07	Truss screw	4	
4	DJ 1010 64	Gasket exhaust	1	
5	DK 1017 10	Guard Pillion	1	
6	LA E000 52	Nut	2	
7	DK 1013 05	Wire Shield Assembly	1	
8	DK 1016 98	Washer Guard Pillion	2	
9	39 1970 15	Hex Nut / Flange - M8	2	

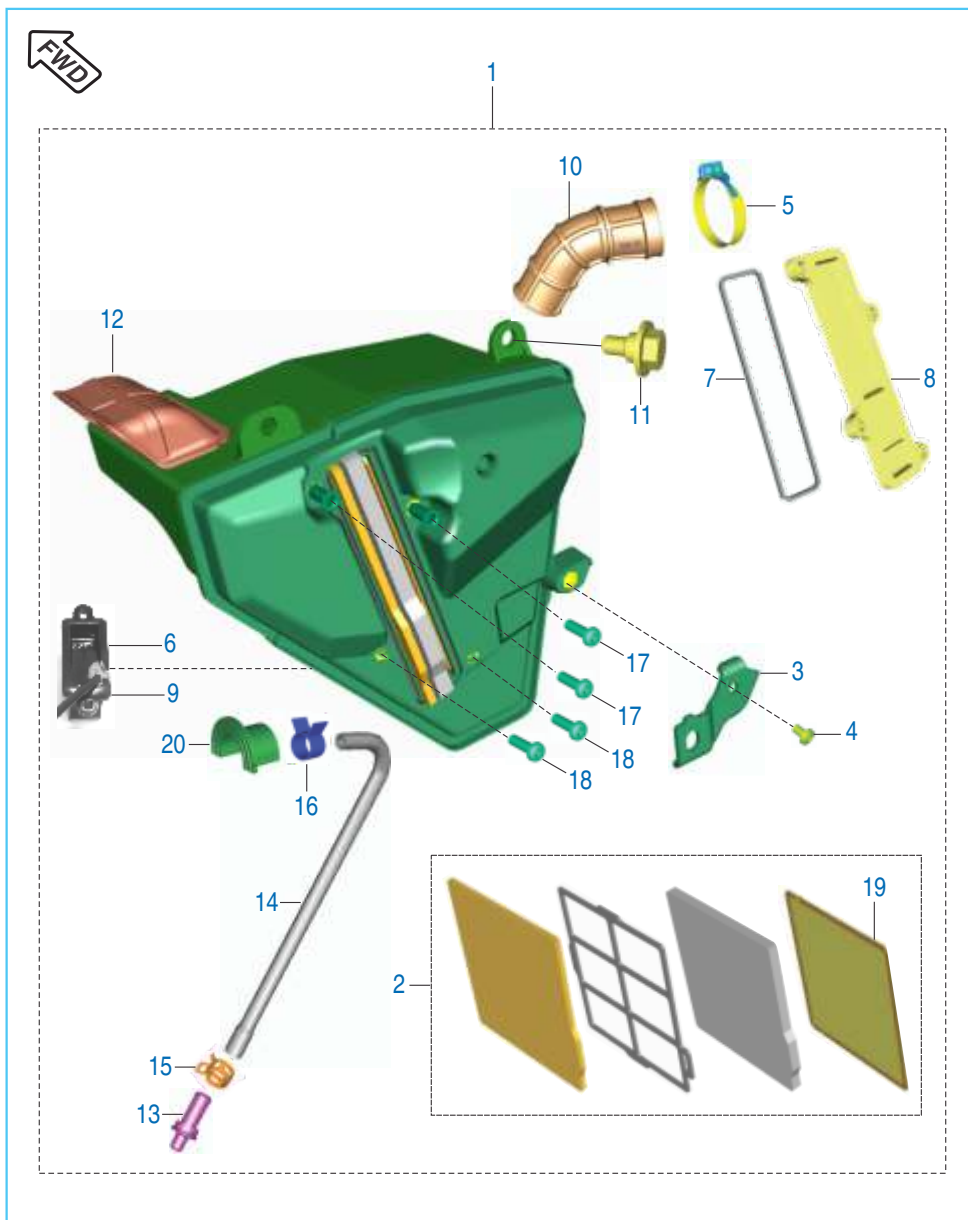Air Cleaner Assembly




No.	Part No.	Description	Qty.	Remarks
1	DK 1210 86	Air Filter SAI	1	
2	DK 1210 09	Assembly Element Filter	1	
3	DH 1614 16	Bracket lock	1	
4	39 1780 01	Screw Pan - M5	1	
5	AP 1210 64	Clamp	1	
6	DK 1110 40	IR sensor	1	
7	DK 1210 15	'O' Ring	1	
8	DJ 1210 82	Cartridge Assembly	1	
9	DK 1210 22	Grommet IR sensor	1	
10	DK 1210 39	Connecting Tube	1	
11	DS 1612 24	Bolt Step with Flange	3	
12	DS 1211 16	Duct	1	
13	DS 1211 26	Plug	1	
14	DS 1211 17	Drain Tube A/F	1	
15	DG 1210 02	Clamp (Hose C'case Breather)	1	
16	AA 1410 48	Spring Band Clip 10 MM	1	
17	KB BA05 25	Screw Pan Cross	2	
18	KB BA05 16	Screw Pan Cross	2	
19	DK 1210 05	Flame Arrester Complete	1	
20	DK 1210 11	Cap Breather Pipe	1	

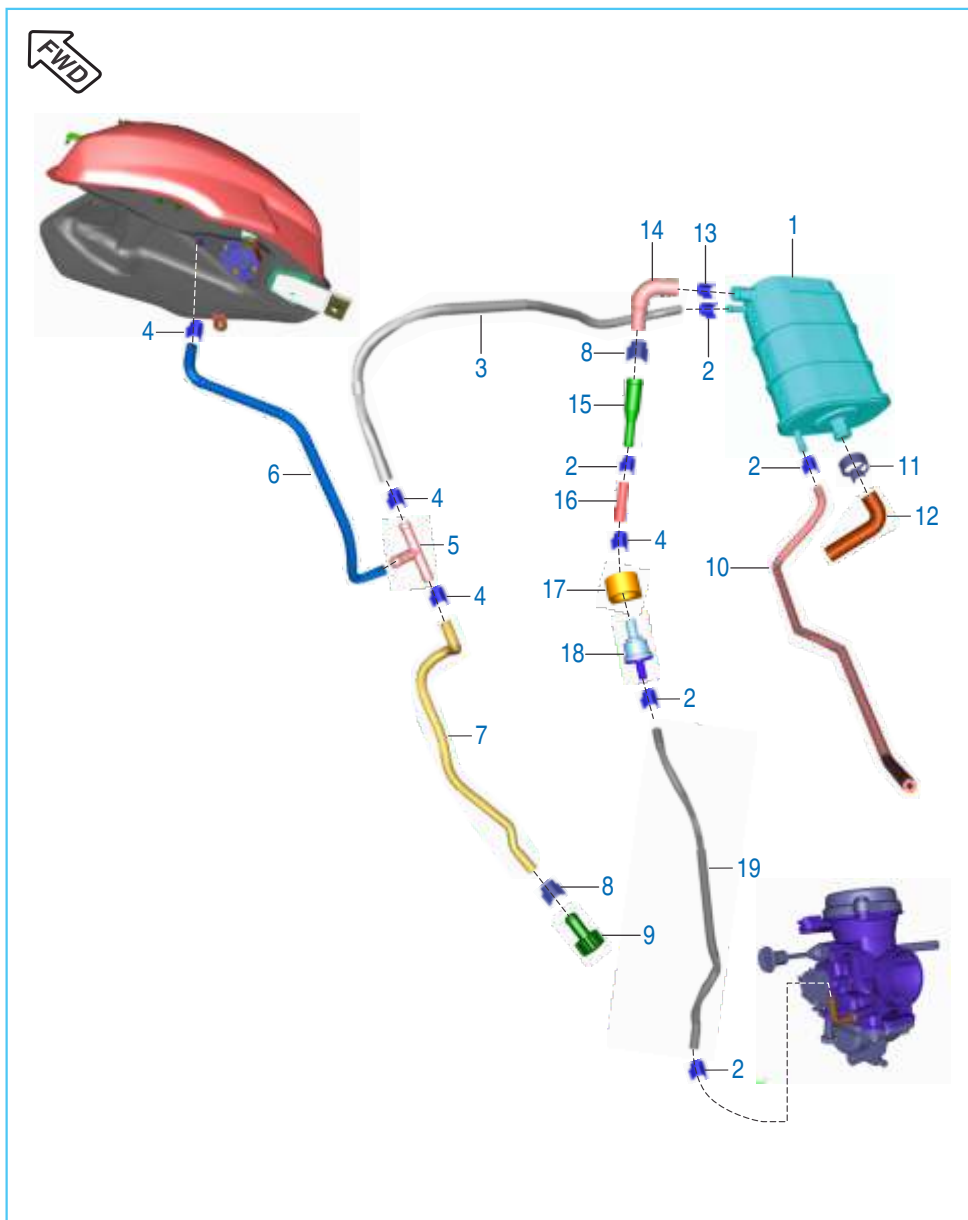EVAP Mechanism




No.	Part No.	Description	Qty.	Remarks
1	JY 1710 77	Canister	1	
2	JY 1710 70	Spring Band Clamp 9 x 8.4	5	
3	DJ 1410 73	Tube T Connector To Canister	1	
4	JG 1710 29	Spring Band Clamp 11.5 X 8.4	4	
5	GL 1710 36	Connector For Breather And Vapor Tube	1	
6	DJ 1410 72	Tube Tank To T Connector	1	
7	DJ 1410 74	Tube Condensate Fuel Drain	1	
8	JY 1710 90	Spring Band Clamp 13 x 12	2	
9	JY 1718 25	Plug Fuel Drain	1	
10	DH 1410 73	Tube Canister Drain	1	
11	JH 1716 02	Clamp - Canister Breather	1	
12	DH 1410 74	Tube Canister Breather	1	
13	JY 1710 69	Spring Band Clamp 15 x 10	1	
14	DJ 1410 70	Tube Canister To Connector	1	
15	JG 1710 86	Connector Tube EVAP	1	
16	DJ 1410 77	Tube Connector To Purge Valve	1	
17	JH 1710 48	Grommet Purge Valve	1	
18	PD 1716 16	Valve Purge	1	
19	DK 1410 57	Tube Purge Valve To Carburetor	1	

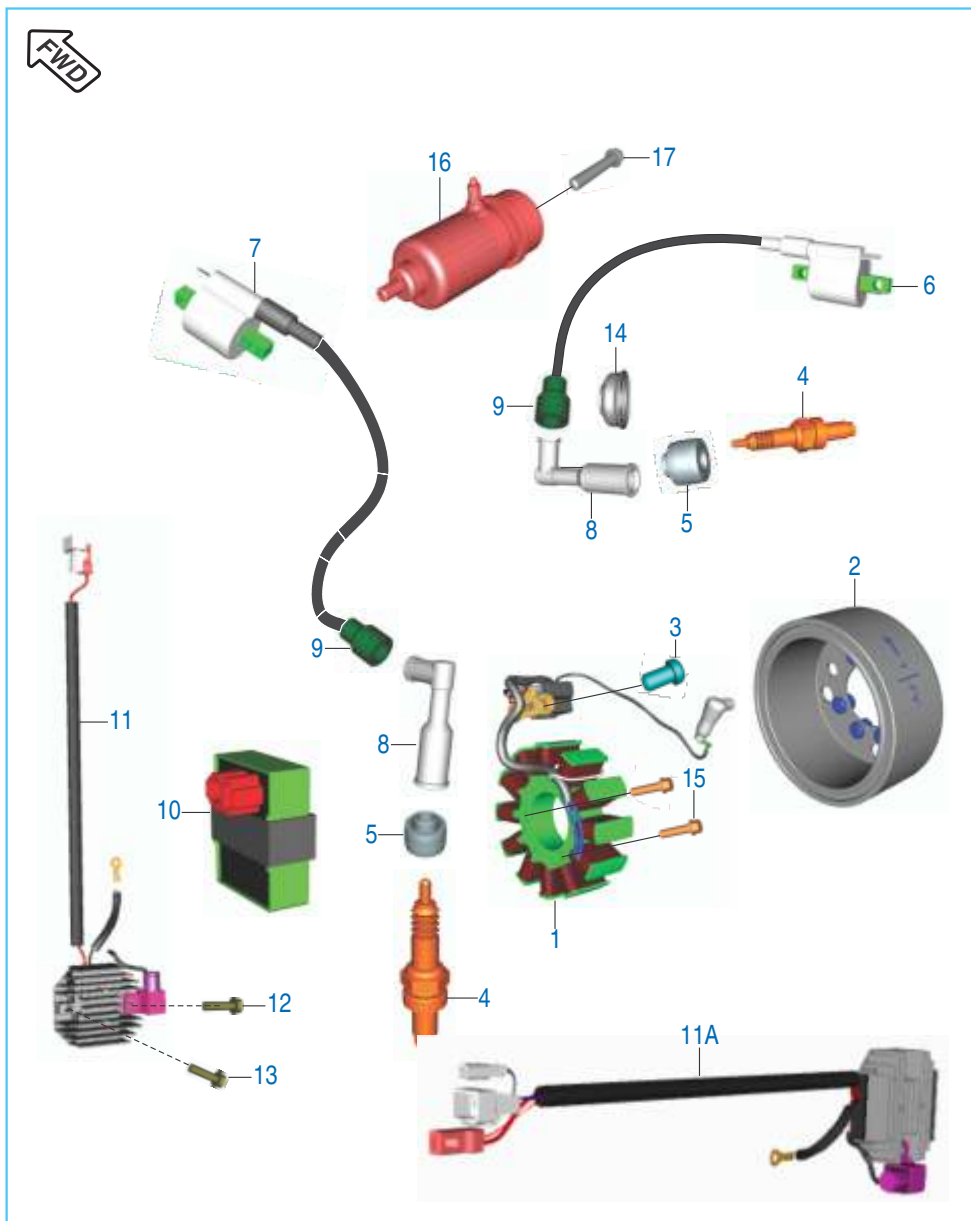

Magneto, CDI & H.T. Coil


No.	Part No.	Description	Qty.	Remarks
1	DK 1110 79	Stator Assembly	1	
2	JC 1110 28	Rotor Assembly Without Clutch	1	
3	DH 1013 81	Pan Head Screw (Pick up Coil Mtg.)	2	
4	DK 1110 28	Spark Plug	2	
5	DH 1110 13	Grommet Spark Plug	2	
6	JC 1110 22	H.T. Coil LH	1	
7	JC 1110 23	H.T. Coil RH	1	
8	DH 1110 15	Cap Spark Plug	2	
9	DD 1110 12	Grommet H.T. Cable	2	
10	DK 1110 81	CDI Non TPS Assembly K3	1	
11	DK 2011 39	Regulator Assembly - Single Phase	1	
11A	DK 2011 60	Regulator Assembly	1	AHO Model
12	KA DA06 30	Bolt Flanged	1	
13	39 1955 04	Bolt Flanged - Small	1	
14	DH 1110 16	Grommet Spark Plug Cap	1	
15	DH 1013 86	Hex Bolt Stator Mounting	2	
16	JC 1110 07	Assembly Starter Motor	1	
17	DS 1013 53	Bolt	2	

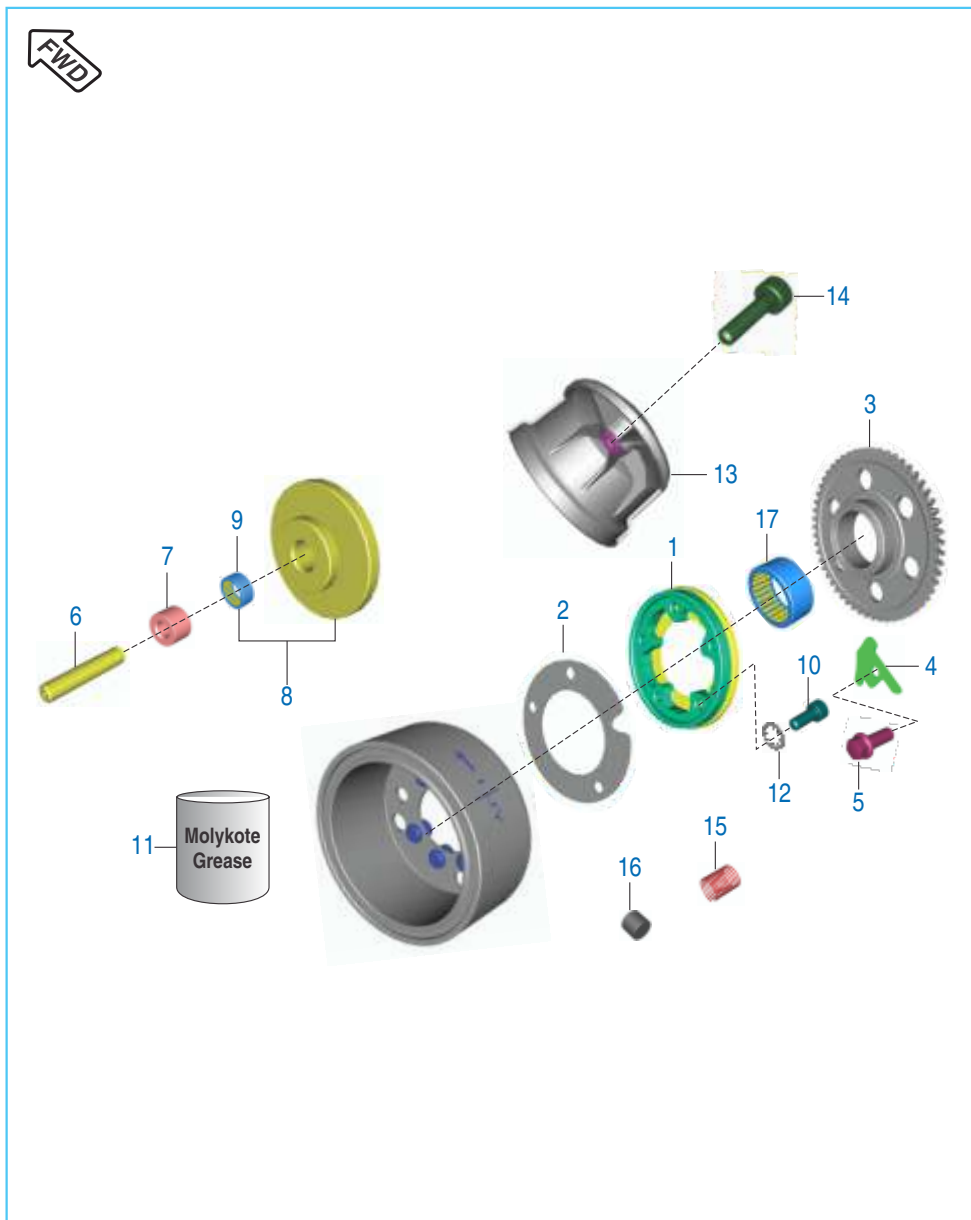

Starter Assembly


No.	Part No.	Description	Qty.	Remarks
1	36 DK00 76	Kit Body Starter Clutch	1	
2	DK 1016 05	Plate Roller Clutch	1	
3	JC 1011 12	Gear Starter Clutch	1	
4	DH 1015 81	Plate Starter Clutch Gear Return	1	
5	DH 1013 85	Bolt	1	
6	DK 1011 76	Shaft Starter Counter	1	
7	DH 1011 72	Collar Starter Counter	1	
8	JC 1011 15	Assembly Gear Starter Counter (14T)	1	
9	59 2000 07	Needle Roller Bearing	1	
10	39 0972 04	Bolt Socket M6	3	
11	36 DK00 45	Grease Molykote (200 gm box)	1	
12	39 0849 14	Washer Lock - Toothed	3	
13	56 DJ4E 1Y	Cover Starter Motor	1	
14	DH 1013 89	Bolt Socket	1	
15	DK 1015 96	Spring Starter Clutch	5	
16	DH 1011 63	Roller Clutch	5	
17	59 2000 07	Needle roller bearing	1	

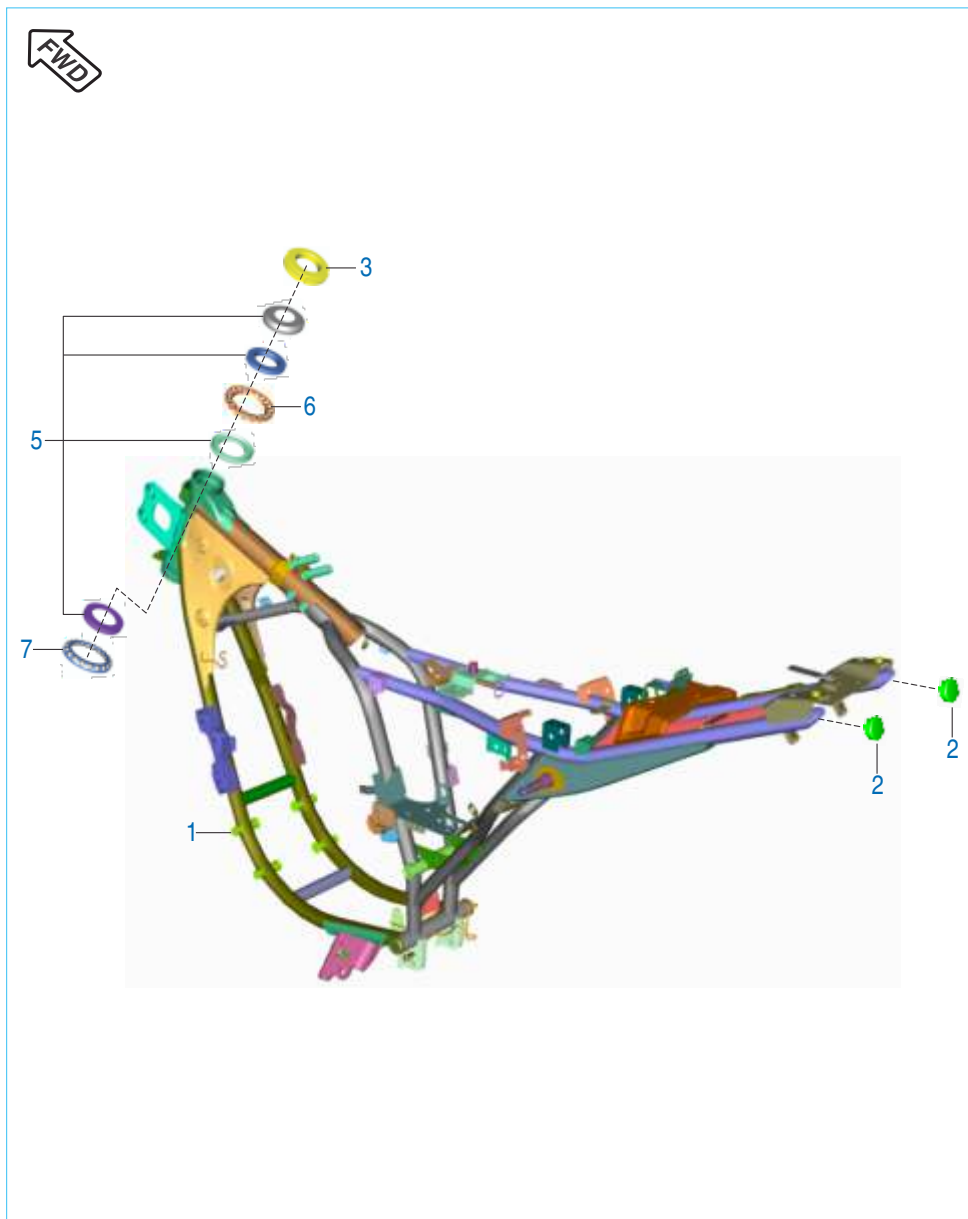Frame and Frame Fittings




No.	Part No.	Description	Qty.	Remarks
1	DK 1614 09	Frame Assembly. Comp.	1	Refer Kit Details
2	DH 1611 12	Cup Rear	2	
3	DK 1810 75	Nut Steering	1	
4	PD 1510 06	Cap Steering	1	
5	36 DV00 08	Bearing Cone Kit	1	
6	DK 1810 50	Cage Bearing Steering Top	1	
7	DK 1810 51	Cage bearing lower	1	

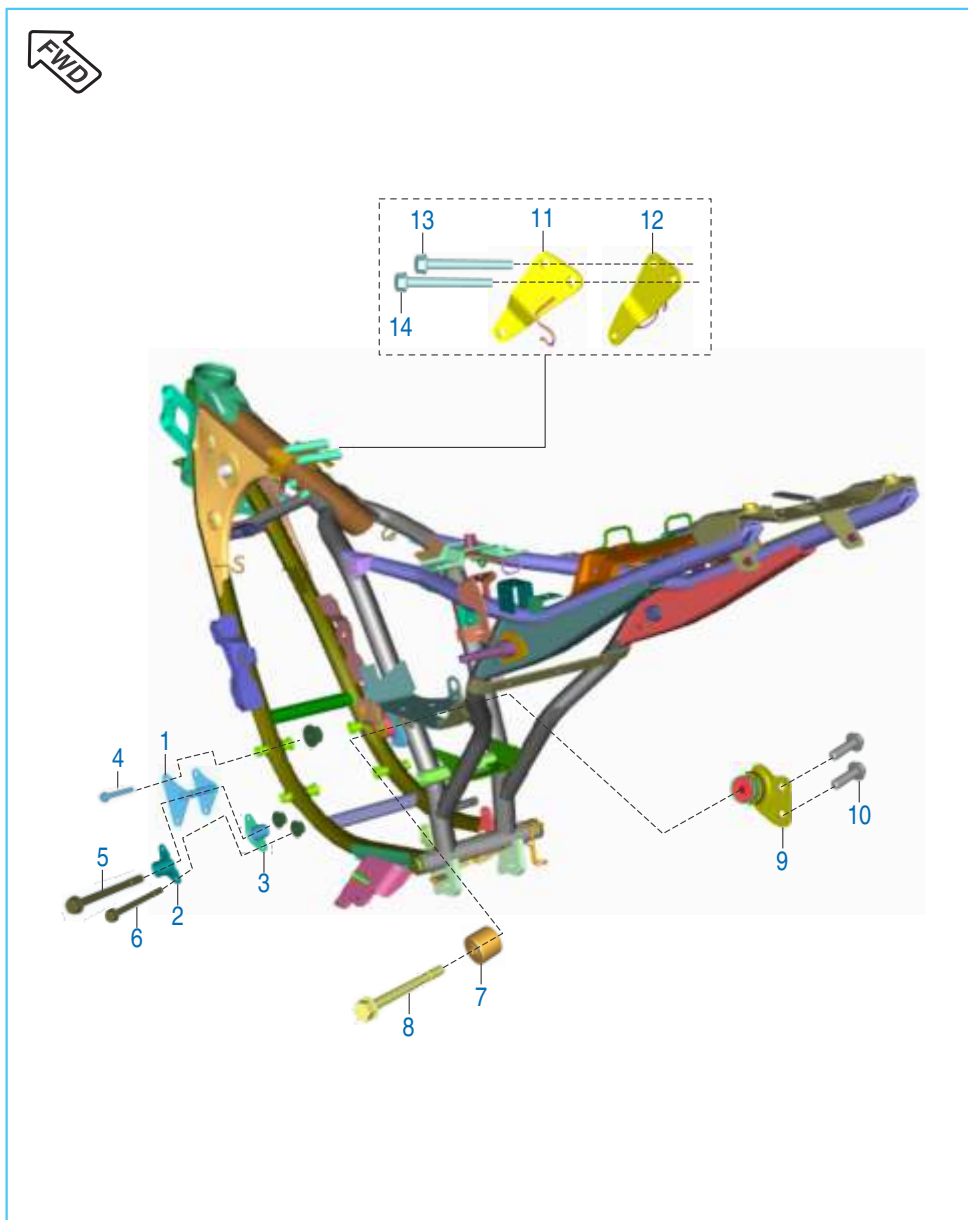Engine Mountings




No.	Part No.	Description	Qty.	Remarks
1	DK 1610 96	Bracket Assembly Engine Mounting Front	1	
2	DH 1611 89	Bracket Complete LH Engine Mounting Frt.	1	
3	DH 1611 90	Bracket Complete RH Engine Mounting Frt.	1	
4	39 2312 04	Hex HD Bolt / Flange - M8	4	
5	59 0400 41	Bolt Flanged	1	
6	39 2571 04	Bolt Flanged	2	
7	DH 1612 73	Bush In Frame	1	
8	59 0400 43	Hex. Socket HD Cap Bolt	1	
9	DK 1611 61	Bracket Complete RH Engine Rear	1	
10	39 2310 04	Flanged Bolt	2	
11	DK 1614 23	Bracket LH Engine Hanger	1	
12	DK 1614 24	Bracket RH Engine Hanger	1	
13	59 0400 17	Hex HD Bolt Flanged - M8	1	
14	39 2311 04	Hex HD Bolt / Flange - M8	1	

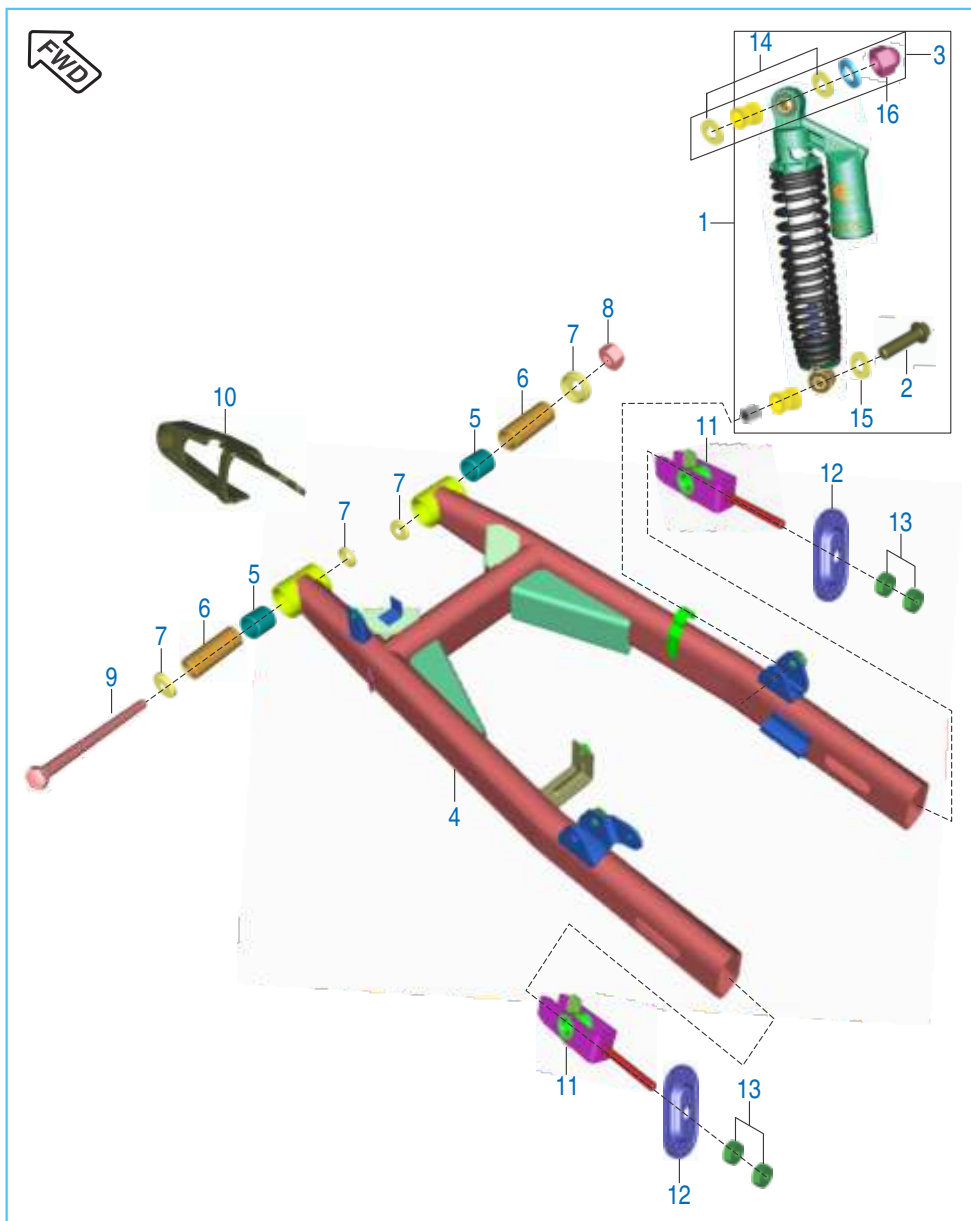

Swing Arm / Rear Shock Absorber

No.	Part No.	Description	Qty.	Remarks
1	DK 1710 14	Rear Shock Absorber	2	Refer Kit Details
2	DG 1710 38	Bolt Pre-coated	2	
3	36 DK00 12	Kit Bush Rear Shock Absorber	1	
4	DK 1710 11	Swing Arm Assembly	1	
5	DG 1710 18	Needle Bearing	2	
6	DK 1710 06	Sleeve for Swing Arm	2	
7	DG 1710 19	Seal Oil for Swing Arm	4	
8	DH 1710 19	'U' Nut Swing Arm	1	
9	DK 1710 03	Shaft Swing Arm	1	
10	DG 1710 34	Chain Slider Guard	1	
11	DJ 1710 44	Adjuster Chain	2	
12	JM 1710 04	Cap Chain Adjuster	2	
13	DG 1710 22	Hexagon Nut	4	
14	39 0714 11	Washer Plain	4	
15	KD AB08 16	Washer Plain Small	2	
16	39 2366 15	Domed Cap Nut - M12	2	

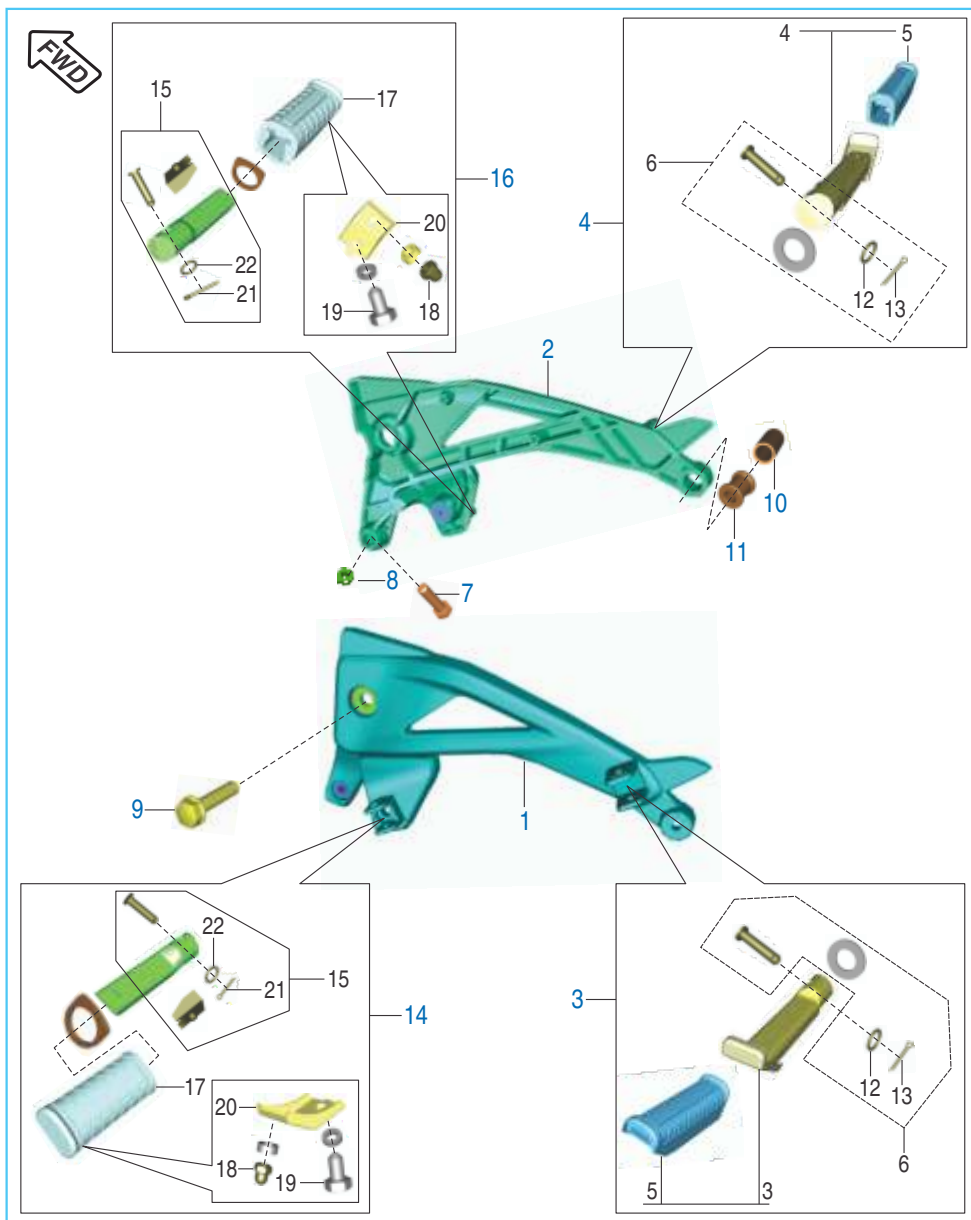


Rider & Pillion Foot Rest

No.	Part No.	Description	Qty.	Remarks
1	56 DJ3X 1Y	Holder Step LH - Gray Matte Slate	1	
2	56 DJ3Y 1Y	Holder Step RH - Gray Matte Slate	1	
3	DJ 1611 28	Pillion Step Assembly Complete LH	1	
4	DJ 1611 29	Pillion Step Assembly Complete RH	1	
5	DJ 1611 22	Rubber Pillion Step	2	
6	36 DK00 13	Kit Hardware Pillion	2	Refer Kit Details
7	39 1069 01	Hexagonal head screw	2	
8	39 0292 15	Nut	2	
9	39 1714 04	Flanged Bolt	2	
10	DH 1611 57	Tube Silencer Mounting	2	
11	DH 1611 00	Damper Silencer Mounting	1	
12	30 1410 31	Ring O	2	
13	KH AA32 25	Pin Cotter	2	
14	DJ 1611 26	Main Step LH Assembly	1	
15	36 DK00 13	Kit Hardware Main Step	2	Refer Kit Details
16	DJ 1611 27	Main Step RH Assembly Complete	1	
17	DH 1610 53	Rubber Main Step	2	
18	39 0963 15	Domed Cap Nut M-8	2	
19	22 1504 51	Bolt Hex Head	2	
20	DH 1610 56	Plate Complete Lower Main Step	2	
21	39 0784 08	Pin Split	2	
22	30 1410 31	Ring O	2	

Mudguard - Front & Rear



No.	Part No.	Description	Qty.	Remarks
1	DJ 1610 69	Nail Cable guide	1	Fender Front Mtg. For Cables
2	DK 1610 98	Brace Fender	1	
3	59 0400 40	Step Bolt	4	
4	DS 1611 25	Cable Guide	1	
5	DK 1613 38	Fender Rear Front	1	
6	39 1680 04	Flange Bolt	2	
7	39 0711 11	Plain Washer	4	
8	39 0798 15	Nut Hexagon With Flange M6	4	
9	DK 1610 85	Fender Rear	1	
10	39 1680 04	Flange Bolt	2	

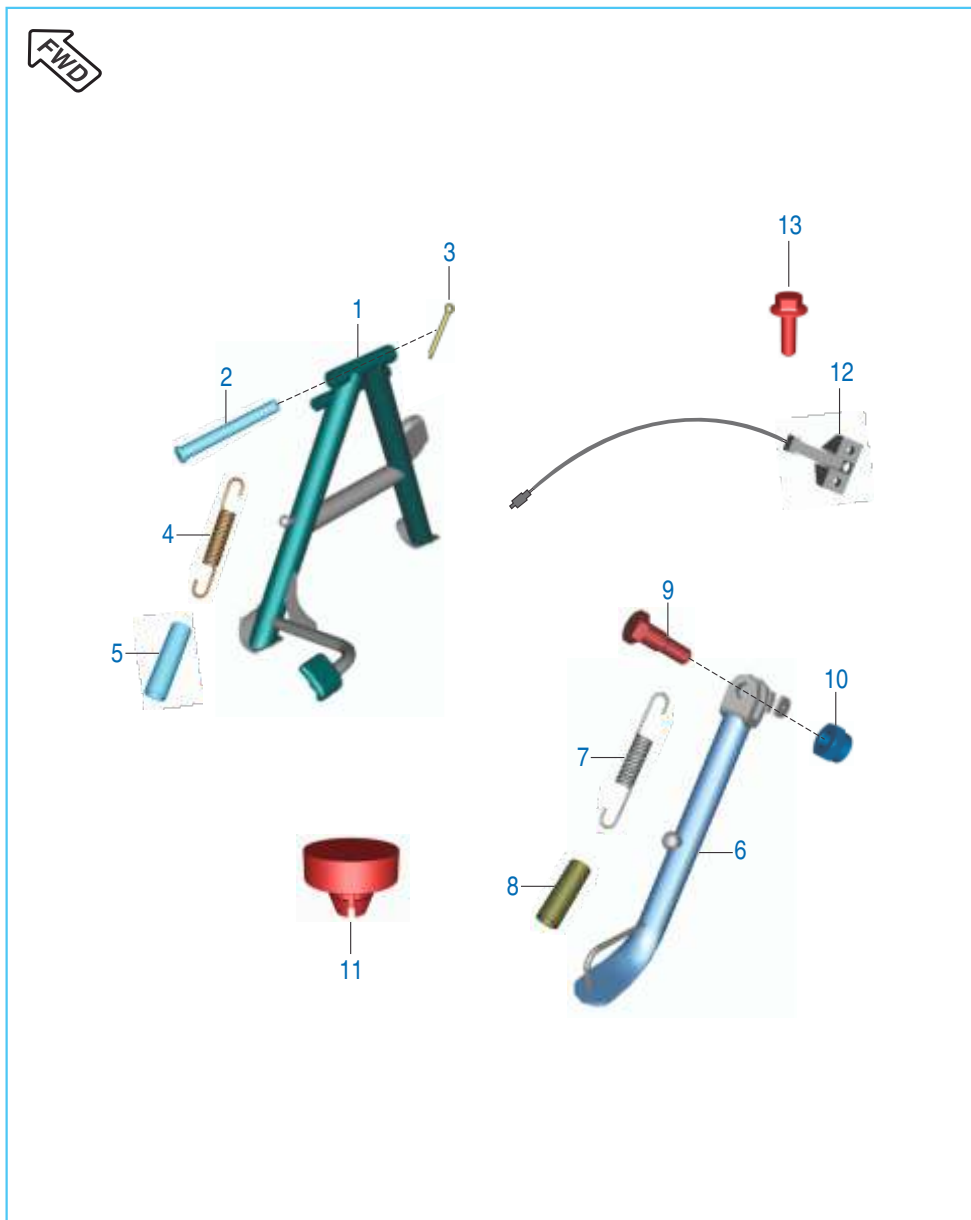

Center & Side Stand Assembly


No.	Part No.	Description	Qty.	Remarks
1	DK 1611 22	Stand Center	1	
2	30 1611 57	Shaft Stand	1	
3	39 0787 08	Pin Cotter	1	
4	DH 1611 21	Spring Main Stand	1	
5	DH 1612 39	Cover Spring Center Stand	1	
6	JC 1610 17	Stand Side	1	
7	DH 1610 66	Spring Side Stand	1	
8	DH 1612 40	Cover Spring Side Stand	1	
9	DF 1611 02	Bolt	1	
10	39 0422 15	Nut	1	
11	DH 2010 65	Magnet Assembly	1	
12	JC 2010 39	Switch Side Stand	1	
13	39 2060 04	Flanged Bolt M5	2	

Tyre / Tube / Rim




No.	Part No.	Description	Qty.	Remarks
1	JC 1510 13	Wheel Rim Front (1.85 x 17)	1	
2	DK 1510 39	Tyre Front Tubeless	1	Not Serviceable
3	DK 1510 50	Wheel Rim Rear (2.5 x 17)	1	
4	DK 1510 40	Tyre Rear Tubeless	1	Not Serviceable
5	DK 1510 26	Valve Tubeless Tyre	2	

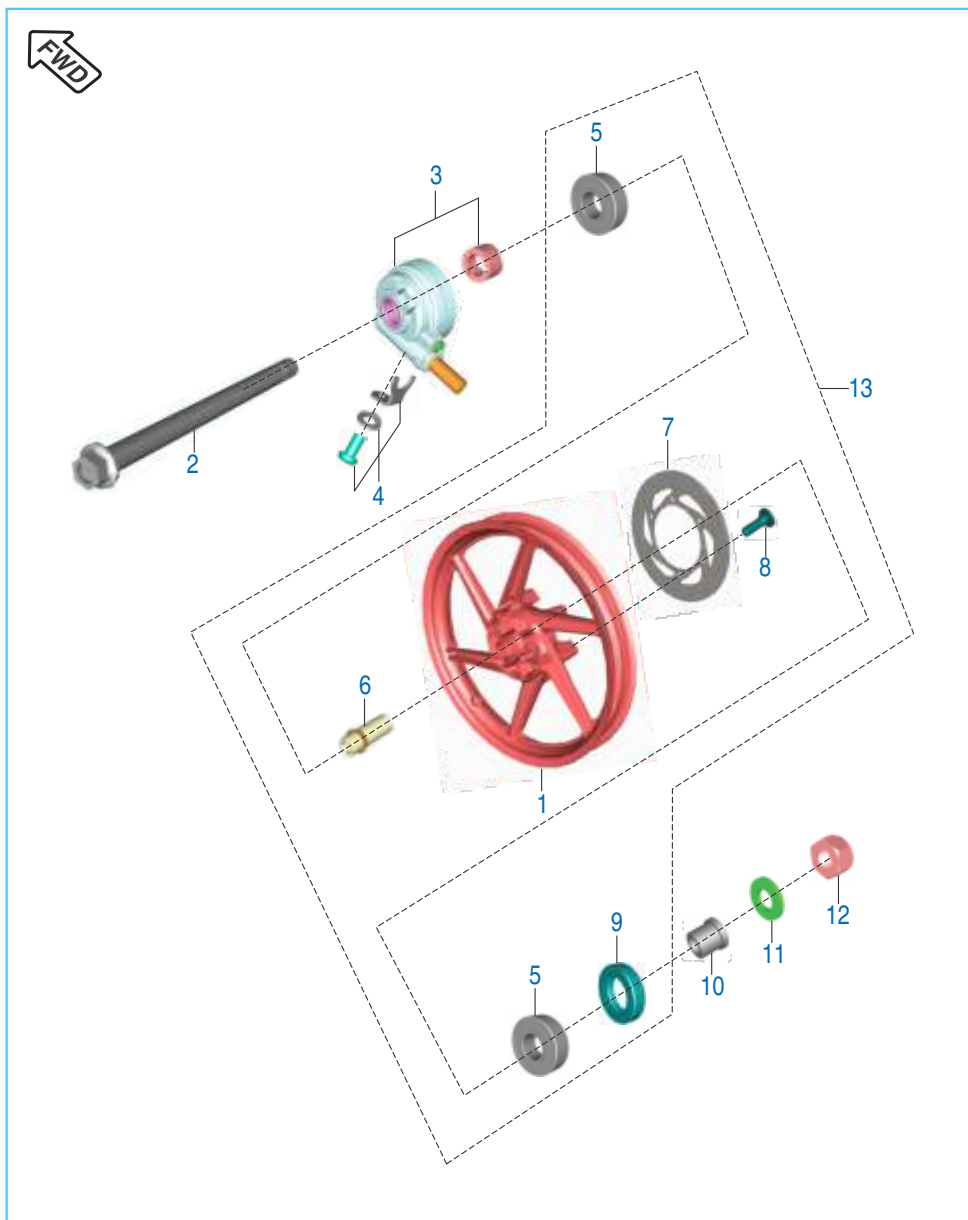Front Wheel Assembly




No.	Part No.	Description	Qty.	Remarks
1	JC 1510 13	Wheel Rim Front 1.85 x 17	1	
2	DK 1510 95	Front Axle	1	
3	DK 2010 98	Sensor Speedometer	1	
4	JC 2010 50	Hardware Kit	1	
5	KP BC62 02	Bearing Ball	2	
6	DK 1510 28	Spacer Assembly	1	
7	DK 1510 96	Disc Front Black	1	
8	PD 1318 03	Disc Mounting Bolt	6	
9	DG 1510 05	Seal Oil	1	
10	DG 1510 07	Collar	1	
11	DG 1510 08	Plain Washer	1	
12	DH 1710 19	U Nut	1	
13	JC 1510 17	Front Wheel Assembly	1	

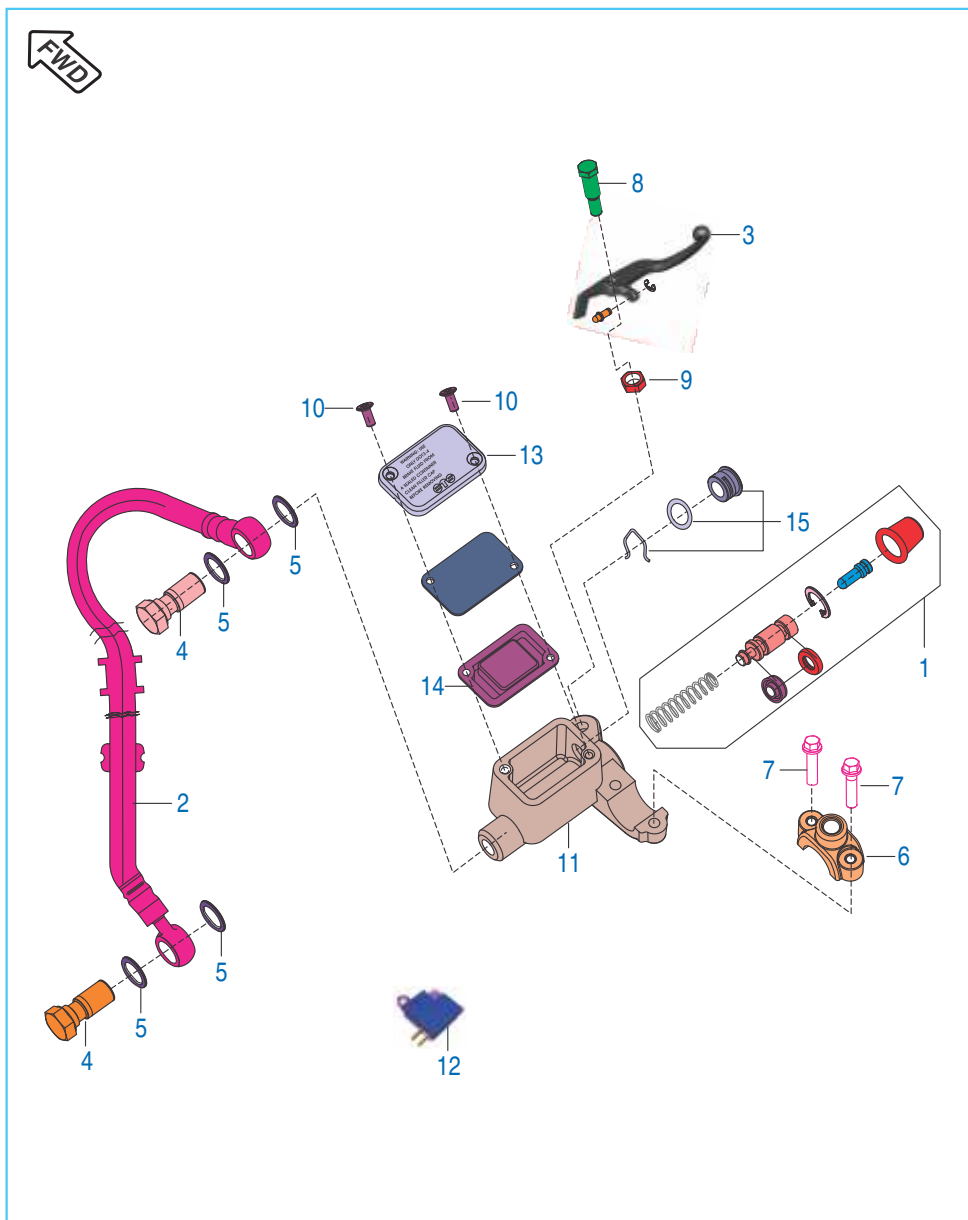Front Master Cylinder Assembly




No.	Part No.	Description	Qty.	Remarks
1	36 DH40 48	Major Kit - Master Cylinder	1	
2	DK 1510 57	Hose Brake Front	1	
3	DJ 1910 57	Lever Grip RH	1	
4	DK 1510 69	Banjo Bolt	2	
5	DE 1910 10	Washer Copper	4	
6	DE 1910 33	Clamp Holder RH	1	
	DK 1810 52	Clamp Holder RH	1	
7	DJ 1910 28	Bolt	2	
8	DJ 1910 29	Bolt Front Brake Lever	1	
9	DJ 1910 30	Nut Nyloc Brake Lever	1	
10	DE 1910 30	Screw	2	
11	DK 1510 62	Cylinder Master	1	
12	DJ 2011 00	Front Brake Switch	1	
13	DE 1910 29	Reservoir Cover	1	
14	DE 1910 28	Diaphragm	1	Not Serviceable
15	DE 1910 36	Oil Window Kit	1	

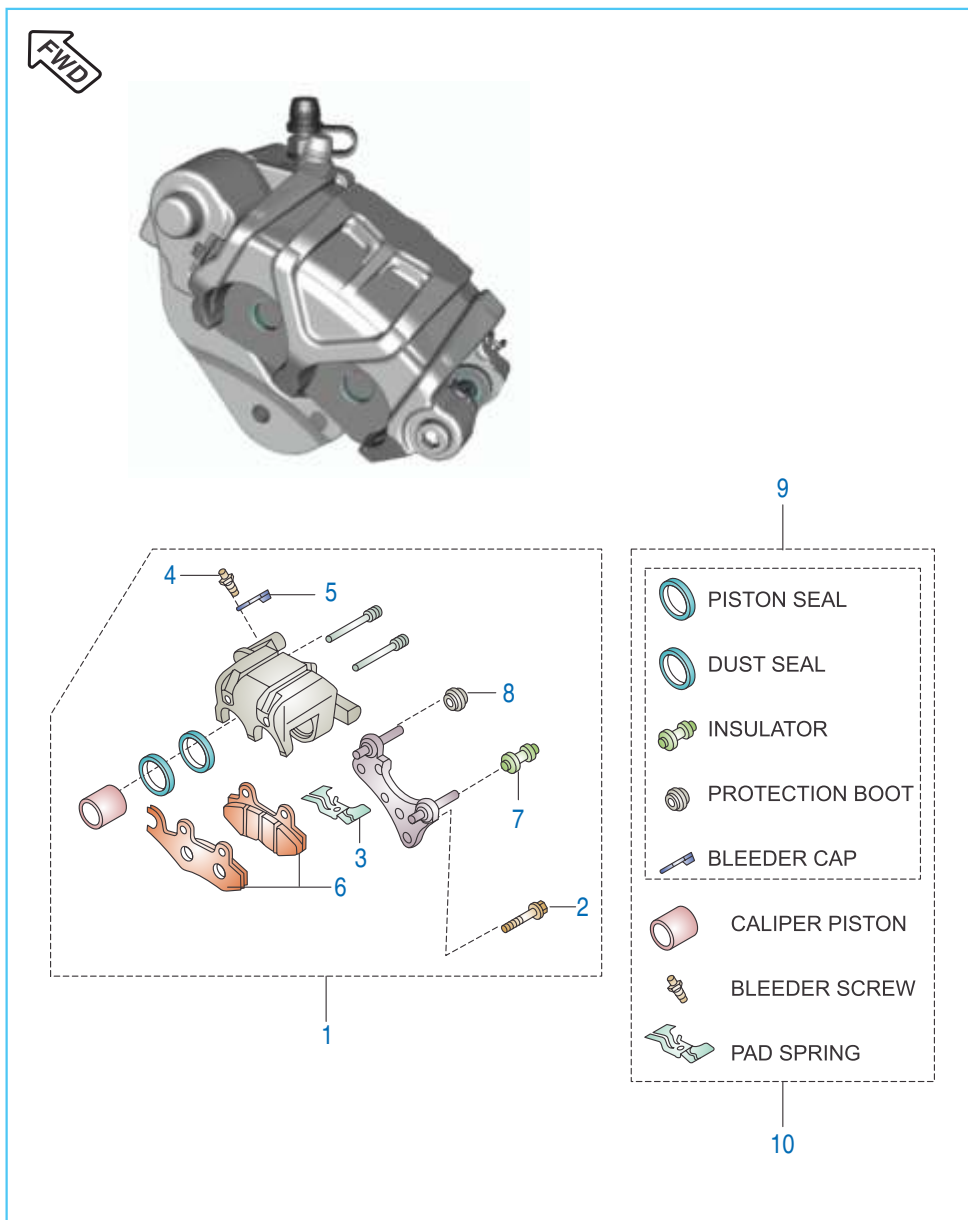Front Disc Brake




No.	Part No.	Description	Qty.	Remarks
1	DK 1510 54	Caliper Assembly Front	1	
2	39 1769 04	Bolt Flanged	2	
3	DE 1510 48	Pad Spring	1	
4	DE 1510 46	Bleeder Screw	1	
5	DE 1510 47	Bleeder Cap	1	
6	DE 1510 37	Disc Pad Set	1	
7	DE 1510 43	Insulator	1	
8	DE 1910 27	Protection Boot	1	
9	36 DK00 65	Minor Kit - Caliper	1	
10	36 DK00 66	Major Kit - Caliper	1	

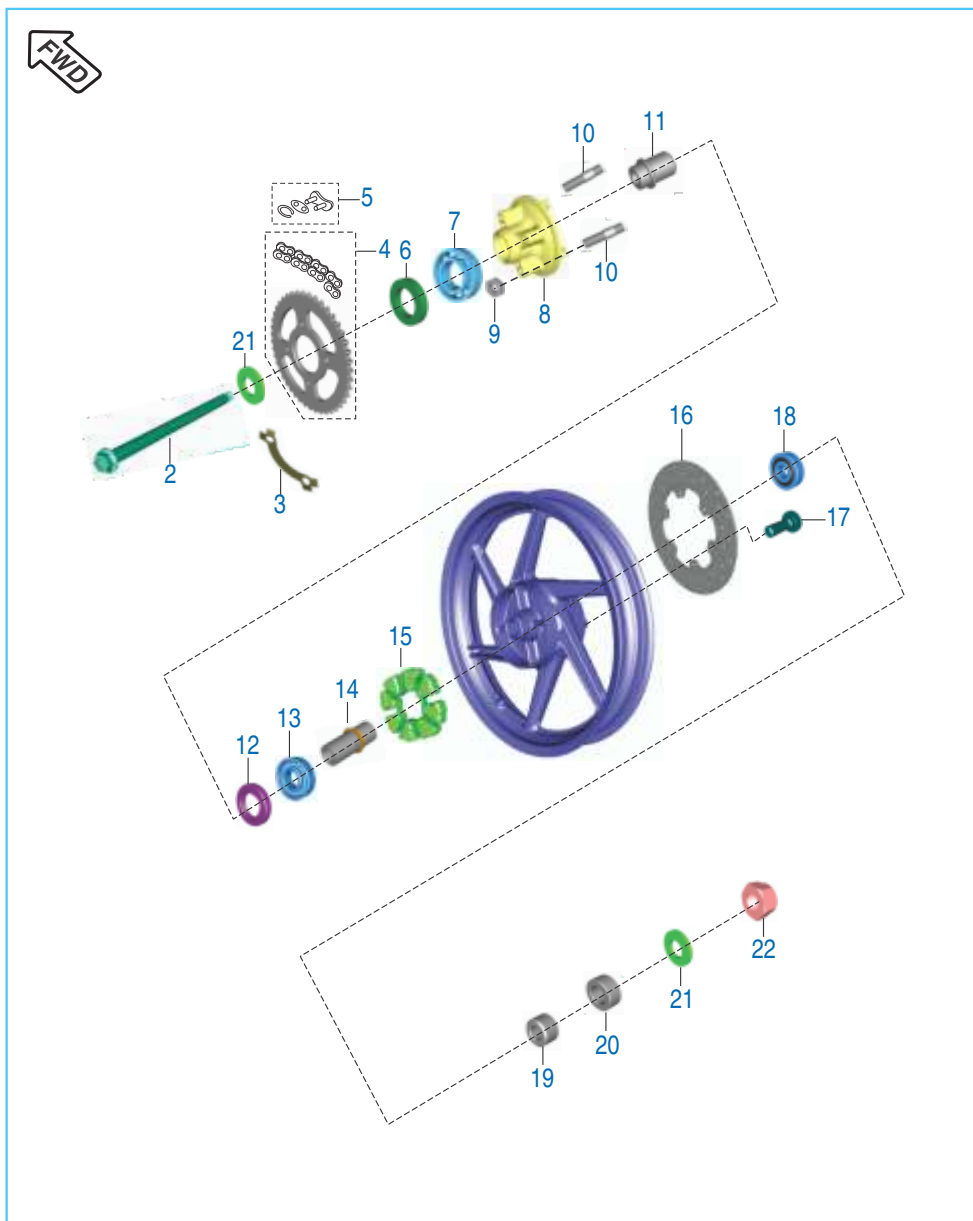Rear Wheel Assembly




No.	Part No.	Description	Qty.	Remarks
1	DK 1510 50	Wheel Rim Rear 2.5 x 17	1	Refer Kit Details
2	DK 1510 09	Axel rear	1	
3	DS 1510 74	Washer lock	6	
4	36 DK00 40	Chain sprocket kit	1	
5	DS 1510 74	Drive chain lock	1	
6	DK 1510 12	Oil Seal	1	
7	KP AC60 05	Ball Bearing	1	
8	JC 1510 16	Coupling	1	
9	39 0794 15	Nut Hexagon M10 x 1.25	4	
10	DS 1510 73	Stud	4	
11	DK 1510 15	Sleeve	1	
12	30 1510 82	Seal oil	1	
13	KP BC62 02	Ball bearing	1	
14	DK 1510 22	Collar bearing Assembly	1	
15	JG 1312 19	Coupling Rubber	1	
16	DK 1510 97	Disc Rear Black	1	
17	39 2038 04	Hexagon Socket Head Bolt - M6	6	
18	KP BC63 02	Ball bearing	1	
19	DK 1510 81	Spacer I	1	
20	DK 1510 82	Spacer II	1	
21	DG 1510 08	Washer	2	
22	DH 1710 19	"U" nut	1	

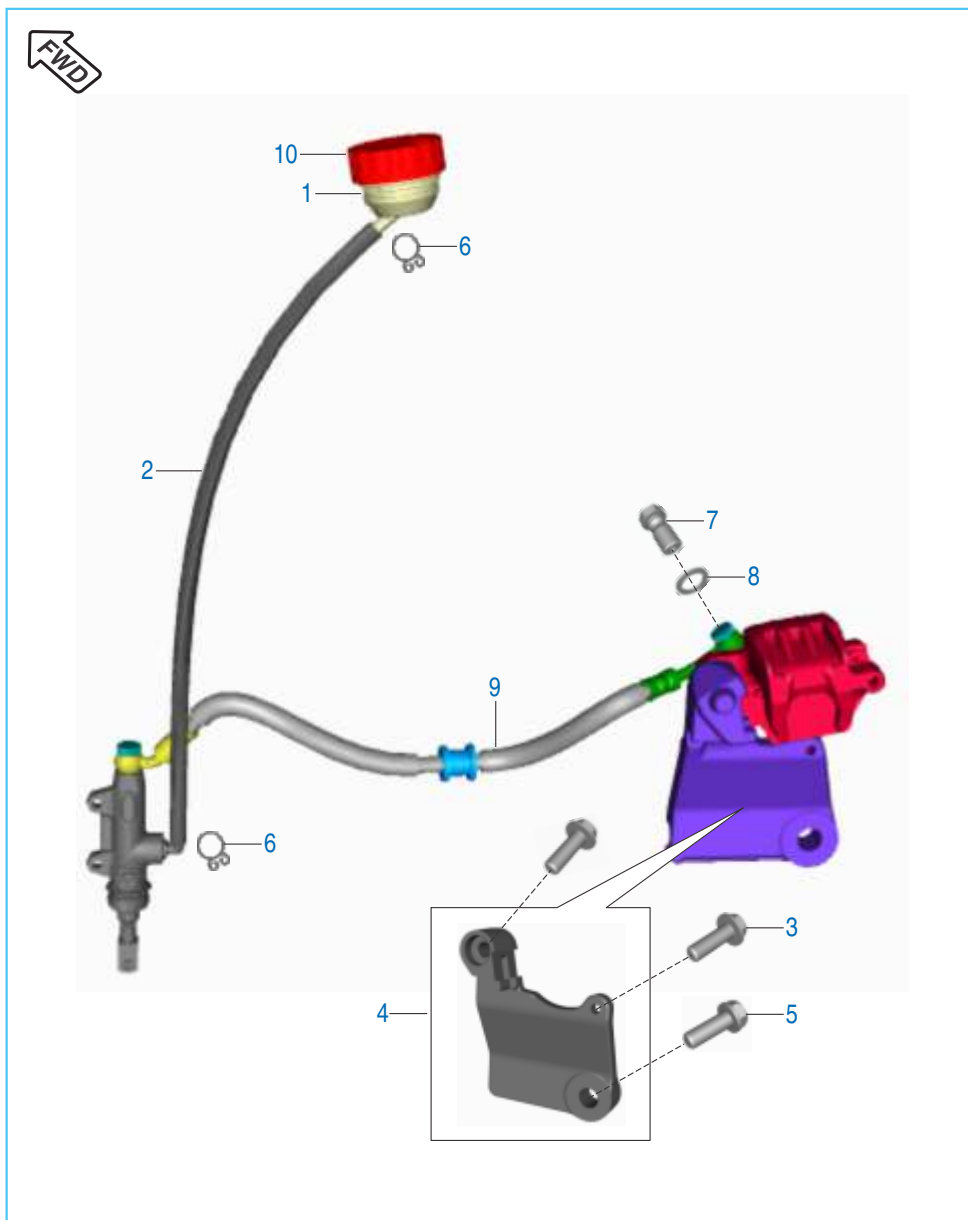Rear Disc Brake




No.	Part No.	Description	Qty.	Remarks
1	DK 1510 33	Reservoir Rear Disc Brake	1	
2	DK 1510 34	Reservoir Tube Rear Disc	1	
3	39 2310 04	Flange Bolt	2	
4	DK 1510 86	Caliper Bracket	1	
5	39 2481 04	Bolt Hexagon Head With Flange M8	1	
6	DK 1510 63	Clip For Reservoir Tube	2	
7	DK 1510 69	Banjo Bolt	1	
8	DE 1910 10	Copper Washer	1	
9	DK 1510 84	Hose Brake Rear	1	
10	DK 1510 45	Reservoir Cap	1	

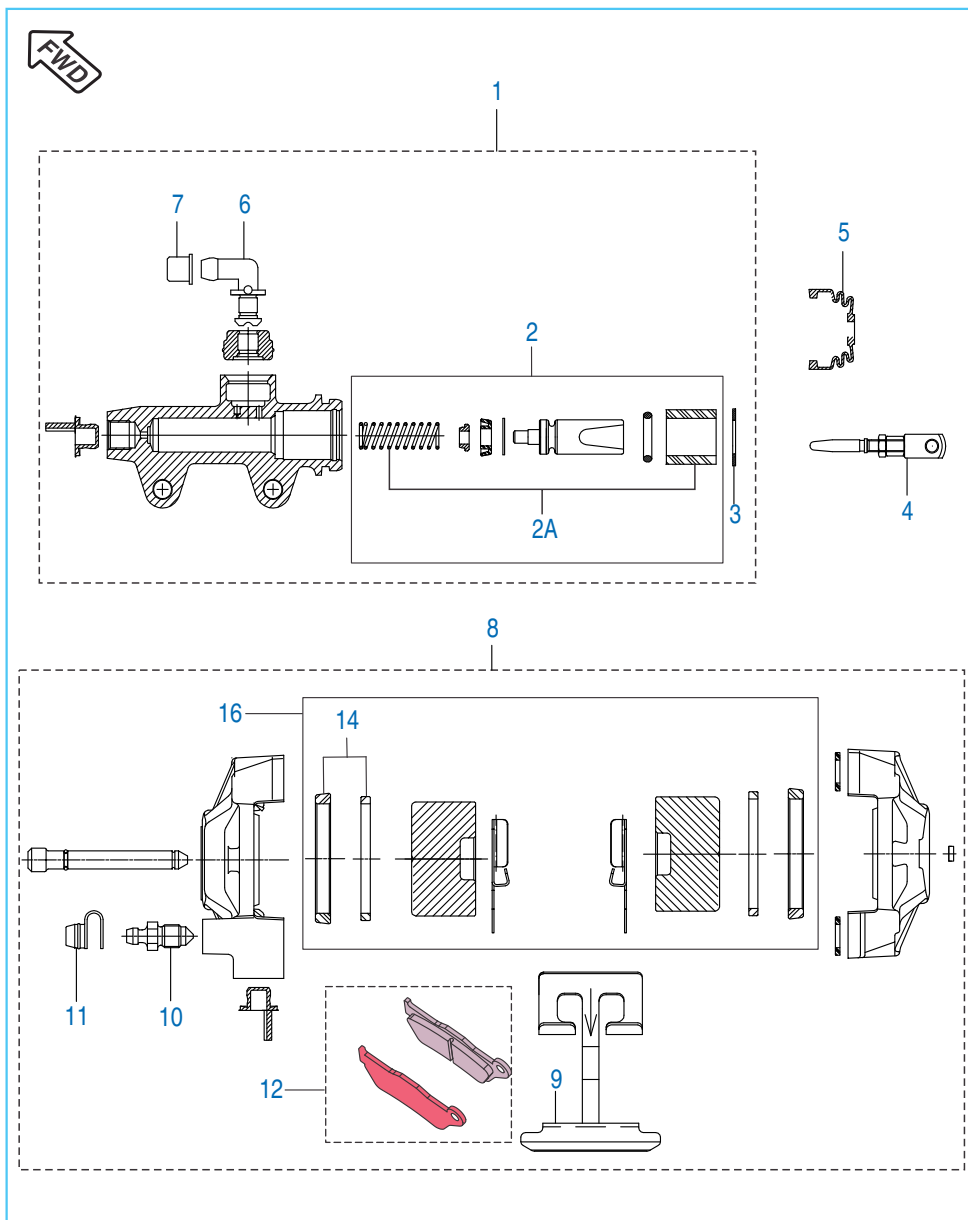Rear Disc Brake - Master Cylinder & Caliper




No.	Part No.	Description	Qty.	Remarks
1	DK 1510 31	Master Cylinder	1	
2	36 DK00 69	Major kit caliper	1	
2A	36 DK00 70	Minor kit caliper	1	
3	DK 1510 78	Circlip	1	
4	36 DK00 71	Push Rod	1	
5	DK 1510 42	Boot	1	
6	DK 1510 76	Connector	1	
7	DK 1510 77	Cap	1	
8	DK 1510 83	Caliper Assembly. Rear	1	
9	DK 1510 41	Spring Pad	1	
10	DE 1510 46	Bleeder Screw	1	
11	DE 1510 47	Bleeder cap	1	
12	DK 1510 85	Disc Pad Set	1	
13	DK 1510 88	Piston Kit (major kit) floating caliper	1	
14	36 DK00 67	Kit Caliper Minor with Grease	1	
15	DK 1510 90	Insulator Kit floating caliper	1	
16	36 DK00 68	Kit Caliper Major with Grease	1	F-31- 03.12.2012

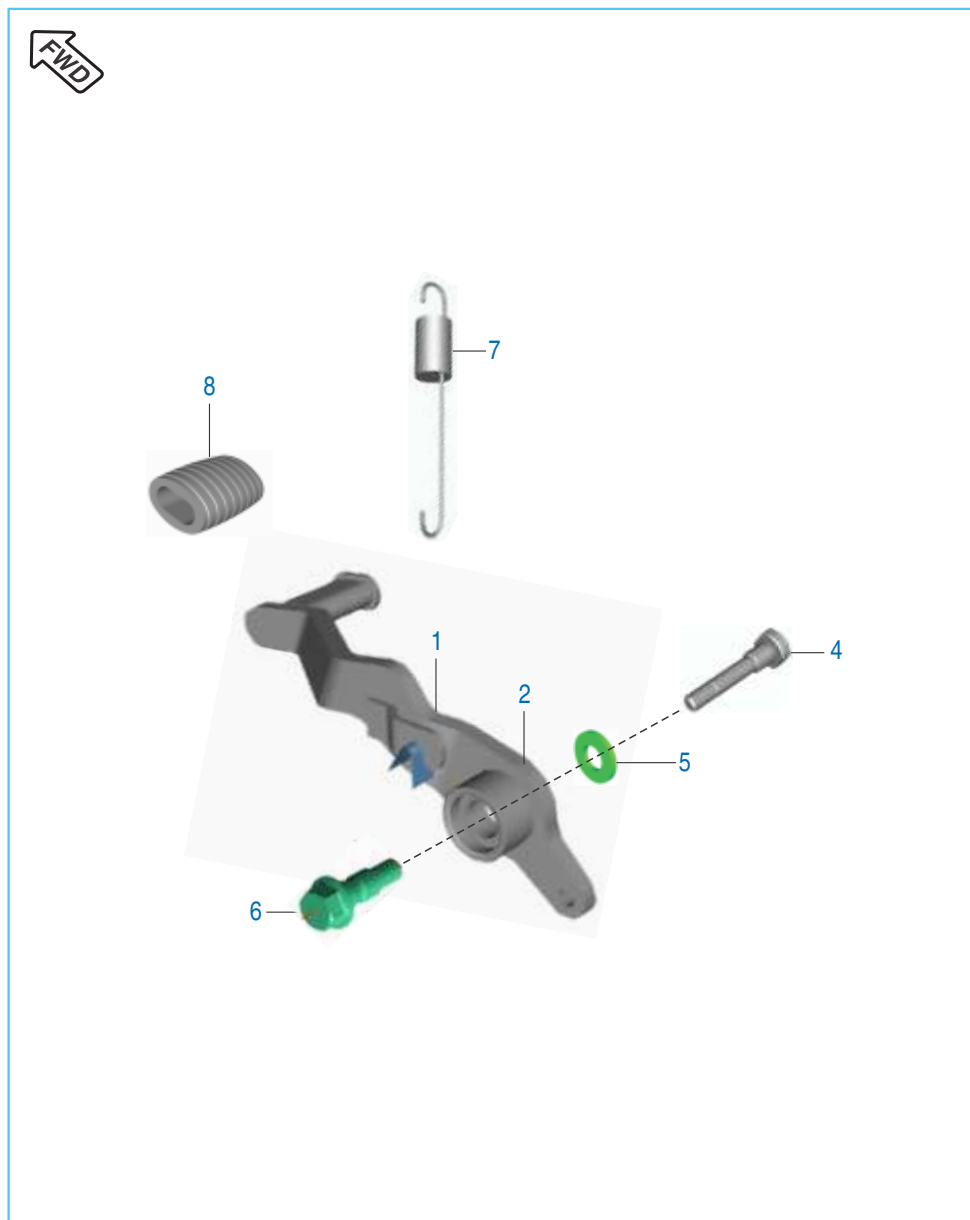Rear Brake Pedal




No.	Part No.	Description	Qty.	Remarks
1	DK 1910 12	Lever Brake Pedal	1	
2	DK 1011 84	Boss Lever Change	1	
3	DG 1013 39	Damper	1	
4	DK 1011 86	Bolt Pivot Lever Change	1	
5	DK 1011 85	Washer Pivot Bolt	1	
6	DK 1011 87	Collar Pivot Bolt	1	
7	DK 1910 13	Spring Brake Pedal	1	

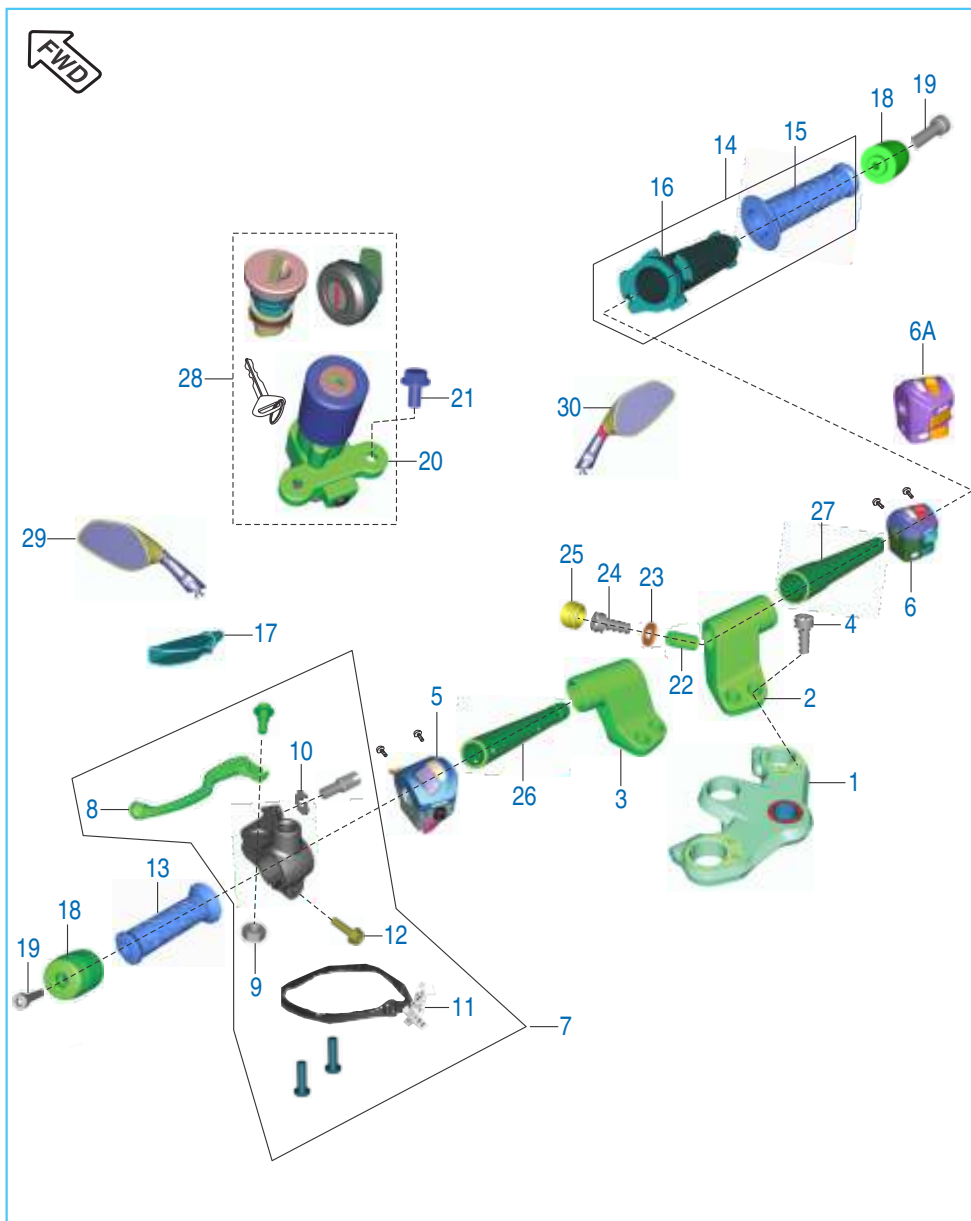


Handle Bar Assembly

No.	Part No.	Description	Qty.	Remarks
1	56 DK33 Y9	Upper Bracket	1	AHO Model
2	56 DK31 Y9	Holder handle RH Black	1	
3	56 DK32 Y9	Holder handle LH Black	1	
4	DG 1810 08	Socket Bolt	4	
5	DT 4014 03	Control Switch LH	1	
6	DT 4014 04	Control Switch RH	1	
6A	DT 4014 07	Control Switch RH	1	
7	DK 1910 23	Lever & Support Holder Assembly	1	
8	DJ 1910 55	Lever LH	1	
9	39 1184 15	Nyloc Nut - M5 x 0.8	1	
10	30 1910 17	Check Nut	1	
11	DK 2010 83	Clutch Switch	1	
12	39 1553 04	Bolt Flanged	1	
13	DH 1910 07	Grip LH	1	
14	DH 1910 14	Grip Assembly RH	1	
15	DH 1910 08	Grip RH	1	
16	DH 1910 17	Pipe throttle	1	
17	DS 1910 52	Lever Boot LH	1	
18	DK 1810 43	Handle bar weight	2	
19	39 2427 04	Hex. Socket HD Cap Screw	2	
20	DK 2010 15	Ignition Switch Assembly	1	
21	39 1680 04	Flange Bolt	2	
22	DK 1810 31	Bush Silent Handle Bar Tube	2	
23	39 1180 11	Washer	2	
24	DK 1810 79	Bolt	2	
25	DK 1810 36	Plug Handle Holder	2	
26	DK 1810 46	Handle Bar Tube LH	1	
27	DK 1810 47	Handle Bar Tube RH	1	
28	DK 1810 34	Lock Set 4 In One With Two Track Key	1	
29	DK 2210 14	Mirror Assembly LH	1	
30	DK 2210 15	Mirror Assembly RH	1	

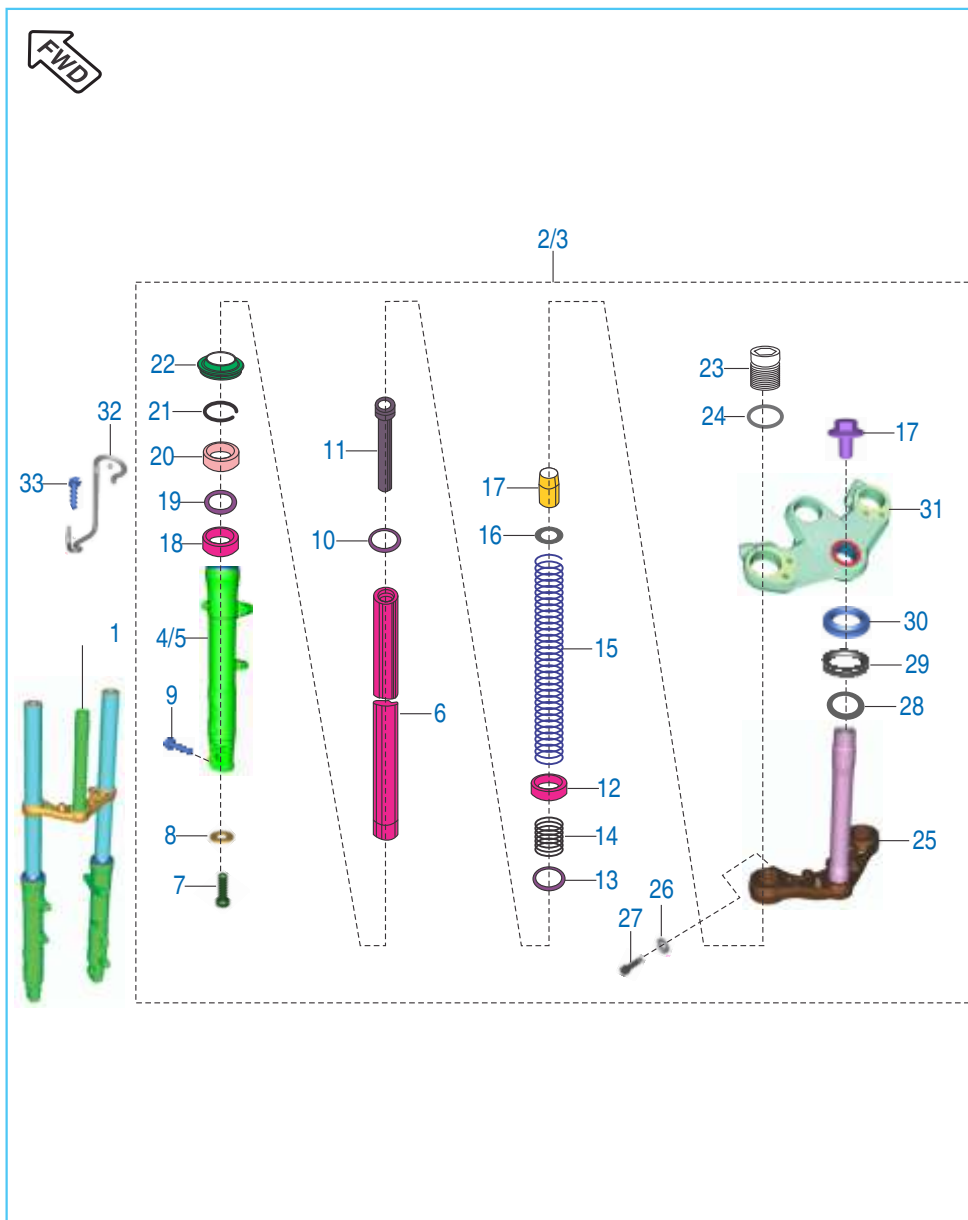Front Fork Assembly




No.	Part No.	Description	Qty.	Remarks
1	DK 1810 72	Fork Front	1	
2	DK 1810 68	Leg Assembly LH	1	
3	DK 1810 69	Leg Assembly RH	1	
4	DK 1810 56	Outer Tube LH	1	
5	DK 1810 57	Outer Tube RH	1	
6	DK 1810 70	Fork Pipe Spinning	2	
7	DK 1810 06	Socket Headed Bolt - M10 x 1.5 x 35	2	
8	DK 1810 07	Copper Washer	2	
9	DK 1810 08	Flange Bolt - M8 x 1.25 x 45	1	
10	DK 1810 09	Cap Oil Lock	2	
11	DK 1810 10	Seat Pipe	2	
12	DK 1810 11	Slide Bush	2	
13	DK 1810 12	Piston Ring	2	
14	DK 1810 13	Rebound Spring	2	
15	DK 1810 73	Main Spring	2	
16	DK 1810 15	Washer	2	
17	DK 1810 71	Spacer Tube	2	
18	DK 1810 17	Guide Bush	2	
19	DK 1810 18	Washer Seal	2	
20	DK 1810 19	Oil Seal	2	
21	DK 1810 20	Oil Seal Stopper	2	
22	DK 1810 21	Inner Dust Seal	2	
23	DK 1810 22	Bolt Fork	2	
24	DK 1810 23	'O' Ring	2	
25	DK 1810 24	Under Bracket Assembly	1	
26	DK 1810 25	Spring Washer	2	
27	DK 1810 28	Hex Bolt - M10 x 1.5 x 40	2	
28	DG 1810 03	Washer Plain	1	
29	DG 1810 04	Oil Seal	1	
30	DG 1810 05	Bearing Cone	1	Included In Kit No. : 36 DV00 07
31	56 DK33 Y9	Upper Bracket	1	
32	DK 1810 40	Hose Clamp	1	
33	59 0400 05	Bolt	1	

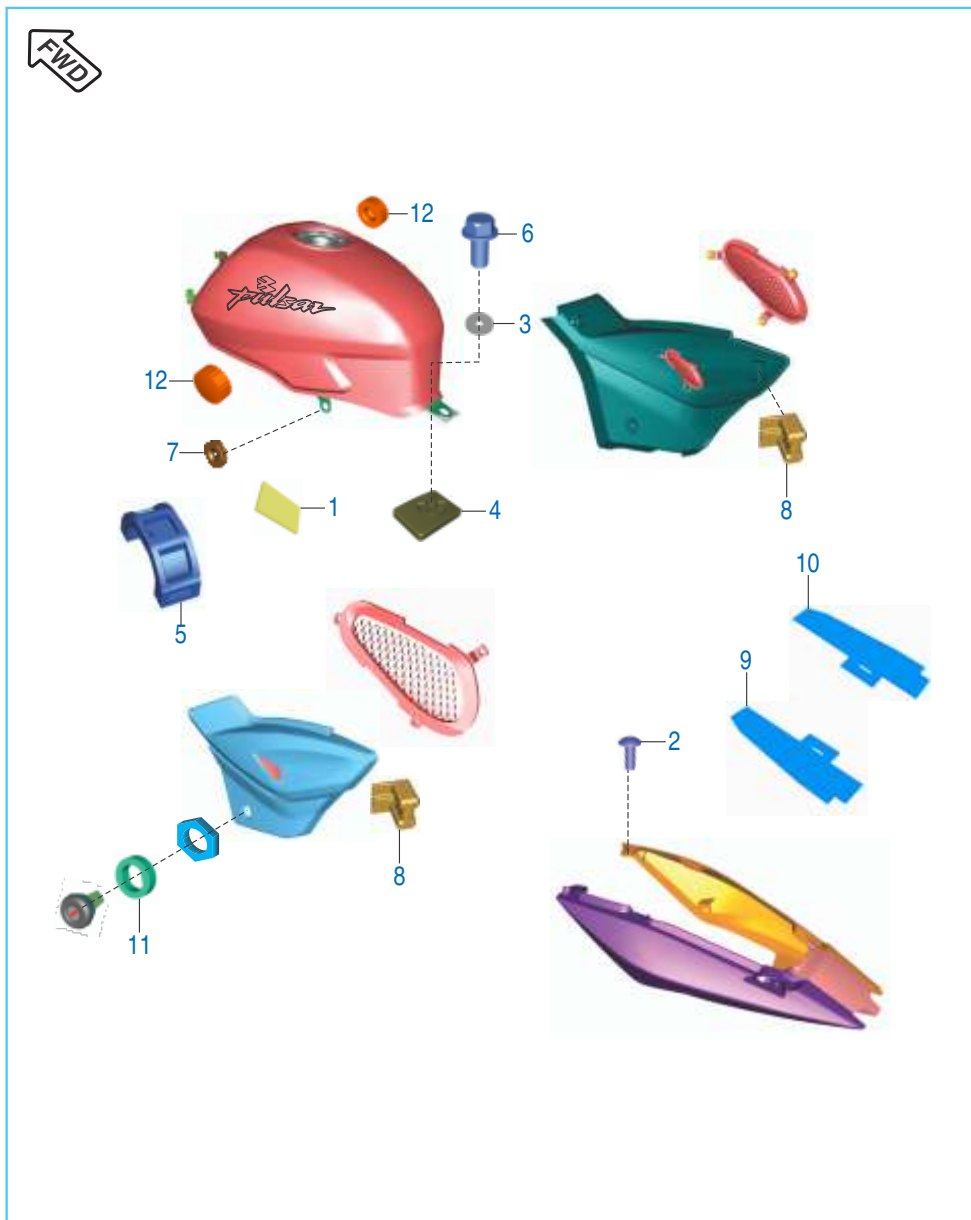

Fittings Petrol Tank Spoiler, Side Cover & Cover Seat


No.	Part No.	Description	Qty.	Remarks
1	JW 1710 07	Dual Lock Tape 3M - Size 15 x 20	2	
2	DG161121	Screw	2	
3	39 2424 11	Plain Washer	1	
4	DH 1410 23	Damper Rear	1	
5	DK 1410 17	Damper Tank Middle	1	
6	39 1556 04	Flanged Bolt	1	
7	DH 1611 58	Grommet Side Cover Rear	2	
8	DH 1611 33	Grommet Side Cover Rear	2	
9	DK 1611 71	Rubber Flap For Seat Cowl LH	1	
10	DK 1611 72	Rubber Flap For Seat Cowl RH	1	
11	31 1610 18	Damper	1	
12	DJ 1410 08	Damper Front	2	

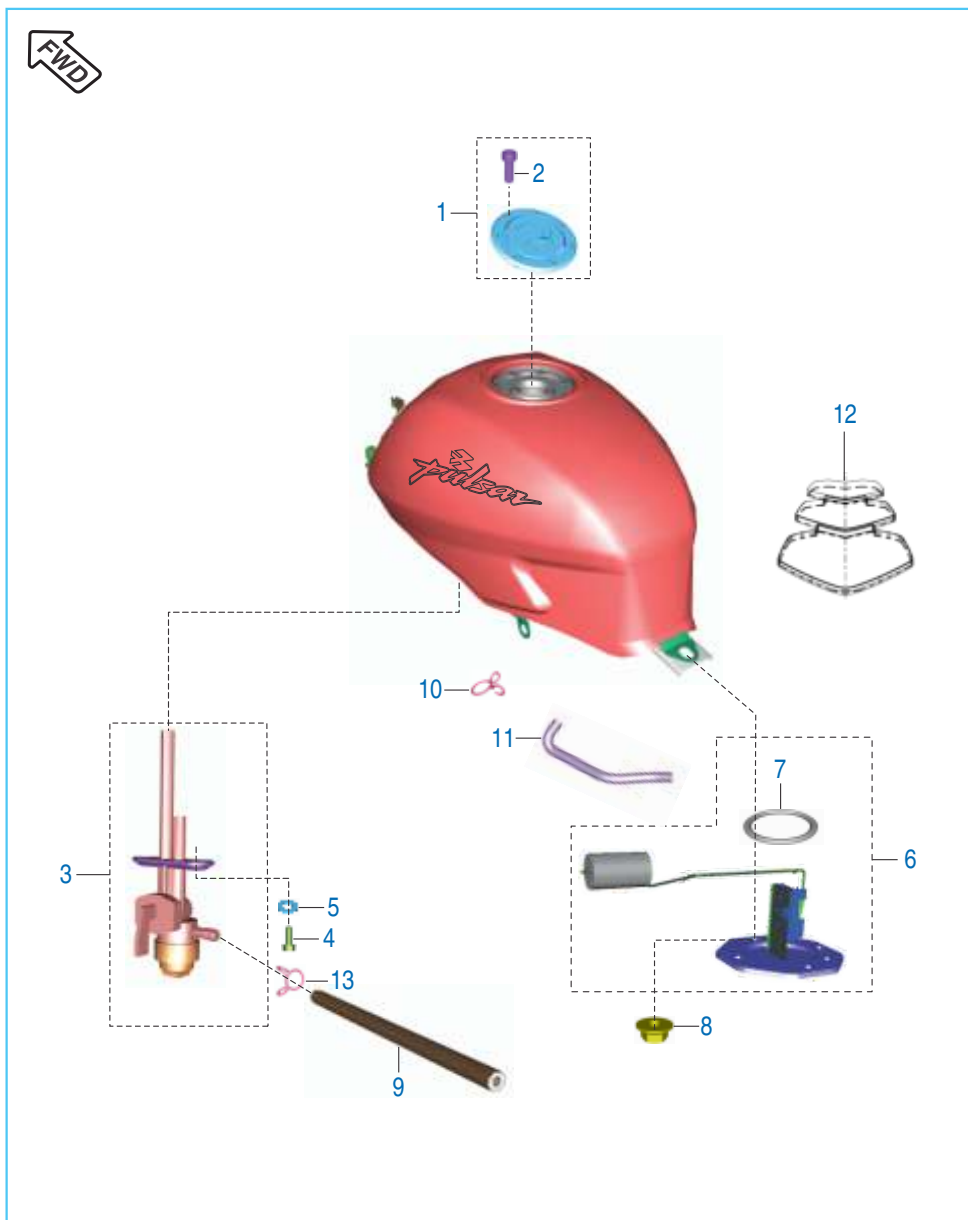Cap Tank & Gauge Fuel




No.	Part No.	Description	Qty.	Remarks
1	DK 1810 99	Lock Set EVAP Two TR	1	
2	KA CA05 16	Hex. Soc Hd. Cap Screw	7	
3	DJ 1410 56	Petrol Cock	1	
4	DD 1412 27	Bolt Flanged	2	
5	39 0740 11	Plain Washer	2	
6	DK 2010 65	Gauge Fuel (Tank Unit)	1	
7	39 2758 21	'O' Ring Fuel Gauge	1	
8	KC GA05 05	Nut Hex Flanged	4	
9	DJ 1410 78	Tube Fuel	1	
10	BA 1220 03	Pipe Clip	1	
11	DH 1410 24	Drain Tube	1	
12	DK 1410 15	Tank Pad	1	

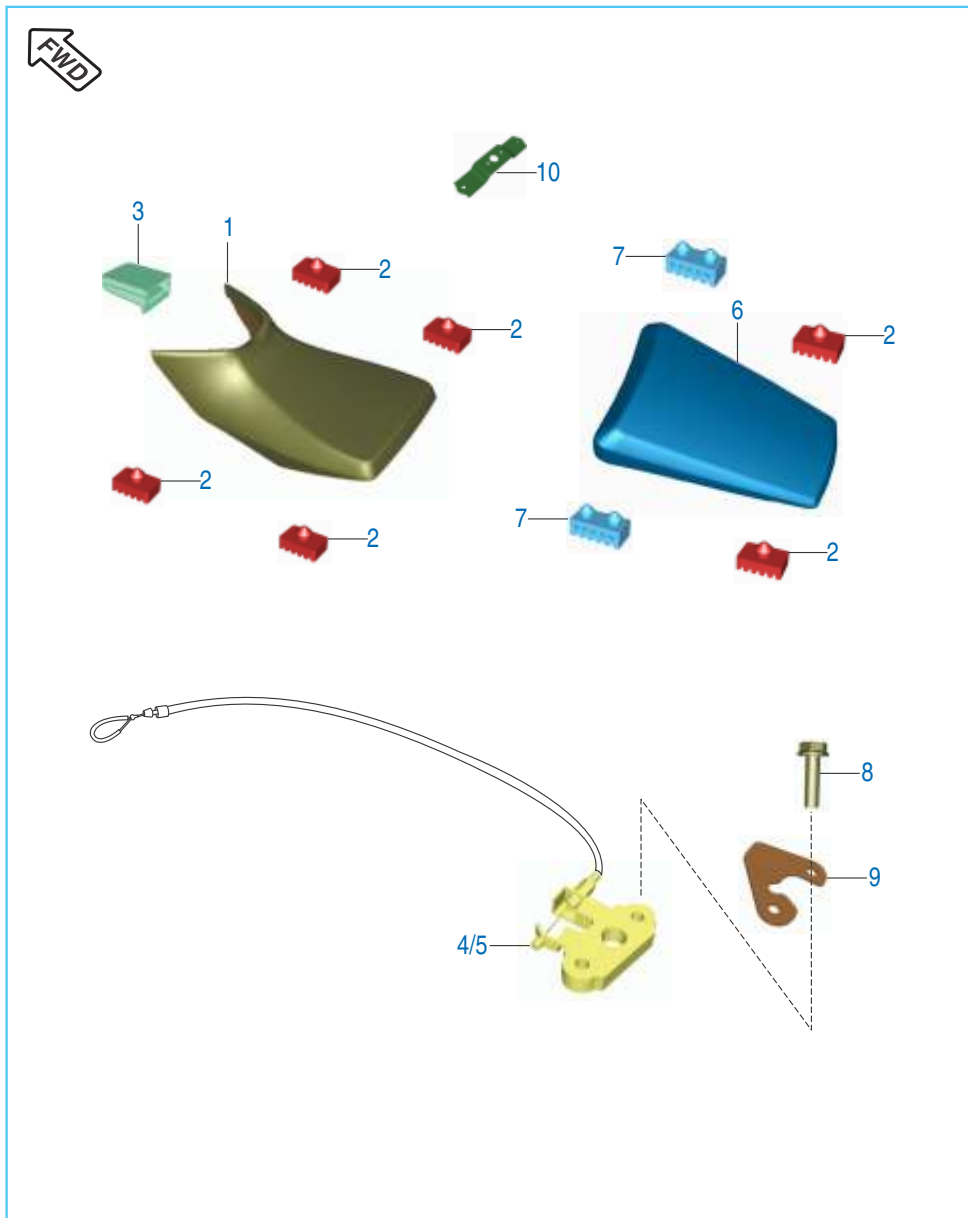Seat Assembly & Seat Lock




No.	Part No.	Description	Qty.	Remarks
1	DK 2110 12	Seat Assembly comp front	1	
2	DK 2110 09	Damper	4	
3	DK 2110 07	Damper Seat Front	1	
4	DH 1610 46	Lock Assembly seat front	1	
5	DK 2110 08	Lock Assembly seat rear	1	
6	DK 2110 14	Seat Assembly comp rear	1	
7	DS 2110 04	Damper Seat I	2	
8	39 1902 04	Bolt Flange	2	
9	DH 1612 33	Reinforcement Seat Lock	1	
10	DK 1614 22	Bracket Seat Lock - Front Loose	1	

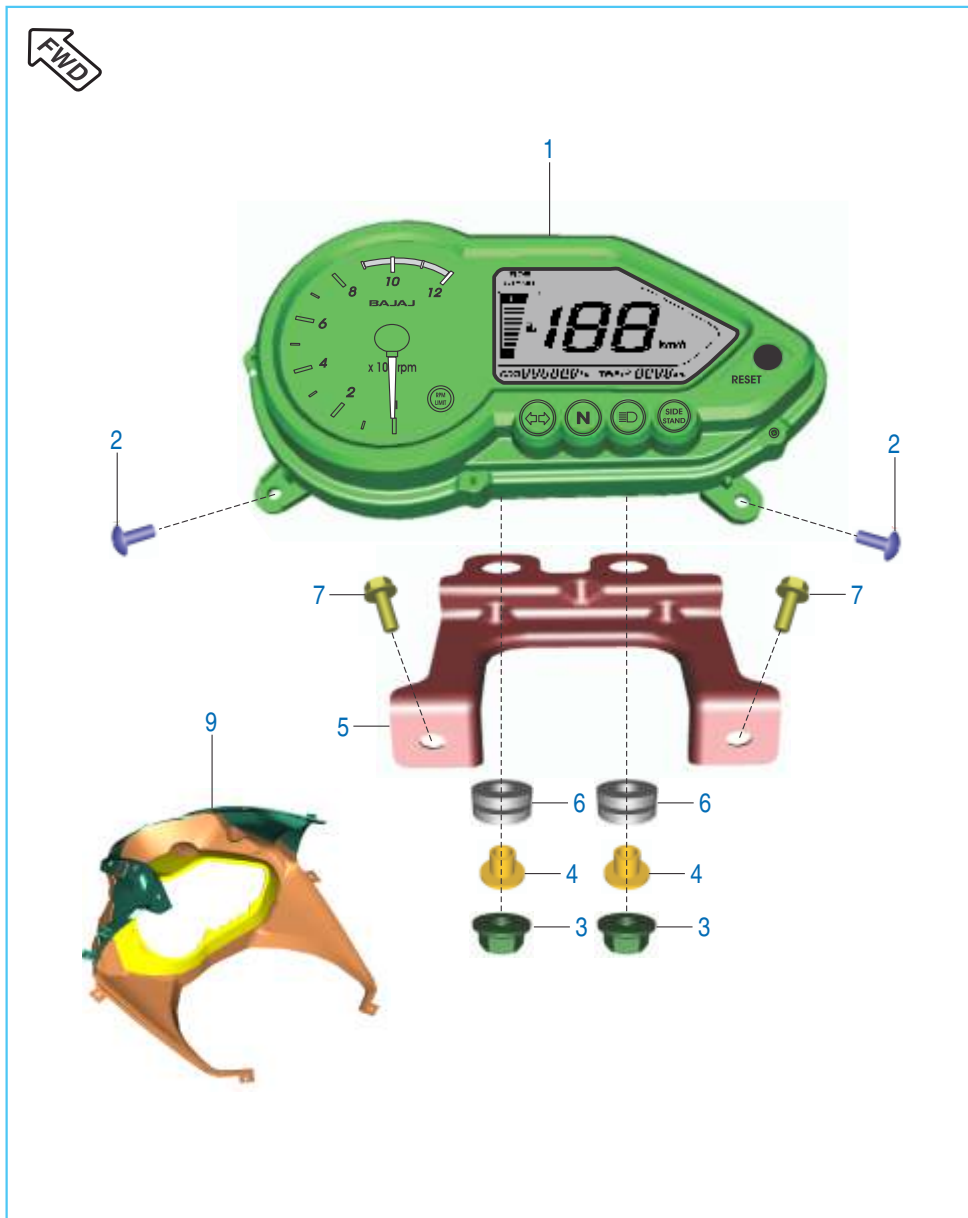Speedometer Assembly




No.	Part No.	Description	Qty.	Remarks
1	DK 1910 39	Speedometer Assembly	1	
2	39 1778 02	Self Tapping Screw	4	
3	39 1970 15	Nut Flange M8 (fairing Fit.)	4	
4	DK 1613 24	Sleeve Speedometer Support	2	
5	DK 1613 23	Bracket Speedometer Support	1	
6	DK 1610 81	Grommet Speedo Bracket	2	
7	LA D000 77	Bolt Flanged (Speedo Bracket Fit.)	2	
8	YD H190 02	Top cover with sealing ring	1	N.I.
9	DK 1610 73	Fairing Back Cover	1	

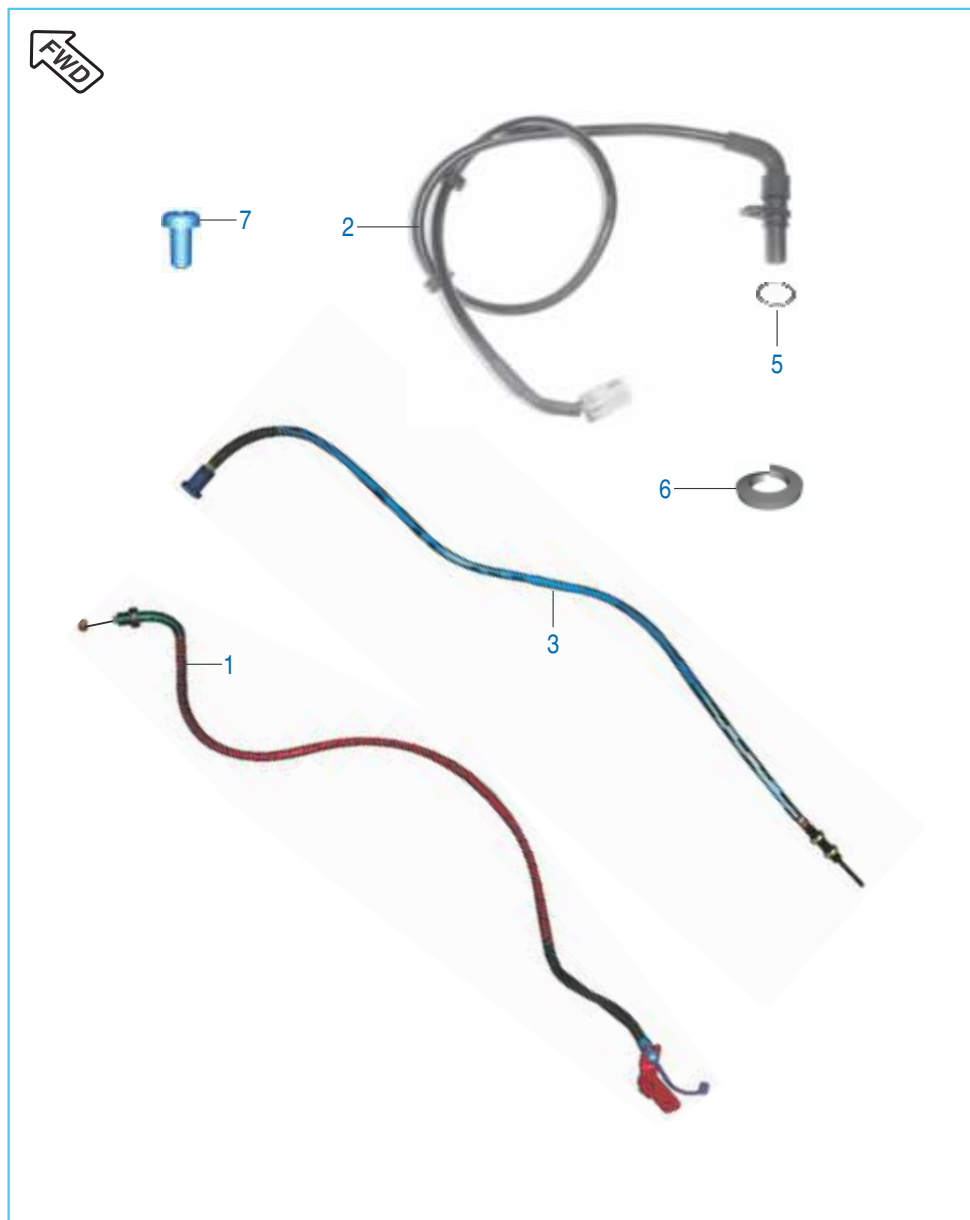Cables



No.	Part No.	Description	Qty.	Remarks
1	JC 1910 19	Cable Accelerator	1	
2	JC 1910 04	Cable Clutch	1	
3	DK 2010 98	Speed Sensor	1	(F) With Sleeve
4	JC 2010 46	Stopper	1	N.I.
5	59 2100 19	O-Ring	1	
6	39 0900 12	Washer Spring	1	
7	39 0840 01	Screw Pan Head	1	

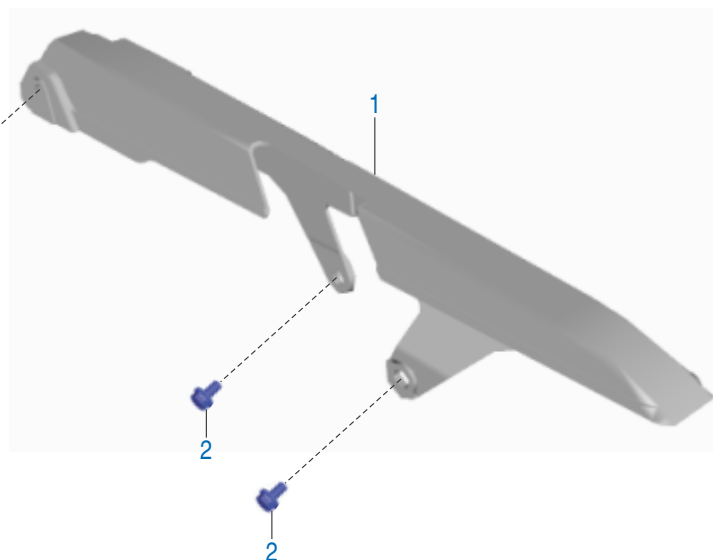
Chain Case



No.	Part No.	Description	Qty.	Remarks
1	DK 1612 50	Cover Chain Assembly	1	
2	39 1680 04	Bolt	3	




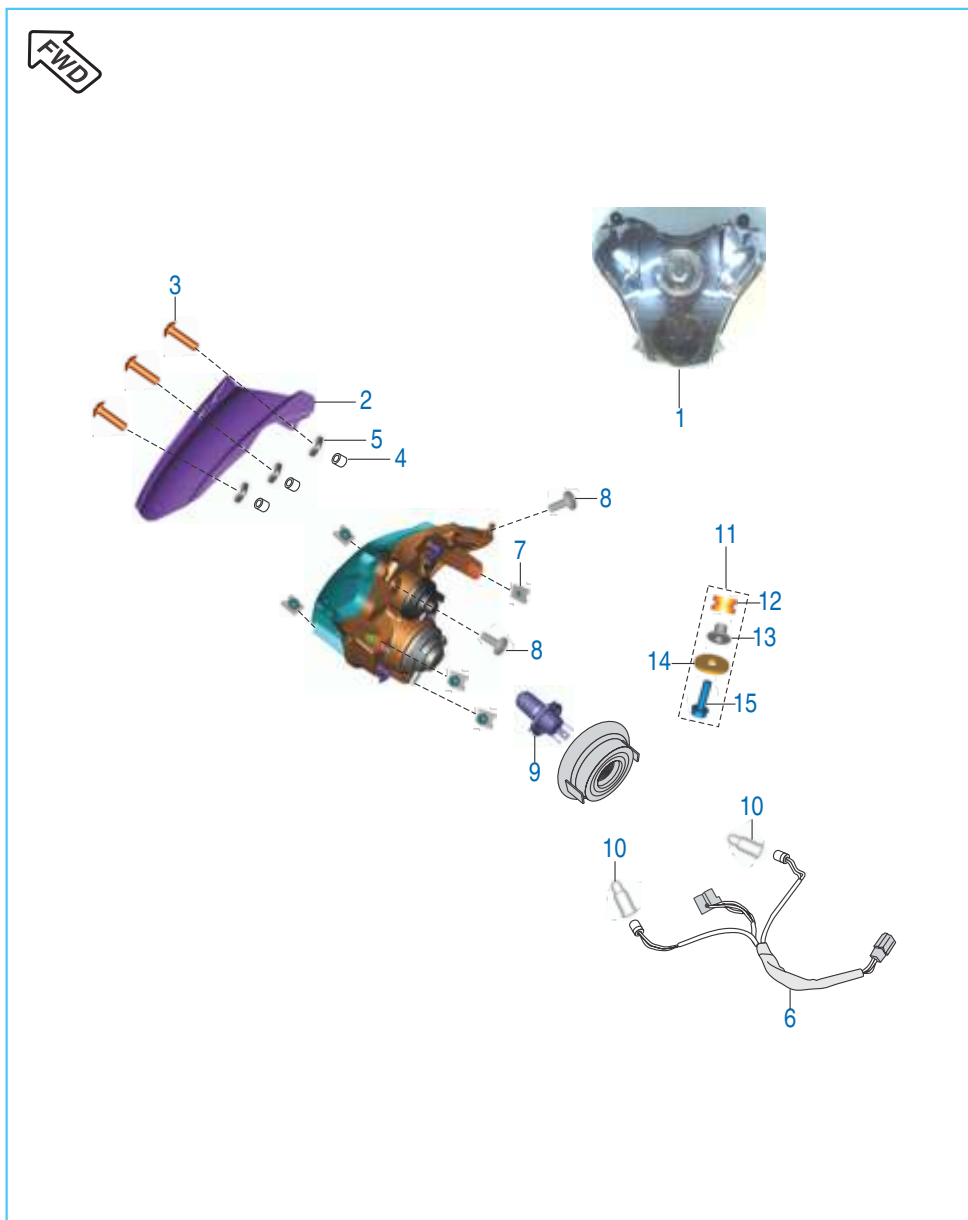Head Lamp Assembly




No.	Part No.	Description	Qty.	Remarks
1	DK 2011 19	Head Lamp Assly. without bulb	1	
2	DK 1610 69	Wind Shield	1	
3	DK 1611 51	Screw Cross Recessed	6	
4	DL 1810 10	Well Nut	6	
5	39 2141 24	Washer Nylon	6	
6	DK 2011 17	Wiring harness for HL	1	
7	DJ 1810 65	Clip Nut	5	
8	DG 1611 21	Screw	2	
9	DK 2010 43	Headlight bulb	2	
10	DJ 2010 72	Lamp - Position 12V / 5W	2	
11	36 DK00 21	Kit hardware mtg. bracket	1	Refer Kit Details
12	DJ 1810 64	Grommet Fairing Mounting	3	
13	DJ 1810 29	Collar Fairing Mounting	3	
14	39 0211 11	Washer Plain	3	
15	39 1950 04	Bolt - Flanged - Small	3	

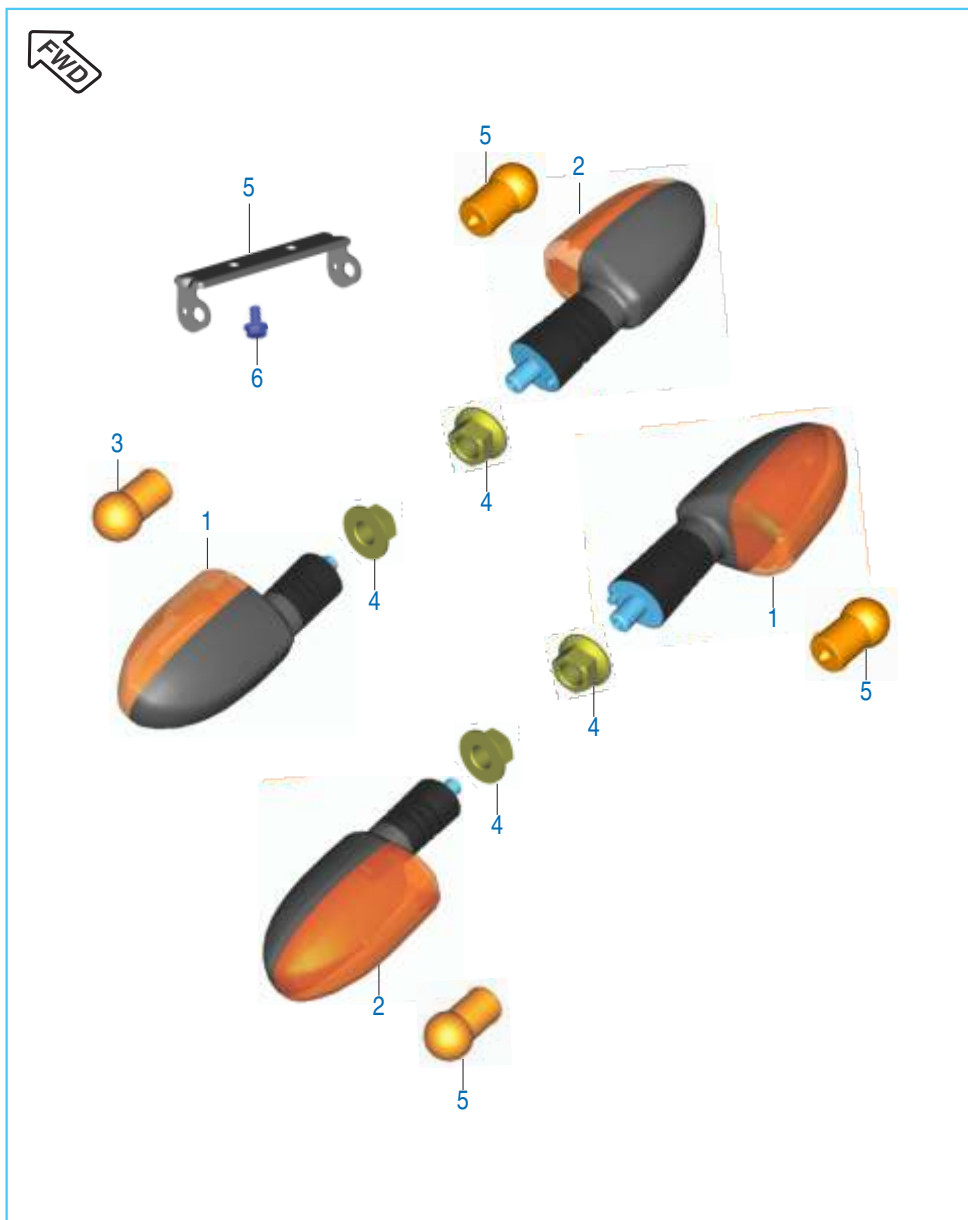Indicator Light Assembly




No.	Part No.	Description	Qty.	Remarks
1	DJ 2012 07	Blinker RR RH With 2P Coupler	2	
2	DJ 2012 06	Blinker RR LH With 2P Coupler	2	
3	GH 2010 12	Lamp	4	
4	39 1225 15	Hex Nut Flange	4	
5	DK 1611 64	Indicator Mounting Bracket	1	
6	39 1680 04	Bolt	2	

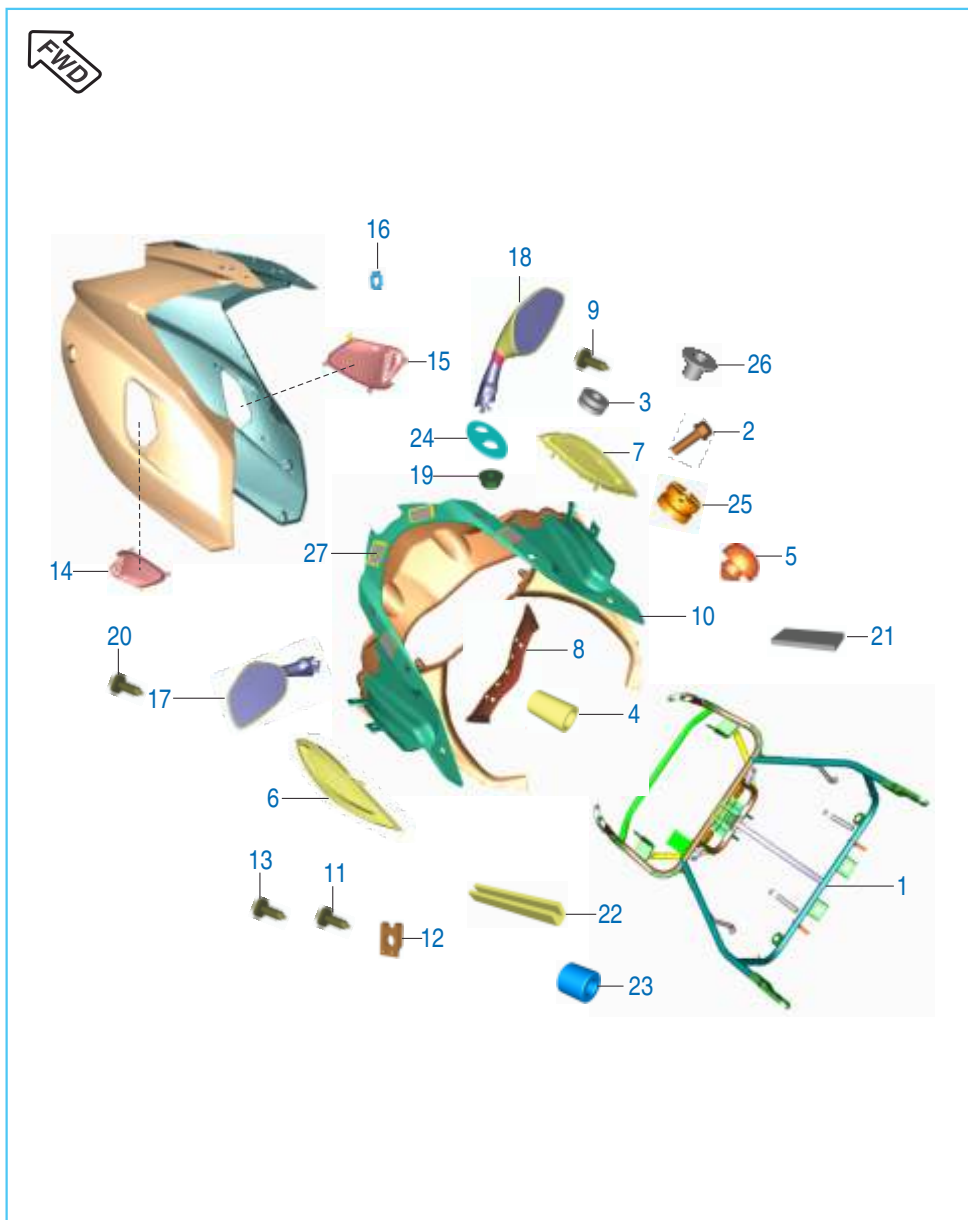Fairing & Mounting




No.	Part No.	Description	Qty.	Remarks
1	DK 1613 17	Fairing Structure Assembly	1	
2	39 1957 04	Flange bolt	2	
3	DK 1610 81	Rubber grommet Fairing mtg.	4	
4	DK 1610 82	Sleeve Fairing	2	
5	DK 1611 26	Damper for fairing	4	
6	DK 1610 70	Fairing Air Intake LH	1	
7	DK 1610 71	Fairing Air Intake RH	1	
8	DK 1610 72	Fairing Under Cover	1	
9	59 0200 01	Self Tapping Screw	4	
10	DK 1610 73	Fairing Back Cover	1	
11	39 1778 02	Self Tapping Screw For Speedo	4	
12	DJ 1612 29	Clip nut	4	
13	39 1907 01	Screw	4	
14	DK 1610 76	Fairing Mesh LH	1	
15	DK 1610 77	Fairing Mesh RH	1	
16	39 1918 24	Washer Nylon	6	
17	DK 2210 14	Mirror Assembly LH	1	
18	DK 2210 15	Mirror Assembly RH	1	
19	DK 2210 01	Nut for mirror	4	
20	DK 1611 51	Screw Cross Recessed	6	
21	DK 1612 10	Tape	8	
22	DK 1810 74	Beading	1	
23	DK 1611 52	Bush Nylon for Fairing	2	
24	DK 1611 25	Rubber For Mirror	2	
25	DJ 1810 64	Grommet Fairing Mounting	5	
26	DJ 1810 29	Collar Fairing Mounting	5	
27	DK 1612 09	TAPE I	4	
28	JN 1810 31	Foam Fairing	4	

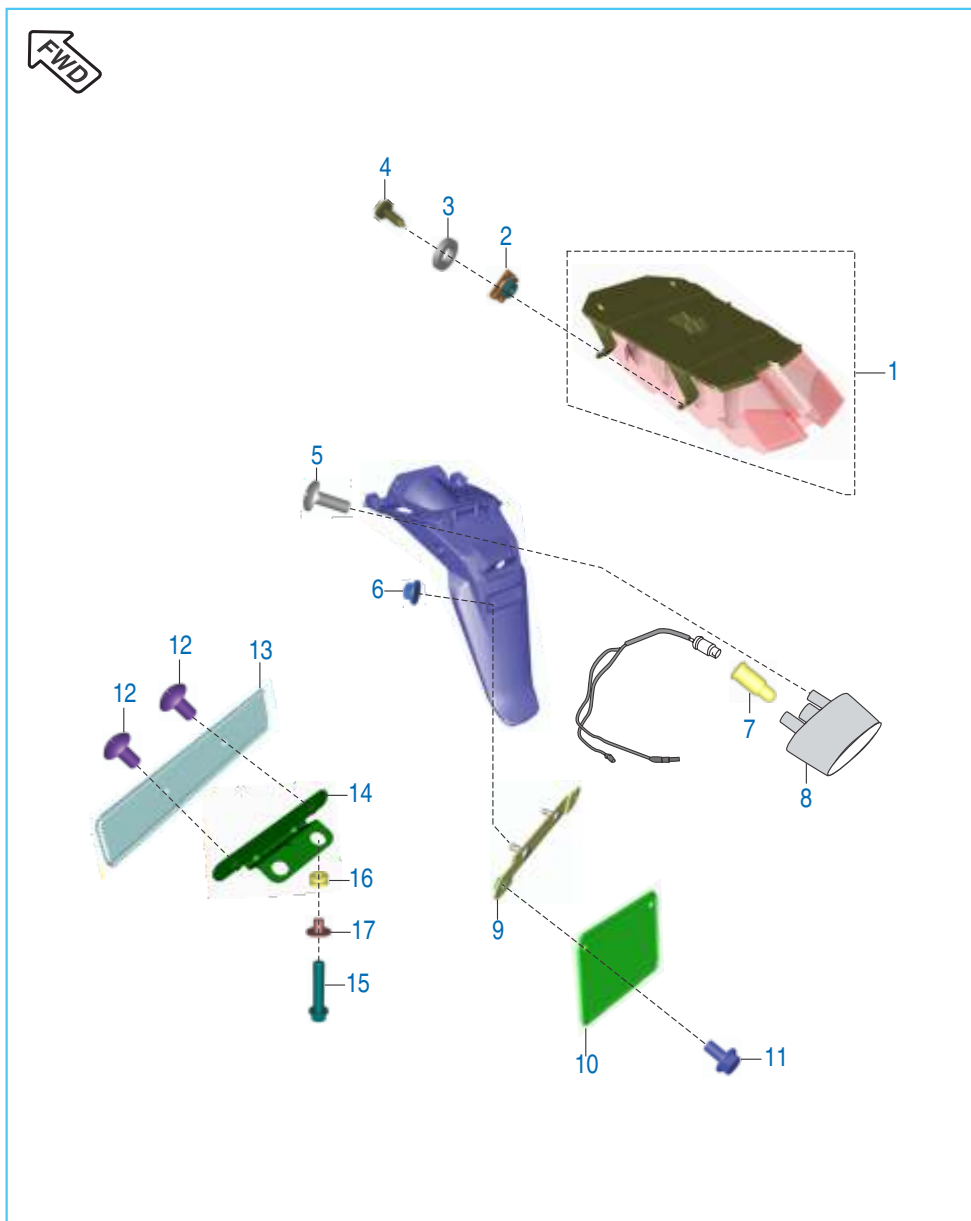


Tail Lamp Assembly & Front / Rear Number Plate

No.	Part No.	Description	Qty.	Remarks
1	DK 2010 03	Tail Light With Lamp	1	
2	DK 1611 53	Clip Nut	4	
3	39 2451 11	Plain Washer	4	
4	39 2592 01	Screw Pan Cross M4	4	
5	39 1907 01	Truss Screw	2	
6	39 1972 15	Nut Flange	2	
7	DJ 2010 72	Lamp 12V-5W	1	
8	JW 4010 11	Number Plate Illumination	1	
9	DJ 1610 72	Rear Number Plate Bracket	1	
10	36 PD00 56	Kit Rear Number Plate (Bolts Included)	1	
11	39 1680 04	Hex Flanged Bolt	2	For Front No. Plate
12	39 1783 01	Truss Screw	2	
13	36 DH40 96	Kit Front Number Plate (Screw Included)	1	
14	DS 1810 26	Number Plate Mounting Bracket	1	
15	39 1062 04	Bolt - Flanged - Small	2	
16	DH 1612 93	Grommet For Number Plate Mounting	2	
17	DJ 1810 83	Sleeve	2	

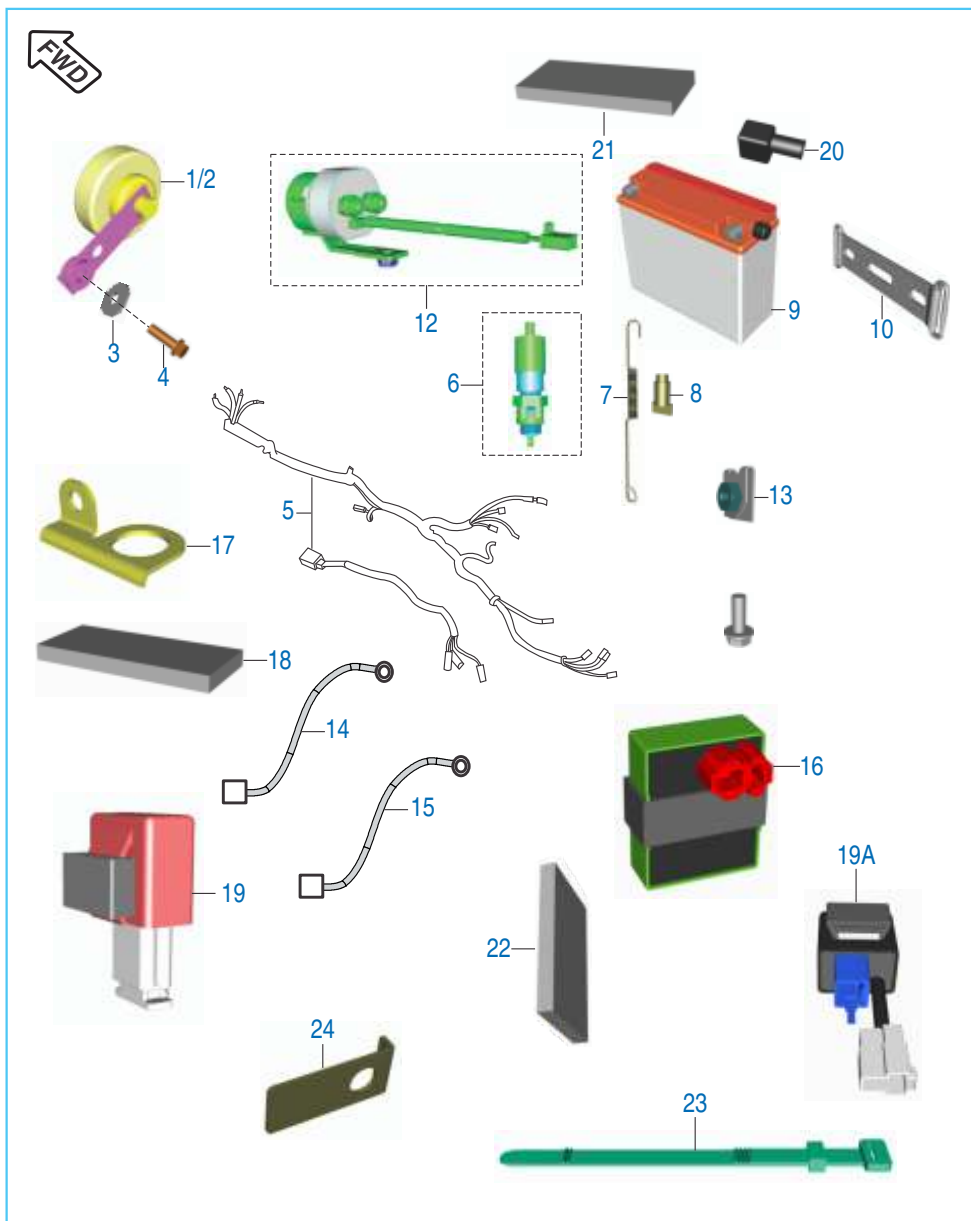

Electrical Equipments

No.	Part No.	Description	Qty.	Remarks
1	DK 2010 37	Horn LH stay	1	AHO Model
2	DK 2010 38	Horn RH stay	1	
3	39 1507 11	Plain Washer	1	
4	39 1956 04	Flange Bolt	1	
5	DK 2011 53	Wiring Harness	1	
5A	DK 2011 59	Wiring Harness	1	
6	31 2010 79	Rear Brake Switch	1	
7	DK 1910 14	Spring Brake Switch	1	
8	DH 2010 19	Grommet Rear Brake Switch	1	
9	DJ 2012 40	Battery (12V-9A) MF Wet Charged	1	
10	DJ 1612 47	Band Battery	1	AHO Model
11	39 1551 04	Flange Bolt	1	
12	DK 2010 78	Starter Relay / Damper	1	
13	DJ 1810 65	Clip Nut	4	
14	JC 2010 27	Cable Assly. (St. Motor to St. Relay)	1	
15	DK 2010 28	Cable Assembly (Battery to Earth)	1	
16	DK 1110 81	CDI Non TPS Assembly	1	
17	DK 1611 63	Bracket Rear Brake Switch	1	
18	JG 4018 08	Foam Battery Bracket 35 x 15 x 3	3	
19	DS 2010 25	Assembly DC Flasher (SS)	1	
19A	DT 4020 06	Light Control Module	1	
20	AB 2010 17	Cap (Battery)	1	
21	DJ 1610 06	Pad I Battery Bracket	1	
22	DJ 1610 07	Rubber Pad II Bracket	2	
23	DK 2010 49	Clamp Harness (Strip Clamp)	1	
24	DH 1011 99	Stopper Plate (Wiring Harness)	1	

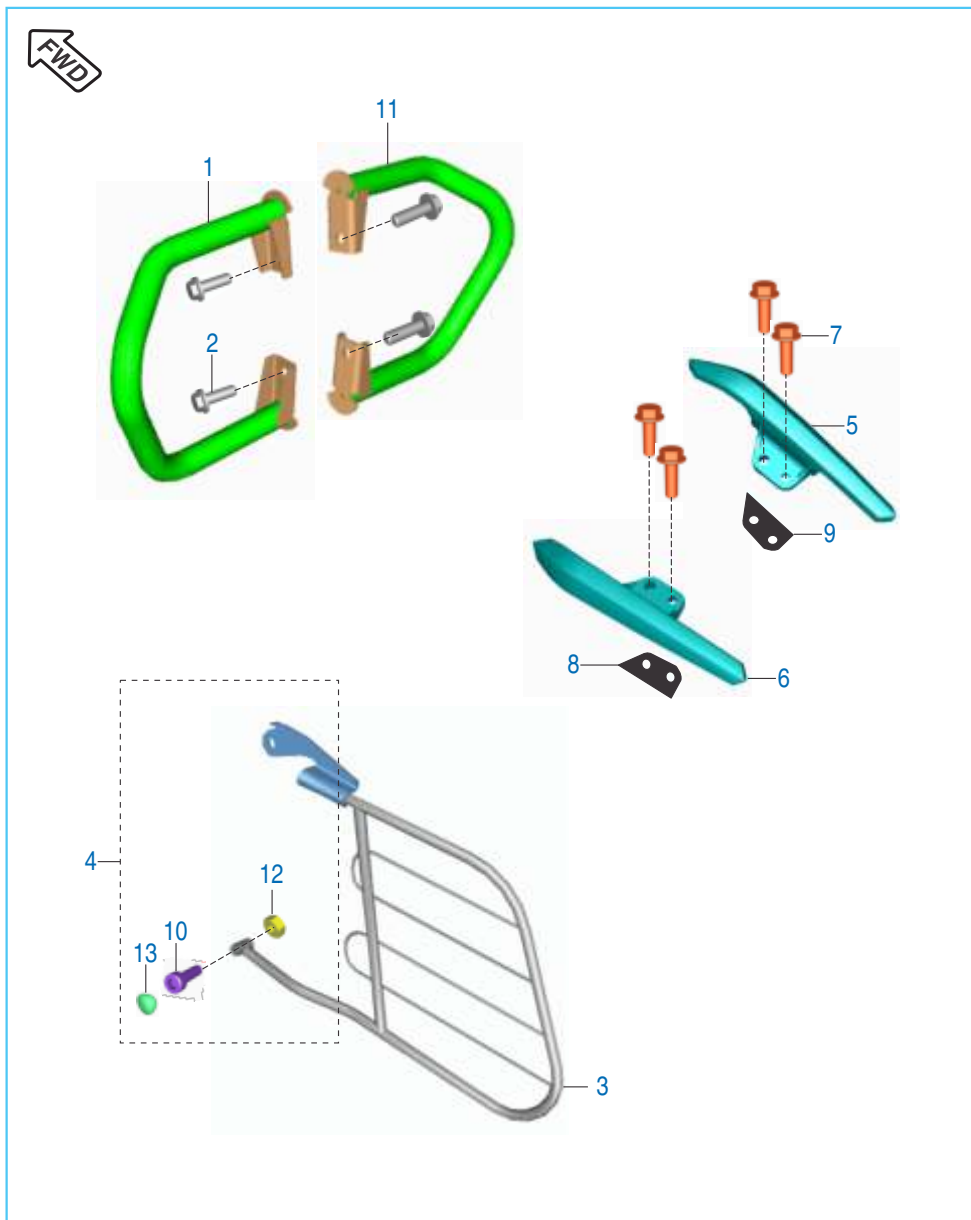

Leg Guards, Saree Guard & Grab Handle

No.	Part No.	Description	Qty.	Remarks
1	DJ 2210 20	Leg Gaurd LH	1	Refer Kit Details
2	KA DA08 14	Bolt Flanged	4	
3	DK 1611 76	Sari Guard Assembly	1	
4	36 DK00 23	Kit Hardware Saree Guard	1	
5	DK 1612 17	Grab handle LH Black	1	
6	DK 1612 18	Grab handle RH Black	1	
7	39 2310 04	Bolt Flange	4	
8	DJ 1610 79	Foam LH For grab	1	
9	DJ 1610 80	Foam RH For grab	1	
10	39 1608 04	Hex Socket Hd Bolt - M10	1	
11	DJ 2210 21	Leg Guard RH	1	
12	39 0296 15	Hexagon Nut - M10	1	
13	DD 2210 03	Plug	1	



1



Tool Kit

No.	Part No.	Description	Qty.	Remarks
1	DJ 2210 19	Tool Kit	1	
*	DJ 2210 14	Screw Driver	1	Not service separately
*	DH 2210 03	Tool Bag	1	Not service separately
*	30 2210 09	Tool bar	1	Not service separately
*	DG 2210 10	Tool wrench	1	Not service separately
2	DK 2210 24	Band Tool Kit	2	

Painted Parts & Decals



No.	Part No.	Description	Qty.	Remarks
1	52 DK07 21	Fuel Tank BS IV EB BLK + 3D Decal	1	
	52 DK07 22	Fuel Tank BS IV Royal Blue + Decal + L	1	
	52 DK08 31	Fuel Tank BS4 Ebony Blk + New Decal	1	From April 17
	52 DK08 57	Fuel Tank Passion Red With Decal	1	From April 17
	52 DK08 32	Fuel Tank Royal Blue + New Decal	1	From April 17
2	52 DJ09 51	Assly Cover Side LH Eb Blk	1	
	52 DJ09 56	Assly Cover Side LH Royal Blue	1	
	52 DH15 27	Side Cover LH Asly Dcl Kh. Eb. Bl	1	From April 17
	52 DH15 99	Side Cover LH Assy Passion Red	1	From April 17
	52 DH15 28	Side Cover LH Assembly Decal Royal Blue	1	From April 17
3	52 DJ09 52	Assly Cover Side RH Eb Blk	1	
	52 DJ09 57	Assly Cover Side RH Royal Blue	1	
	52 DH15 29	Side Cover RH Asly. Wh Dcl Khi Eb. Blk	1	From April 17
	52 DH16 00	Side Cover RH Assy Passion Red	1	From April 17
	52 DH15 30	Side Cover RH With Decal Royal Blue	1	From April 17
4	52 DK06 31	Fairing Ebony Black With Dcl	1	
	52 DK06 62	Fairing Royal Blue + Dcl	1	
	52 DK08 25	Fairing Ebony Black BS4 New Decal	1	From April 17
	52 DK08 56	Fairing With Decal Passion Red	1	From April 17
	52 DK08 27	Fairing Royal Blue New Decal	1	From April 17
5	52 DJ05 65	Front Fender Assly Ebony Black	1	
	56 DK05 7Q	Front Fender Royal Blue	1	
	56 DK05 4R	Painted Fender Front - Passion Red	1	From April 17
6	52 DK06 32	Seat Cowl Ebony Black With Dcl	1	
	52 DK06 63	Seat Cowl Royal Blue + Dcl	1	
	52 DK08 21	Seat Cowl Ebony Black BS4 New Decal	1	From April 17
	52 DK08 55	Seat Cowl Painted With Decal Passion Red	1	From April 17
	52 DK08 23	Seat Cowl Royal Blue New Decal	1	From April 17

Painted Parts & Decals



No.	Part No.	Description	Qty.	Remarks
7	36 DK01 24	Kit Tank Dcl Royal Blue	1	
	36 DK01 21	Kit Tank Dcl Red	1	
	36 DK01 32	Kit Decal Tank Ebony Black	1	From April 17
	36 DK01 43	Kit Decal Tank Passion Red	1	From April 17
	36 DK01 35	Kit Decal Tank Royal Blue	1	From April 17
8	DJ 1614 16	Tank Decal 'Pulsar'	2	
9	DH 0101 20	Decal Wheel LH-Red	2	
	DH 0101 42	Decal Wheel LH-Blue	2	
	DH 0102 09	Decal Wheel LH Silver	2	From April 17
10	DH 0101 21	Decal Wheel RH-Red	2	
	DH 0101 43	Decal Wheel RH-Blue	2	
	DH 0102 10	Decal Wheel RH Silver	2	From April 17
11	36 DK01 22	Kit Fairing Decal Red	1	
	36 DK01 23	Kit Fairing Decal Royal Blue	1	
	36 DK01 31	Kit Decal Fairing Ebony Black	1	From April 17
	36 DK01 42	Kit Decal Fairing Passion Red	1	From April 17
	36 DK01 34	Kit Decal Fairing Royal Blue	1	From April 17
12	36 DJ40 65	Kit LH Side Cover Decal Red	1	
	36 DK01 25	Kit LH Side Cover Decal Royal Blue	1	
	36 DK01 37	Kit Decal Side Cover LH Ebony Black	1	From April 17
	36 DH41 28	Kit Decal Side Cover LH Passion Red	1	From April 17
	36 DK01 39	Kit Decal Side Cover LH Royal Blue	1	From April 17
13	36 DJ40 66	Kit RH Side Cover Decal Red	1	
	36 DK01 26	Kit RH Side Cover Decal Royal Blue	1	
	36 DK01 38	Kit Decal Side Cover RH Ebony Black	1	From April 17
	36 DH41 29	Kit Decal Side Cover RH Passion Red	1	From April 17
	36 DK01 40	Kit Decal Side Cover RH Royal Blue	1	From April 17

Painted Parts & Decals



No.	Part No.	Description	Qty.	Remarks
14	36 DK01 20	Kit Seat Cowl Decal Red	1	
	36 DK01 27	Kit Seat Cowl Royal Blue	1	
	36 DK01 33	Kit Decal Seat Cowl Ebony Black	1	From April 17
	36 DK01 44	Kit Decal Seat Cowl Passion Red	1	From April 17
	36 DK01 36	Kit Decal Seat Cowl Royal Blue	1	From April 17



Front Wheel Direction

Plate No.: 55

Brand ID : 001MC618

Consumable Parts

No.	Part No.	Description	Supply Unit	Application
1	36 0010 61 83 0204 11 83 0203 34	Bajaj Genuine Oil 10W50 Bajaj Genuine Oil 10W30 Bajaj Genuine Oil 20W50 (BGO to be ordered to HPCL)	1.5 Ltr. 1 Ltr. 1 Ltr.	Dominar 400 100cc Models 125cc and above models
2	36 0010 58	Bajaj Coolant Koolex	1 Ltr.	Coolant Top-up/Replace
3	36 DH40 61 83 0203 25	Brake Fluid DOT4 Brake Fluid DOT3	100 ml 100 ml	Disc Brake Top-up/Replace Disc Brake Top-up/Replace
4	36 0010 52	Silicon grease	3 gm	Caliper Pin
5	83 0204 73 83 0203 68	Grease Petamo GHY 441 Grease Molycoat	3 gm 200 gm	Water Pump Seals For Starter Clutch Lubrication
6	36 0010 52	HP Lithon RR Grease	10 gm	Steering Race
7	83 0201 73	Multi Purpose Grease (Local Purchase)	--	Lubrication of Clutch Lever, Brake Lever, Brake Pedal & Side Stand
8	36 0010 55	Chain Lubricant HP Make	1 kg	Non - Sealed Chain Lubrication
9	36 0010 62	Liquid gasket L5910	50 ml	Crankcase Joining
10	36 3140 04	Fork oil	160 ml	Front Fork Top-up/Replace\
11	36 DH40 29	Kit Spray Chain Lub	100 ml	Sealed Drive Chain
12	36 DH40 71	Wonderfill Chain Spray	100 ml	Sealed Drive Chain

13		14		15	
16		17		18	
19		20		21	
22		23		24	



Consumable Parts

No.	Part No.	Description	Supply Unit	Application
13	36 DH40 72	Rust Remover Spray Make - Zorric 88 & Wonder fill easiner	100 ml	For Removing Rust from Components
14	76 0109 36	Loctite Thread locker 243	50 ml	For Screws & Bolts
15	76 0109 37	Loctite retaining compound 638	50 ml	For Screws & Bolts
16	37 0043 52	Touch up paint slate grey	440 ml	Touch up of Frame, Swing Arm & Step Holder
17	37 0043 53	Touch up paint Matte Silk black	440 ml	Touch up of Grab Handle, Handle Bar & Handle Holder
18	36 0010 60	Kibatsu touch up paint	400 cc	Touch up of Cylinder head, Block & Alloy Wheels
19	37 2240 18	Paint Bottle Schwartz Black	--	P-200NS Frame Touch-up
20	75 6802 36 NA	Petroleum Jelly (Local Purchase) Distilled Water (Local Purchase)	-- 1 Ltr.	For Battery Terminals For Battery Level Top-up
21	NA	SAE 90 oil (Local Purchase)	-	
22	62 3050 84	WD40 Spray (Local Purchase)	400 ml	Electrical Contact Cleaning Spray
23	36 0010 56	Carburetor Cleaning Spray		For Cleaning Carburetor
24	37 2540 39	Corrosion Protection Spray Proto quick LTP902 (To be ordered on Vendor)	--	For Preventing vehicle parts from rusting

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
1	36DS1001	Cyl. Head O Ring Kit	39239121 39128321	O Ring (Cover tappet) O ring	2 2
2	DK101327	Valve Kit	DK101052 DK101011	Valve Intake Valve Exhaust	1 1
3	DK101326	Valve Repair Kit	DK101247 DK101108 DK101110 DK101246	Retainer valve spring Spring valve inner Spring valve outer Seat valve spring	2 2 2 2
4	DK101330	Guide Chain Kit	DK101611 DK101059	Guide chain (Tight) Guide Chain (slack)	1 1
5	DK101328	Ring set piston	DK101049 DK101050 DK101051	Ring piston top Ring piston second Ring piston oil	1 1 1
6	36DK0007	Kit centrifugal oil filter	39220011 DH101234 DH101640 DH101066 DH101067 39219908	Washer Gasket centrifugal oil filter Oval screw Join oil delivery Spring oil delivery Pin oil delivery joint	1 1 3 1 1 1
7	36DK0012	Kit bush rear shock absorber	39071411 39071215 39073712	Plain washer Dome cap nut Spring washer	8 2 2
8	36DK0013	Kit hardware pillion	DJ161186 DH161061 30141031 39104011 39078408	Plait side pillion step Pin pillion set "O" ring Plain washer Split pin	2 2 2 2 2

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
9	36DK0040	Chain sprocket kit	DV101048 DK151010 DK151060	Sprocket drive Sprocket Chain	1 1 1
10	36DK0021	Kit hardware mtg. bracket	DJ181029 DJ181036 39021111 39155304	Collar fearing mtg. Grommet fearing structure Plain washer Flange bolt	1 1 1 1
11	36DK0023	Kit hardware saree guard	DH161255 39078912 39008004 59040013 39029615 DH161144 DD221003	Bolt special Washer spring Bolt hexagaon Bolt hex socket Hexagaon nut Cap saree guard Plug	1 1 1 1 1 1 1
12	DK121069	Piston valve assly. Kit		Piston valve assly. Spring (CO) Diaphragm Holder Spring E Spring Ring Jet Needle Ring Washer	1 1 1 1 1 1 1 1 1 1
13	DK121048	Pilot screw kit		O ring Adjuster Spring Washer O ring	1 1 1 1 1

Kit List

BAJAJ
pulsar DTS-i 220 UG, BS IV

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
14	DK161241	Vacuum Adjuster kit		Spring Adjust Screw Packing	1 1 1
15	DK121070	Main Jet kit		Needle jet Main jet Jet holder O ring Pilot Jet	1 1 1 1 1
15	DK121071	Float chamber body kit		O ring Float body assly. Assly. Screw Drain Screw O ring	1 1 4 1 1
16	DK121072	Tap Cap assly. Kit		Diaphragm cover Screw	1 4
17	36DK0119	Cyl Head With Cover	Dk101811 Dj101367	Cylinder Head Cover Cylinder Head	1 1
18	36DK0038	Kit Set Primary Driv & Driv	Dh101628 Dk101561	GEAR PRIMARY DRIVE HOUSING COMP CLUTCH	1 1
19	36PD0022	KIT ASSLY C'CASE RH-A101	JC101029 59050002 39258320 59200027 39260120 39215220	CRANKCASE RH (JC) STUD M10 BEARING - BALL :- 6004 Hn3 BEARING NRB HK 1516 BEARING - BALL :- 61905 BEARING	1 2 1 1 1 1
20	36PD0013	KIT ASSLY C'CASE LH	JC101045 CB101220 59050002 59200006	CRANKCASE LH PLUG - TAPER :- 6 X 7 STUD M10 BEARING - BALL	1 1 2 1

Kit List

BAJAJ
pulsar DTS-i 220 UG, BS IV

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
			Dh101203	PIPE - BREATHER	1
21	36PD0030	KIT FRICTION PLATE-A101	DK101566 PD551419 DK101568	CLUTCH FRICTION DISK DISK C FRICTION CLUTCH CLUTCH FRICTION DISK-B	4 1 1
22	36DK0076	KIT Starter Clutch Assembly	Dk101595 Dk101596 39084914	BODY STARTER CLUTCH SPRING STARTER CLUTCH WASHER - LOCK :- TOOTHED	1 5 3
23	36DV0008	KIT ST. CONE WITH GR	36DV0007 36001052 30101236	KIT STEERING CONE GREASE LETHON RR3-10GM BALL - STEEL	1 1 3

BAJAJ
pulsar *DTS-i* 220 UG, BS IV

121

BAJAJ
***Pulsar* DTS-i 220 UG, BS IV**

122

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
22 1504 51	19	56	36 DK00 69	2	74
30 1010 14	11	26	36 DK00 70	2A	74
30 1410 31	12	56	36 DK00 71	4	74
30 1410 31	22	56	36 DK00 76	1	48
30 1510 82	12	70	36 DK01 19	1	2
30 1611 57	2	60	36 DK01 19	1	6
30 1910 17	10	78	36 DK01 20	14	112
30 2210 09	*	106	36 DK01 21	7	110
31 1011 06	17	26	36 DK01 22	11	110
31 1011 73	4	14	36 DK01 23	11	110
31 1210 06	9	12	36 DK01 24	7	110
31 1610 18	11	82	36 DK01 25	12	110
31 2010 79	6	102	36 DK01 26	13	110
33 1410 08	3	4	36 DK01 27	14	112
36 DH40 48	1	66	36 DK01 31	11	110
36 DH40 96	13	100	36 DK01 32	7	110
36 DH41 28	12	110	36 DK01 33	14	112
36 DH41 29	13	110	36 DK01 34	11	110
36 DJ40 65	12	110	36 DK01 35	7	110
36 DJ40 66	13	110	36 DK01 36	14	112
36 DK00 12	3	54	36 DK01 37	12	110
36 DK00 13	6	56	36 DK01 38	13	110
36 DK00 13	15	56	36 DK01 39	12	110
36 DK00 21	11	94	36 DK01 40	13	110
36 DK00 23	4	104	36 DK01 42	11	110
36 Dk00 38	13	14	36 DK01 43	7	110
36 Dk00 38	3	32	36 DK01 44	14	112
36 DK00 40	4	70	36 DS10 01	10	6
36 DK00 45	11	48	36 DV00 08	5	50
36 DK00 60	9	38	36 JE00 22	5	38
36 DK00 61	15	38	36 PD00 13	1	26
36 DK00 65	9	68	36 PD00 22	2	24
36 DK00 66	10	68	36 PD00 30	6	32
36 DK00 67	14	74	36 PD00 56	10	100
36 DK00 68	16	74	39 0211 11	14	94

Parts Index



Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39 0292 15	8	56	39 1672 04	5	36
39 0296 15	12	104	39 1673 04	10	10
39 0422 15	10	60	39 1674 04	11	18
39 0711 11	7	58	39 1674 04	9	32
39 0714 11	14	54	39 1674 04	2	34
39 0740 11	5	84	39 1677 04	20	26
39 0752 01	7	26	39 1680 04	6	58
39 0784 08	21	56	39 1680 04	10	58
39 0787 08	3	60	39 1680 04	21	78
39 0794 15	9	70	39 1680 04	2	92
39 0798 15	8	58	39 1680 04	6	96
39 0840 01	7	90	39 1680 04	11	100
39 0849 14	24	26	39 1686 06	8	18
39 0849 14	12	48	39 1686 06	4	34
39 0900 12	6	90	39 1714 04	9	56
39 0963 15	18	56	39 1769 04	2	68
39 0972 04	10	48	39 1778 02	2	88
39 0999 06	10	28	39 1778 02	11	98
39 0999 06	4	30	39 1780 01	4	42
39 1041 19	3	28	39 1783 01	12	100
39 1062 04	15	100	39 1902 04	8	86
39 1069 01	7	56	39 1907 01	13	98
39 1075 04	9	2	39 1907 01	5	100
39 1180 11	23	78	39 1918 24	16	98
39 1184 15	9	78	39 1931 20	6	14
39 1225 15	4	96	39 1950 04	15	94
39 1283 21	5	6	39 1955 04	13	46
39 1507 11	3	102	39 1956 04	4	102
39 1551 04	11	102	39 1957 04	2	98
39 1553 04	12	78	39 1970 15	9	40
39 1556 04	6	82	39 1970 15	3	88
39 1608 04	10	104	39 1972 15	6	100
39 1620 11	9	18	39 1990 20	22	28
39 1660 05	2	6	39 2017 19	5	8
39 1672 04	3	18	39 2038 04	17	70

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39 2060 04	13	60	39 2571 04	6	52
39 2132 17	5	12	39 2583 20	6	24
39 2141 24	5	94	39 2592 01	4	100
39 2152 20	5	18	39 2601 20	9	24
39 2158 11	2	16	39 2603 20	8	26
39 2159 11	9	16	39 2606 07	7	20
39 2165 11	3	14	39 2608 01	9	6
39 2166 11	11	16	39 2617 20	11	32
39 2180 06	8	24	39 2639 04	6	20
39 2180 06	11	24	39 2647 15	6	2
39 2181 06	12	6	39 2697 04	8	36
39 2181 06	2	12	39 2758 21	7	84
39 2183 04	2	14	52 DH01 69	1	34
39 2188 19	4	26	52 DH01 77	10	18
39 2190 19	12	26	52 DH15 27	2	108
39 2194 21	6	34	52 DH15 28	2	108
39 2199 08	17	14	52 DH15 29	3	108
39 2200 11	17	32	52 DH15 30	3	108
39 2203 07	8	14	52 DH15 99	2	108
39 2310 04	10	52	52 DH16 00	3	108
39 2310 04	3	72	52 DJ05 65	5	108
39 2310 04	7	104	52 DJ09 51	2	108
39 2311 04	14	52	52 DJ09 52	3	108
39 2312 04	4	52	52 DJ09 56	2	108
39 2366 15	16	54	52 DJ09 57	3	108
39 2391 21	3	2	52 DK06 31	4	108
39 2424 11	3	82	52 DK06 32	6	108
39 2427 04	19	78	52 DK06 62	4	108
39 2440 11	9	8	52 DK06 63	6	108
39 2443 11	17	28	52 DK06 88	1	28
39 2448 11	23	26	52 DK06 91	1	30
39 2451 11	3	100	52 DK07 21	1	108
39 2453 04	6	22	52 DK07 22	1	108
39 2481 04	5	72	52 DK08 21	6	108
39 2557 17	7	18	52 DK08 23	6	108

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
52 DK08 25	4	108	AA 1410 48	16	42
52 DK08 27	4	108	AB 2010 17	20	102
52 DK08 31	1	108	AP 1010 43	8	30
52 DK08 32	1	108	AP 1210 64	5	42
52 DK08 55	6	108	BA 1220 03	10	84
52 DK08 56	4	108	CS 1011 28	1	10
52 DK08 57	1	108	DD 1010 62	11	10
56 DJ3X 1Y	1	56	DD 1110 12	9	46
56 DJ3Y 1Y	2	56	DD 1210 07	10	12
56 DJ4E 1Y	13	48	DD 1412 27	4	84
56 DK05 4R	5	108	DD 2210 03	13	104
56 DK05 7Q	5	108	DE 1510 37	6	68
59 0200 01	9	98	DE 1510 43	7	68
59 0400 05	33	80	DE 1510 46	4	68
59 0400 17	13	52	DE 1510 46	10	74
59 0400 23	8	2	DE 1510 47	5	68
59 0400 40	3	58	DE 1510 47	11	74
59 0400 41	5	52	DE 1510 48	3	68
59 0400 43	8	52	DE 1910 10	5	66
59 0500 02	3	24	DE 1910 10	8	72
59 0500 02	2	26	DE 1910 27	8	68
59 2000 06	9	26	DE 1910 28	14	66
59 2000 07	21	26	DE 1910 29	13	66
59 2000 07	9	48	DE 1910 30	10	66
59 2000 07	17	48	DE 1910 33	6	66
59 2000 27	7	24	DE 1910 36	15	66
59 2000 28	13	18	DF 1611 02	9	60
59 2000 28	10	26	DG 1010 29	4	8
59 2000 29	14	18	DG 1013 39	3	76
59 2100 06	5	26	DG 1014 18	7	28
59 2100 19	5	90	DG 1014 18	12	30
AA 1014 37	24	16	DG 1014 98	11	2
AA 1014 37	4	24	DG 1210 02	15	42
AA 1018 83	19	28	DG 1510 05	9	64
AA 1210 45	7	6	DG 1510 07	10	64

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DG 1510 08	11	64	DH 1011 74	10	8
DG 1510 08	21	70	DH 1011 95	10	14
DG 1611 21	8	94	DH 1011 97	2	28
DG 1710 18	5	54	DH 1011 99	24	102
DG 1710 19	7	54	DH 1012 03	13	26
DG 1710 22	13	54	DH 1012 35	5	16
DG 1710 34	10	54	DH 1012 35	25	16
DG 1710 38	2	54	DH 1012 72	10	2
DG 1810 03	28	80	DH 1012 75	2	32
DG 1810 04	29	80	DH 1012 92	10	30
DG 1810 05	30	80	DH 1012 93	6	30
DG 1810 08	4	78	DH 1012 94	11	30
DG 2210 10	*	106	DH 1012 95	8	8
DG161121	2	82	DH 1013 19	18	16
DH 0101 20	9	110	DH 1013 55	12	14
DH 0101 21	10	110	DH 1013 73	12	18
DH 0101 42	9	110	DH 1013 81	3	46
DH 0101 43	10	110	DH 1013 85	27	26
DH 0102 09	9	110	DH 1013 85	5	48
DH 0102 10	10	110	DH 1013 86	15	46
DH 1010 66	15	14	DH 1013 88	13	30
DH 1010 67	16	14	DH 1013 89	14	48
DH 1010 72	2	18	DH 1013 92	8	10
DH 1010 79	4	16	DH 1013 93	7	22
DH 1010 79	13	16	DH 1013 94	10	22
DH 1010 84	8	16	DH 1014 12	5	10
DH 1011 11	15	16	DH 1014 14	7	12
DH 1011 41	4	28	DH 1014 24	6	18
DH 1011 42	5	28	DH 1014 87	10	24
DH 1011 44	3	22	DH 1014 93	4	20
DH 1011 46	3	20	DH 1014 96	9	20
DH 1011 52	21	28	DH 1015 08	4	6
DH 1011 54	12	28	DH 1015 09	5	22
DH 1011 63	16	48	DH 1015 44	16	28
DH 1011 72	7	48	DH 1015 81	4	48

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DH 1016 07	3	40	DH 1611 33	8	82
DH 1016 39	25	26	DH 1611 57	10	56
DH 1016 48	15	32	DH 1611 58	7	82
DH 1016 61	16	26	DH 1611 89	2	52
DH 1017 05	1	22	DH 1611 90	3	52
DH 1017 14	2	22	DH 1612 33	9	86
DH 1017 19	14	26	DH 1612 39	5	60
DH 1018 96	5	24	DH 1612 40	8	60
DH 1021 25	6	10	DH 1612 73	7	52
DH 1021 51	9	14	DH 1612 93	16	100
DH 1021 53	11	14	DH 1614 16	3	42
DH 1021 74	7	4	DH 1710 19	8	54
DH 1021 80	9	4	DH 1710 19	12	64
DH 1021 89	8	20	DH 1710 19	22	70
DH 1022 01	5	2	DH 1910 07	13	78
DH 1110 12	8	6	DH 1910 08	15	78
DH 1110 13	5	46	DH 1910 14	14	78
DH 1110 15	8	46	DH 1910 17	16	78
DH 1110 16	14	46	DH 2010 19	8	102
DH 1210 10	3	34	DH 2010 65	11	60
DH 1210 11	14	28	DH 2210 03	*	106
DH 1210 12	15	28	DJ 1010 63	23	16
DH 1210 35	5	34	DJ 1010 64	4	40
DH 1210 63	12	38	DJ 1011 34	4	18
DH 1410 23	4	82	DJ 1012 17	2	2
DH 1410 24	11	84	DJ 1017 10	8	4
DH 1410 73	10	44	DJ 1210 59	10	38
DH 1410 74	12	44	DJ 1210 82	8	42
DH 1610 46	4	86	DJ 1210 89	5	4
DH 1610 53	17	56	DJ 1410 08	12	82
DH 1610 56	20	56	DJ 1410 56	3	84
DH 1610 66	7	60	DJ 1410 70	14	44
DH 1611 00	11	56	DJ 1410 72	6	44
DH 1611 12	2	50	DJ 1410 73	3	44
DH 1611 21	4	60	DJ 1410 74	7	44

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DJ 1410 77	16	44	DJ 2012 40	9	102
DJ 1410 78	9	84	DJ 2210 14	*	106
DJ 1610 06	21	102	DJ 2210 19	1	106
DJ 1610 07	22	102	DJ 2210 20	1	104
DJ 1610 69	1	58	DJ 2210 21	11	104
DJ 1610 72	9	100	DK 1010 03	3	6
DJ 1610 79	8	104	DK 1010 59	12	10
DJ 1610 80	9	104	DK 1010 63	1	12
DJ 1611 22	5	56	DK 1010 64	7	10
DJ 1611 26	14	56	DK 1010 65	1	14
DJ 1611 27	16	56	DK 1010 67	14	14
DJ 1611 28	3	56	DK 1010 72	13	32
DJ 1611 29	4	56	DK 1010 92	3	12
DJ 1612 28	7	30	DK 1010 94	3	26
DJ 1612 29	12	98	DK 1010 97	6	26
DJ 1612 47	10	102	DK 1011 02	6	16
DJ 1614 16	8	110	DK 1011 03	3	16
DJ 1710 44	11	54	DK 1011 05	12	16
DJ 1810 29	13	94	DK 1011 26	14	32
DJ 1810 29	26	98	DK 1011 35	10	20
DJ 1810 64	12	94	DK 1011 44	10	16
DJ 1810 64	25	98	DK 1011 59	1	20
DJ 1810 65	7	94	DK 1011 60	2	20
DJ 1810 65	13	102	DK 1011 76	6	48
DJ 1810 83	17	100	DK 1011 77	11	22
DJ 1910 28	7	66	DK 1011 80	12	22
DJ 1910 29	8	66	DK 1011 83	4	22
DJ 1910 30	9	66	DK 1011 84	2	76
DJ 1910 55	8	78	DK 1011 85	5	76
DJ 1910 57	3	66	DK 1011 86	4	76
DJ 2010 72	10	94	DK 1011 87	6	76
DJ 2010 72	7	100	DK 1012 25	2	36
DJ 2011 00	12	66	DK 1012 37	10	36
DJ 2012 06	2	96	DK 1012 45	20	16
DJ 2012 07	1	96	DK 1012 48	7	14

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DK 1012 51	6	28	DK 1016 35	13	36
DK 1012 52	11	28	DK 1016 36	16	32
DK 1012 53	9	22	DK 1016 98	8	40
DK 1012 77	18	36	DK 1017 10	5	40
DK 1012 78	20	36	DK 1017 17	16	16
DK 1012 79	16	36	DK 1017 18	14	16
DK 1013 05	7	40	DK 1017 19	19	16
DK 1013 26	6	8	DK 1017 20	17	16
DK 1013 27	7	8	DK 1017 25	8	22
DK 1013 28	4	12	DK 1017 32	5	20
DK 1013 30	3	10	DK 1017 38	18	28
DK 1013 40	3	36	DK 1017 48	1	8
DK 1013 52	21	16	DK 1017 51	2	8
DK 1013 66	9	36	DK 1017 55	3	8
DK 1013 80	18	26	56 DJ3Z 1Y	5	30
DK 1014 16	1	18	DK 1018 15	1	24
DK 1014 71	1	16	DK 1018 38	1	4
DK 1014 80	13	28	DK 1018 53	2	40
DK 1015 03	11	6	DK 1110 28	4	46
DK 1015 65	7	32	DK 1110 40	6	42
DK 1015 69	5	32	DK 1110 79	1	46
DK 1015 70	18	32	DK 1110 81	10	46
DK 1015 71	19	32	DK 1110 81	16	102
DK 1015 73	12	32	DK 1210 05	19	42
DK 1015 74	10	32	DK 1210 09	2	42
DK 1015 77	26	26	DK 1210 11	20	42
DK 1015 92	8	12	DK 1210 15	7	42
DK 1015 96	15	48	DK 1210 22	9	42
DK 1016 05	2	48	DK 1210 39	10	42
DK 1016 14	2	10	DK 1210 41	3	38
DK 1016 25	6	12	DK 1210 44	6	38
DK 1016 30	6	36	DK 1210 45	7	38
DK 1016 31	7	36	DK 1210 47	13	38
DK 1016 32	7	16	DK 1210 48	14	38
DK 1016 34	1	36	DK 1210 56	4	38

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DK 1210 63	11	38	DK 1510 82	20	70
DK 1210 69	2	38	DK 1510 83	8	74
DK 1210 70	8	38	DK 1510 84	9	72
DK 1210 86	1	42	DK 1510 85	12	74
DK 1210 91	6	4	DK 1510 86	4	72
DK 1210 92	1	38	DK 1510 88	13	74
DK 1410 15	12	84	DK 1510 90	15	74
DK 1410 17	5	82	DK 1510 95	2	64
DK 1410 57	19	44	DK 1510 96	7	64
DK 1510 09	2	70	DK 1510 97	16	70
DK 1510 12	6	70	DK 1610 69	2	94
DK 1510 15	11	70	DK 1610 70	6	98
DK 1510 22	14	70	DK 1610 71	7	98
DK 1510 26	5	62	DK 1610 72	8	98
DK 1510 28	6	64	DK 1610 73	9	88
DK 1510 31	1	74	DK 1610 73	10	98
DK 1510 33	1	72	DK 1610 76	14	98
DK 1510 34	2	72	DK 1610 77	15	98
DK 1510 39	2	62	DK 1610 81	4	36
DK 1510 40	4	62	DK 1610 81	6	88
DK 1510 41	9	74	DK 1610 81	3	98
DK 1510 42	5	74	DK 1610 82	4	98
DK 1510 45	10	72	DK 1610 85	9	58
DK 1510 50	3	62	DK 1610 96	1	52
DK 1510 50	1	70	DK 1610 98	2	58
DK 1510 54	1	68	DK 1611 22	1	60
DK 1510 57	2	66	DK 1611 25	24	98
DK 1510 62	11	66	DK 1611 26	5	98
DK 1510 63	6	72	DK 1611 51	3	94
DK 1510 69	4	66	DK 1611 51	20	98
DK 1510 69	7	72	DK 1611 52	23	98
DK 1510 76	6	74	DK 1611 53	2	100
DK 1510 77	7	74	DK 1611 61	9	52
DK 1510 78	3	74	DK 1611 63	17	102
DK 1510 81	19	70	DK 1611 64	5	96

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DK 1611 71	9	82	DK 1810 19	20	80
DK 1611 72	10	82	DK 1810 20	21	80
DK 1611 76	3	104	DK 1810 21	22	80
DK 1611 86	14	36	DK 1810 22	23	80
DK 1611 87	15	36	DK 1810 23	24	80
DK 1611 88	11	36	DK 1810 24	25	80
DK 1611 89	12	36	DK 1810 25	26	80
DK 1612 09	27	98	DK 1810 28	27	80
DK 1612 10	21	98	DK 1810 31	22	78
DK 1612 17	5	104	DK 1810 34	28	78
DK 1612 18	6	104	DK 1810 36	25	78
DK 1612 50	1	92	DK 1810 40	32	80
DK 1613 17	1	98	DK 1810 43	18	78
DK 1613 23	5	88	DK 1810 46	26	78
DK 1613 24	4	88	DK 1810 47	27	78
DK 1613 38	5	58	DK 1810 50	6	50
DK 1614 09	1	50	DK 1810 51	7	50
DK 1614 22	10	86	DK 1810 52	6	66
DK 1614 23	11	52	DK 1810 56	4	80
DK 1614 24	12	52	DK 1810 57	5	80
DK 1710 03	9	54	56 DK32 Y9	3	78
DK 1710 06	6	54	56 DK31 Y9	2	78
DK 1710 11	4	54	56 DK33 Y9	1	78
DK 1710 14	1	54	56 DK33 Y9	31	80
DK 1810 06	7	80	DK 1810 68	2	80
DK 1810 07	8	80	DK 1810 69	3	80
DK 1810 08	9	80	DK 1810 70	6	80
DK 1810 09	10	80	DK 1810 71	17	80
DK 1810 10	11	80	DK 1810 72	1	80
DK 1810 11	12	80	DK 1810 73	15	80
DK 1810 12	13	80	DK 1810 74	22	98
DK 1810 13	14	80	DK 1810 75	3	50
DK 1810 15	16	80	DK 1810 79	24	78
DK 1810 17	18	80	DK 1810 99	1	84
DK 1810 18	19	80	DK 1810 99	1	84

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DK 1910 12	1	76	DL 1810 10	4	94
DK 1910 13	7	76	DS 1010 71	20	28
DK 1910 14	7	102	DS 1010 84	7	2
DK 1910 23	7	78	DS 1011 54	5	14
DK 1910 39	1	88	DS 1011 66	4	2
DK 2010 03	1	100	DS 1012 15	8	28
DK 2010 15	20	78	DS 1012 34	15	26
DK 2010 28	22	26	DS 1013 53	9	28
DK 2010 28	15	102	DS 1013 53	3	30
DK 2010 37	1	102	DS 1013 53	17	46
DK 2010 38	2	102	DS 1211 16	12	42
DK 2010 43	9	94	DS 1211 17	14	42
DK 2010 49	23	102	DS 1211 26	13	42
DK 2010 65	6	84	DS 1510 73	10	70
DK 2010 78	12	102	DS 1510 74	3	70
DK 2010 83	11	78	DS 1510 74	5	70
DK 2010 98	3	64	DS 1611 25	4	58
DK 2010 98	3	90	DS 1612 24	11	42
DK 2011 17	6	94	DS 1810 26	14	100
DK 2011 19	1	94	DS 1910 52	17	78
DK 2011 39	11	46	DS 2010 25	19	102
DK 2011 53	5	102	DS 2110 04	7	86
DK 2011 59	5A	102	DT 4014 03	5	78
DK 2011 60	11A	46	DT 4014 04	6	78
DK 2110 07	3	86	DT 4014 07	6A	78
DK 2110 08	5	86	DT 4020 06	19A	102
DK 2110 09	2	86	DV 1010 42	2	30
DK 2110 12	1	86	DV 1010 48	22	16
DK 2110 14	6	86	GH 2010 12	3	96
DK 2210 01	19	98	GL 1710 36	5	44
DK 2210 14	29	78	JB 4022 02	17	36
DK 2210 14	17	98	JC 1010 34	9	10
DK 2210 15	30	78	JC 1011 12	3	48
DK 2210 15	18	98	JC 1011 15	8	48
DK 2210 24	2	106	JC 1110 07	16	46

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JC 1110 22	6	46	KA CA05 16	2	84
JC 1110 23	7	46	KA DA06 30	12	46
JC 1110 28	2	46	KA DA08 14	2	104
JC 1200 23	6	6	KA EG06 14	10	4
JC 1510 13	1	62	KB BA05 16	18	42
JC 1510 13	1	64	KB BA05 25	17	42
JC 1510 16	8	70	KC GA05 05	8	84
JC 1510 17	13	64	KD AB08 16	15	54
JC 1610 17	6	60	KH AA32 25	13	56
JC 1910 04	2	90	KJ AB10 19	19	26
JC 1910 19	1	90	KP AC60 05	7	70
JC 2010 27	14	102	KP BC62 02	5	64
JC 2010 39	12	60	KP BC62 02	13	70
JC 2010 46	4	90	KP BC63 02	18	70
JC 2010 50	4	64	LA D000 77	7	88
JE 5412 12	9	30	LA E000 52	6	40
JE 5810 39	11	4	LJ B000 01	18	14
JE 5814 16	13	6	PD 1318 03	8	64
JG 1312 19	15	70	PD 1510 06	4	50
JG 1710 29	4	44	PD 1716 16	18	44
JG 1710 86	15	44	PD 5112 29	4	10
JG 4018 08	18	102	PD 5514 18	1	32
JH 1710 48	17	44	PD 5514 20	8	32
JH 1716 02	11	44	PD 5514 21	4	32
JL 5810 65	4	4	YD H190 02	8	88
JL 5810 66	2	4	YD K060 02	1	40
JM 1710 04	12	54			
JN 1810 31	28	98			
JW 1710 07	1	82			
JW 4010 11	8	100			
JY 1710 69	13	44			
JY 1710 70	2	44			
JY 1710 77	1	44			
JY 1710 90	8	44			
JY 1718 25	9	44			